Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > DELSEY /
- > DELSEY PARIS Flexible Combination Lock User Manual

DELSEY 003940311

DELSEY PARIS Flexible Combination Lock User Manual

Model: 003940311

1. INTRODUCTION

Thank you for choosing the DELSEY PARIS Flexible Combination Lock. This manual provides essential instructions for setting up, operating, and maintaining your lock to ensure secure and hassle-free travel. Please read this manual carefully before first use and retain it for future reference.

2. SAFETY INFORMATION

- This lock is designed for luggage security and is not intended for high-security applications.
- · Do not force the lock mechanism.
- · Keep out of reach of small children.
- Regularly check the lock for any signs of damage or wear.

3. PRODUCT OVERVIEW

The DELSEY PARIS Flexible Combination Lock is a compact and lightweight accessory designed to secure your luggage. It features a resettable 3-digit combination mechanism and a flexible cable shackle for versatile use.



Image 1: DELSEY PARIS Flexible Combination Lock. This image displays the black flexible cable lock with its three-digit combination dials and the release button, coiled for storage.

Components:

- Combination Dials: Three rotating dials used to set and enter your personal code.
- Release Button: Used to open the lock once the correct combination is entered.
- Flexible Cable Shackle: The flexible cable that secures your luggage zippers or handles.
- Reset Mechanism: A small button or twist mechanism used to change the combination.

4. SETUP: SETTING YOUR PERSONAL COMBINATION

Your lock is factory preset to **0-0-0**. To set your own combination:

- 1. Ensure the lock is open and set to the default combination (0-0-0).
- 2. Locate the reset mechanism. This is typically a small button on the side or bottom of the lock, or a shackle twist mechanism. (Note: Specific reset method may vary slightly; refer to any small diagram included with your physical product if available. A common method involves pressing a button with a pen tip or twisting the shackle 90-180 degrees while open.)
- 3. While holding the reset mechanism (or with the shackle in the reset position), set your desired 3-digit combination by rotating the dials. Choose a memorable number.

- 4. Release the reset mechanism (or return the shackle to its normal position). Your new combination is now set.
- 5. **Important:** Write down your combination and store it in a safe place. Do not store it inside your luggage.

5. OPERATING INSTRUCTIONS

5.1. Locking Your Luggage

- 1. Align the combination dials to your personal 3-digit code.
- 2. Press the release button to open the lock.
- 3. Thread the flexible cable shackle through the zippers or handles of your luggage.
- 4. Insert the end of the shackle back into the lock body until it clicks securely.
- 5. Scramble the combination dials to secure the lock.

5.2. Unlocking Your Luggage

- 1. Rotate the combination dials to your personal 3-digit code.
- 2. Press the release button. The shackle should spring open.
- 3. Remove the shackle from your luggage.

6. MAINTENANCE

- Clean the lock periodically with a soft, dry cloth.
- · Avoid using abrasive cleaners or solvents, as these can damage the finish or internal mechanism.
- Do not lubricate the lock mechanism unless specifically instructed by the manufacturer.
- · Store the lock in a dry environment when not in use.

7. TROUBLESHOOTING

7.1. Lock Will Not Open with Combination

- **Verify Combination:** Double-check that you are entering the correct 3-digit combination. Ensure each dial is precisely aligned with the indicator marks.
- Reset Attempt: If you suspect the combination was accidentally changed, try to recall any recent changes. There is no master key or universal reset for user-set combinations once forgotten.
- Mechanism Check: Ensure no debris is obstructing the dials or the release button.

7.2. Lock Mechanism Feels Stiff

- Clean Dials: Dust or dirt can accumulate. Clean the dials and surrounding areas with a soft cloth.
- Avoid Force: Do not force the mechanism. If stiffness persists, contact customer support.

8. Specifications

Feature	Detail
Model Number	003940311

Dimensions (L x W x H)	5 x 3 x 2 cm (approximately 50 x 30 x 20 mm)
Weight	40 grams
Material	Zamac, PVC (Polychlorure de vinyle)
Lock Type	3-Digit Combination Lock
Special Feature	Keyless function, Flexible Cable
Recommended Use	Luggage, Travel Bags

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official DELSEY PARIS website. You may also contact your retailer for assistance.

DELSEY PARIS Official Website: www.delsey.com

 
© 2023 DELSEY PARIS. All rights reserved.

Related Documents - 003940311



DELSEY TSA Combination Lock: Setting and Usage Instructions

Comprehensive guide to setting and using your DELSEY TSA combination lock. Includes step-by-step instructions in English and a description of the lock mechanism and Travel Sentry® approval.



Delsey TSA Combination Lock Instructions

Instructions for using and resetting the Delsey TSA combination lock, featuring the TRAVEL SENTRY® APPROVED logo. Includes multilingual guidance.



Delsey TSA Lock Instructions: How to Set and Use Your Combination Lock

Official instructions from Delsey Paris on how to set, use, and change the combination for your TSA-approved luggage lock. Learn how to secure your baggage with Travel Sentry certified locks.

