

## VINABTY RM-ADU005

# VINABTY RM-ADU005 Remote Control Instruction Manual

Replacement Remote for Sony AV Home Theatre Systems

## INTRODUCTION

---

This manual provides instructions for the VINABTY RM-ADU005 replacement remote control. This remote is designed to function as a direct replacement for the original RM-ADU005 remote used with various Sony AV Home Theatre Systems. No programming is required; simply install batteries to begin operation.

### **Compatible Sony AV Systems include:**

- DAV-DZ20, HCD-DZ20
- DAV-DZ230, HCD-DZ230
- DAV-DZ630, HCD-DZ630
- DAV-HDX265, HCD-HDX265
- DAV-DZ231, HCD-DZ231
- DAV-HDZ235, HCD-HDZ235
- DAV-DZ30, HCD-DZ30
- DAV-DZ530, HCD-DZ530
- DAV-HDX665, HCD-HDX665
- DAV-HDX266, HCD-HDX266
- DAV-HDX267W, HCD-HDX267W
- DAV-HDX465, HCD-HDX465
- DAV-HDX466, HCD-HDX466
- SS-CT71, HCD-HDZ235
- SS-WS71, SS-TS72, SS-TS71, SS-WS84, SS-WS75, SS-CT54, SS-TS60

## SETUP

---

### **Battery Installation**

The RM-ADU005 remote control requires two (2) AA batteries for operation. Follow these steps to install

the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Rear view of the RM-ADU005 remote control with the battery cover removed, illustrating the battery insertion points.


Once batteries are installed, the remote is ready for use with your compatible Sony AV Home Theatre System.

## OPERATING INSTRUCTIONS

The VINABTY RM-ADU005 remote control is designed for intuitive use. Point the remote directly at your Sony AV Home Theatre System's receiver to ensure proper signal transmission.





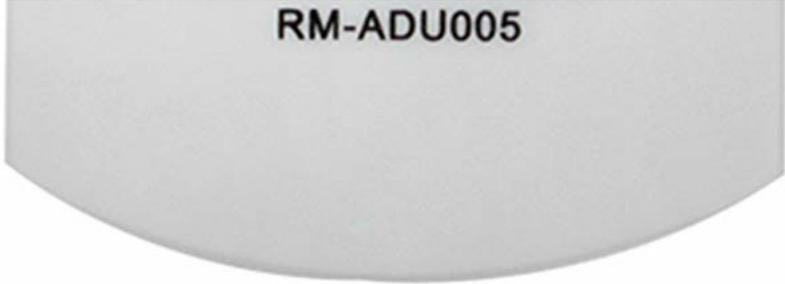

RM-ADU005

Image: Front view of the RM-ADU005 remote control, highlighting the button layout.

## Key Functions Overview

- **Power (I/O):** Turns the AV system and TV on or off.
- **TV Input:** Switches the input source on your television.
- **TV Vol (+/-):** Adjusts the television volume.
- **TV CH (+/-):** Changes television channels.
- **Theatre Sync:** Activates or deactivates the Theatre Sync function (if supported by your system).
- **Display:** Shows on-screen information.
- **Numeric Keypad (0-9, 10/0):** For direct input of track numbers, channels, or other numerical selections.
- **Disc Skip:** Skips tracks or chapters on a disc.
- **Function:** Cycles through various functions of the AV system.
- **Sound Field / Movie/Music / Dynamic Bass / Video Format / Audio / Subtitle** Buttons for specific audio and video settings and preferences.
- **System Menu / DVD Top Menu / DVD Menu / Picture Navi:**Accesses various menu options for the system and DVD playback.
- **Directional Pad (Up, Down, Left, Right) & Enter:** Navigates menus and confirms selections.
- **Volume (+/-):** Adjusts the AV system's volume.
- **Muting:** Mutes or unmutes the audio.
- **Return:** Goes back to the previous menu or screen.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Back):** Standard controls for media playback.
- **Preset (+/-) / Tuning (+/-):**For radio station presets and manual tuning.
- **Replay / Step / Advance:**Specific playback functions for discs.

Refer to your Sony AV Home Theatre System's original manual for detailed information on specific functions and their interaction with the remote control.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's finish and buttons.

## Storage

When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your VINABTY RM-ADU005 remote control, please refer to the following common solutions:

- **Remote not responding:**
  - Ensure batteries are correctly installed with the correct polarity (+/-).
  - Replace old batteries with new AA batteries.
  - Check for any obstructions between the remote control and the AV system's infrared receiver.
  - Ensure you are within the effective range and pointing the remote directly at the AV system.
- **Specific buttons not working:**
  - Clean the remote control surface, especially around the non-functioning buttons, to remove any dirt or debris that might be preventing proper contact.
  - If only certain buttons fail, and battery replacement does not resolve the issue, the remote may be damaged.
- **Interference:**
  - Bright light sources, such as direct sunlight or fluorescent lights, can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

If these steps do not resolve the issue, the remote control may require replacement.

## SPECIFICATIONS



8.27 inch



Image: RM-ADU005 remote control with its approximate dimensions.

Feature	Detail
Model Number	RM-ADU005
Brand	VINABTY

Product Dimensions	5 x 1.9 x 0.5 inches (approximately 12.7 x 4.8 x 1.3 cm)
Item Weight	2.39 ounces (approximately 67.7 grams)
Batteries Required	2 AA batteries
Special Feature	Ergonomic design
Color	White
Max Number of Supported Devices	18
Compatible Devices	Sony Home Theater Systems (specific models listed in Introduction)

## WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct support contacts for the VINABTY RM-ADU005 remote control is not provided in this manual. Please refer to the retailer or your purchase documentation for any warranty claims or support inquiries.

## ADDITIONAL INFORMATION

No official product videos from the seller are available for embedding in this manual.



Image: The RM-ADU005 remote control in a home theater setting.

