

Hoco Hoco ES10

Hoco ES10 Wireless Earphones User Manual

Model: Hoco ES10

INTRODUCTION

Thank you for choosing the Hoco ES10 Wireless Earphones. This manual provides essential information on how to set up, operate, and maintain your earphones to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

SAFETY INFORMATION

- Do not expose the earphones to extreme temperatures, humidity, or corrosive substances.
- Avoid dropping or subjecting the earphones to strong impacts.
- Do not disassemble or modify the earphones. This may void the warranty and cause damage.
- Keep out of reach of children and pets. Small parts may pose a choking hazard.
- Use only the provided charging cable or a certified equivalent.
- Avoid listening at high volumes for extended periods to prevent hearing damage.

PACKAGE CONTENTS

Please check the box for the following items:

- Hoco ES10 Wireless Earphones (Left and Right)
- Charging Case
- USB Charging Cable
- Ear Cushions (various sizes)
- User Manual



Image: Contents of the Hoco ES10 package, including the earphones, charging case, USB cable, and extra ear tips.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Hoco ES10 Wireless Earphones.

Earphone Overview



300mAh Charging Box

- 2 hours fast full charging
- 1 hours for 60mAh+60mAh Earbuds Battery Capacity

Single Mode



5 hrs for constant use



120 hrs stand-by time

Dual Mode



2.5 hrs for constant use



60 hrs stand-by time

Image: Detailed diagram showing the headset charging contact points, microphone, indicator light, multifunctional key on the earphones, and the headset charging pin, charging indicator, USB charging interface, and headset charging switch on the charging case.



Image: Top-down view of the Hoco ES10 charging case, highlighting the box charge port and the earbuds charge on/off switch.

- **Headset Charging Contact Point:** Connects earphones to charging case.
- **Microphone:** For calls and voice commands.
- **Indicator:** LED light indicating status (pairing, charging, etc.).
- **Multifunctional Key:** Controls playback, calls, and power.
- **Headset Charging Pin:** Pins inside the case that connect to the earphones for charging.
- **Charging Indicator:** LED on the case showing charging status.
- **USB Charging Interface:** Port for charging the case.
- **Headset Charging Switch:** Button to initiate or stop earbud charging within the case.

SETUP

1. Charging the Earphones and Case

Before first use, fully charge both the earphones and the charging case.

1. Place the earphones into the charging case, ensuring they are properly seated.
2. Connect the USB charging cable to the charging case's USB port and the other end to a USB power adapter (not included) or a computer's USB port.

3. The charging indicator on the case will show charging status. Once fully charged, the indicator will change or turn off.
4. A full charge for the 300mAh charging box takes approximately 2 hours. Earbuds take 1 hour for a full charge.

2. Pairing with Your Device

The Hoco ES10 earphones support both single and dual earbud pairing modes.



Image: Illustration of pairing options. Mode A shows one earphone paired to one mobile device. Mode B shows two earphones paired together to one mobile device.

Single Earphone Pairing:

1. Take one earphone out of the charging case. It will automatically enter pairing mode (indicator light will flash).
2. On your mobile device, go to Bluetooth settings and search for "Hoco ES10".
3. Select "Hoco ES10" to connect. Once connected, the indicator light on the earphone will stop flashing.

Dual Earphone Pairing (TWS Mode):

1. Take both earphones out of the charging case. They will automatically connect to each other.
2. Once connected to each other, one earphone will enter pairing mode with your device (indicator light will flash).
3. On your mobile device, go to Bluetooth settings and search for "Hoco ES10".
4. Select "Hoco ES10" to connect. Once connected, the indicator lights on both earphones will stop flashing.

Note: If the earphones do not automatically pair with each other or your device, try turning off Bluetooth on your device, placing the earphones back in the case, and then repeating the steps.

OPERATING INSTRUCTIONS

Basic Functions:

Action	Multifunctional Key Operation
Power On	Press and hold for 3 seconds (or take out of case)
Power Off	Press and hold for 5 seconds (or place into case)
Play/Pause Music	Single press
Answer/End Call	Single press
Reject Call	Press and hold for 2 seconds
Next Track	Double press (Right earbud)
Previous Track	Double press (Left earbud)
Activate Voice Assistant	Triple press

Battery Life:

- **Single Mode:** Approximately 5 hours of continuous use, 120 hours standby time.
- **Dual Mode:** Approximately 2.5 hours of continuous use, 60 hours standby time.

Earphone Overview



300mAh Charging Box

- 2 hours fast full charging
- 1 hours for 60mAh+60mAh Earbuds Battery Capacity

Single Mode



5 hrs for constant use



120 hrs stand-by time

Dual Mode



2.5 hrs for constant use



60 hrs stand-by time

Image: Diagram illustrating the battery life for single and dual earbud usage, along with charging case capacity.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earphones and charging case. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earphones in their charging case to protect them and keep them charged.
- **Avoid Moisture:** Keep the earphones and case away from water and excessive moisture.
- **Charging:** Charge the earphones regularly, even if not in frequent use, to maintain battery health.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Earphones not turning on	Ensure earphones are charged. Place them in the charging case and check the charging indicator.
Cannot pair with device	<ul style="list-style-type: none">◦ Ensure Bluetooth is enabled on your device.◦ Make sure earphones are in pairing mode (flashing indicator).◦ Forget "Hoco ES10" from your device's Bluetooth list and try pairing again.◦ Ensure earphones are sufficiently charged.
Only one earphone working	<ul style="list-style-type: none">◦ Place both earphones back into the charging case, close the lid, then open and take them out again to force re-connection.◦ Ensure both earphones are charged.◦ Try re-pairing both earphones to your device.
Poor sound quality or disconnections	<ul style="list-style-type: none">◦ Ensure earphones are within the Bluetooth range of your device.◦ Check for interference from other wireless devices.◦ Recharge the earphones and your device.
Charging case not charging	<ul style="list-style-type: none">◦ Check the USB cable and power adapter.◦ Ensure the charging port is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Brand	Hoco
Model Number	Hoco ES10
Connectivity	Wireless (Bluetooth)
Compatible with	Mobile Phones
Type	In Ear
Microphone	Yes
Noise Cancelling	Yes (Active Noise Cancellation)
Color	Black
Product Dimensions	5 x 3.2 x 3 cm
Item Weight	33 grams
Charging Case Capacity	300mAh


Feature	Detail
Earbud Charging Time	Approx. 1 hour
Case Charging Time	Approx. 2 hours
Single Earbud Playtime	Approx. 5 hours
Dual Earbud Playtime	Approx. 2.5 hours
Included Components	Ear Cushions



Image: Diagram highlighting key features such as Imported CSR Chip, CVC Noise Canceling, HiFi Sound Quality, Heavy Bass, Microphone, Smart Voice Prompt, LED light indicator, and Strong compatibility.

4g
only

Ultra lightweight

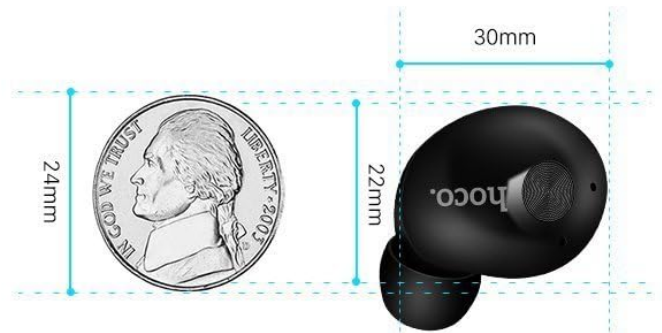

- Box size : 50*32*32 mm
- Earphone size : 30*22*22 mm


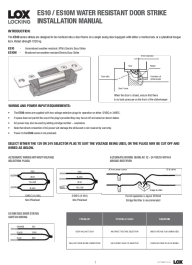

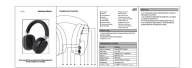

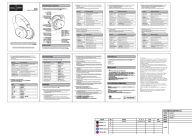
Image: Diagram showing the dimensions of the Hoco ES10 charging box (50*32*32 mm) and the earphones (30*22*22 mm), emphasizing their ultra-lightweight design (4g only).

WARRANTY AND SUPPORT

Hoco products are designed and manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included in your package or visit the official Hoco website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact Hoco customer service through their official channels.

© 2024 Hoco. All rights reserved.

	<p>Hoco EQ10 Plus True Wireless ANC+ENC Earphones User Manual</p> <p>Comprehensive user manual for the Hoco EQ10 Plus true wireless ANC+ENC noise-cancelling Bluetooth earphones, covering operation, features, and warranty information.</p>
	<p>LOX ES10/ES10M Water Resistant Door Strike Installation Manual</p> <p>Detailed installation manual for the LOX ES10 and ES10M water-resistant electric door strikes. Covers wiring, power requirements, dimensions, mounting options, lock function conversion, and ordering information.</p>
	<p>Hoco EW24 Wireless Earphones User Manual</p> <p>User manual for Hoco EW24 Wireless Earphones, providing setup, usage, and troubleshooting information.</p>
	<p>hoco Wireless Headphones BT2212 Instruction Manual</p> <p>Instruction manual for hoco wireless headphones BT2212, covering overview, features, controls, and FCC statement.</p>
	<p>OKAI NEON ES10 Trottinette Électrique : Spécifications et Aperçu du Produit</p> <p>Spécifications détaillées, caractéristiques et informations sur l'emballage de la trottinette électrique OKAI NEON ES10, incluant les performances, les dimensions et les caractéristiques de sécurité.</p>
	<p>Hoco W40 Wireless Headphones - User Manual and Specifications</p> <p>Comprehensive user manual and technical specifications for the Hoco W40 wireless headphones, covering features, usage, and regulatory information.</p>