

[manuals.plus](#) /

› [Tupperware](#) /

› [Tupperware Speedy Chef Manual Food Processor Instruction Manual](#)

Tupperware 11127958

Tupperware Speedy Chef Instruction Manual

Model: 11127958

INTRODUCTION

The Tupperware Speedy Chef is a versatile manual food processor designed for quick and efficient preparation of various ingredients. It is ideal for whipping cream, beating eggs, making mayonnaise, and even churning butter. Its hand-crank mechanism provides control and convenience without the need for electricity.



Image: Tupperware Speedy Chef assembled, showing the red base, white lid, and red crank handle.

PRODUCT OVERVIEW

The Tupperware Speedy Chef consists of several key components that work together to facilitate manual food preparation. Understanding each part is essential for proper assembly and operation.

Components:

- **Container:** The transparent red base where ingredients are processed.
- **Lid:** The red cover with a white ring that fits onto the container.
- **Whisk Attachment:** The red whisking mechanism that rotates inside the container.
- **Crank Handle:** The red handle with a white knob used to manually operate the whisk.



Image: All components of the Tupperware Speedy Chef disassembled.

Key Features:

- **Detachable Handle:** Easy to attach and remove for storage and cleaning.
- **Ergonomic Cover:** Designed for a comfortable grip during use.
- **Removable Whisks:** Facilitates thorough cleaning.
- **Stable Base:** Equipped with an anti-slip ring for secure placement during operation.



Image: Annotated diagram highlighting the features of the Speedy Chef.

SETUP

Before first use, wash all components thoroughly. Ensure all parts are dry before assembly.

1. Place the transparent red container on a stable, flat surface. The anti-slip ring on the base helps secure it.
2. Insert the whisk attachment into the center of the container.
3. Align the lid with the top of the container and press down firmly to ensure a snug fit.
4. Attach the crank handle to the designated slot on the lid. Ensure it clicks into place or is securely fastened.



Image: Assembled Tupperware Speedy Chef on a kitchen counter.

OPERATING INSTRUCTIONS

The Speedy Chef is designed for manual operation, offering control over the mixing process.

- 1. Prepare Ingredients:** Add your desired ingredients into the container. Do not overfill; ensure there is enough space for the whisk to operate effectively.
- 2. Secure the Lid:** Place the lid onto the container. While the lid does not feature a locking mechanism, it is designed to fit snugly. For optimal stability and safety during operation, firmly hold the lid down with one hand while rotating the crank handle with the other. This prevents the lid from lifting or the contents from splashing.
- 3. Operate the Crank:** Rotate the crank handle in a continuous motion. The speed of rotation can be adjusted manually to achieve the desired consistency for your ingredients.
- 4. Monitor Progress:** The transparent container allows you to observe the mixing process. Continue cranking until your ingredients reach the desired texture, such as whipped cream, beaten eggs, or churned butter.
- 5. Remove Ingredients:** Once complete, carefully remove the crank handle and then the lid. Use a spatula to scrape down the sides of the container and remove the processed ingredients.



Image: Whisk attachment with churned butter, alongside bowls of whipped cream and butter.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and hygiene of your Tupperware Speedy Chef.

- Disassembly:** After each use, disassemble all components: remove the crank handle, lift the lid, and detach the whisk attachment from the lid.
- Washing:** Wash all parts immediately after use with warm, soapy water. Use a soft sponge or cloth to clean the container, lid, and whisk. Rinse thoroughly to remove all soap residue.
- Drying:** Allow all components to air dry completely before reassembling or storing. This prevents water spots and potential odor buildup.
- Storage:** Store the clean, dry Speedy Chef in a cool, dry place. You may store it assembled or disassembled, depending on your preference and available space.

Note: While Tupperware products are often dishwasher safe, hand washing is recommended for the Speedy Chef to preserve its finish and ensure thorough cleaning of all intricate parts.

TROUBLESHOOTING

If you encounter any issues while using your Speedy Chef, refer to the following common solutions:

- **Difficulty Churning/Mixing:**

- Ensure the whisk attachment is correctly seated in the lid and rotates freely.
- Check that the crank handle is securely attached.
- Verify that the container is not overfilled, which can impede whisk movement.
- For butter or whipped cream, ensure ingredients are at the correct temperature (e.g., cold cream for whipping).

- **Lid Lifting During Operation:**

- As noted in the operating instructions, the lid does not lock. Always hold the lid firmly with one hand while cranking with the other to maintain stability and prevent it from lifting.

- **Splashing of Contents:**

- Ensure the lid is properly seated and held down during operation.
- Do not overfill the container.
- Avoid excessively vigorous cranking, especially with liquid ingredients.

SPECIFICATIONS

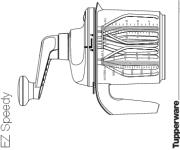
Feature	Detail
Brand	Tupperware
Model Number	11127958
Product Dimensions	11 x 11 x 15 inches (approximate)
Item Weight	1.01 pounds
Capacity	1.35 Liters
Controls Type	Push Button (for handle mechanism)
Special Feature	Adjustable Speed Control (manual)

WARRANTY AND SUPPORT

Warranty information for your Tupperware Speedy Chef is typically included with your purchase documentation. For specific warranty details, product support, or replacement parts, please refer to the official Tupperware website or contact Tupperware customer service directly. Keep your proof of purchase for warranty claims.

For further assistance, please visit the [Tupperware Store on Amazon](#).

Related Documents - 11127958

	<p><u>Tupperware EZ Speedy Manual Hand Mixer: Assembly and Usage Guide</u></p> <p>Comprehensive guide for the Tupperware EZ Speedy manual hand mixer, covering assembly, operation, and cleaning. Learn how to use this kitchen gadget effectively.</p>
	<p><u>Tupperware Time Savers Herb Chopper - User Manual and Instructions</u></p> <p>A comprehensive guide for the Tupperware Time Savers Herb Chopper, detailing assembly, operation, usage, and care. Learn how to efficiently chop herbs, vegetables, and other ingredients with this versatile kitchen tool.</p>
	<p><u>Tupperware FusionMaster System: Versatile Kitchen Tool</u></p> <p>Discover the Tupperware FusionMaster System, a versatile kitchen appliance designed for mincing, grinding, and making sausages. This guide provides assembly, usage, and cleaning instructions.</p>
	<p><u>Tupperware Micro Healthy Delight: Microwave Cookware Guide</u></p> <p>Discover how to prepare healthy and delicious meals with the Tupperware Micro Healthy Delight. This guide provides essential cooking instructions, safety precautions, and warranty information for optimal use in your microwave.</p>
	<p><u>Tupperware WOW POP Microwave Popcorn Maker: Instructions and Safety Guide</u></p> <p>Comprehensive guide for the Tupperware WOW POP Microwave Popcorn Maker, covering usage, safety instructions, quantity guide, and warranty information. Learn to make perfect popcorn.</p>

T CHEF SERIES
COTTAGE COOKWARE



Tupperware® © 2022 Tupperware. All Rights Reserved

[Tupperware T Chef Series Cottage Cookware: Features, Use & Care Guide](#)

Discover the Tupperware T Chef Series Cottage Cookware. Learn about its hard anodized aluminum construction, Eterna nonstick coating, features, cooking tips, and essential use and care instructions for optimal performance.