

Candy CFT610/3S

Candy CFT610/3S Cooker Hood User Manual

Model: CFT610/3S

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Candy CFT610/3S Under Cabinet Kitchen Cooker Hood. Please read this manual thoroughly before installation and use, and keep it for future reference.

The Candy CFT610/3S is a 60cm standard under cabinet cooker hood designed to effectively remove smoke, steam, and cooking odors from your kitchen. It features 3 speed settings, slider controls, and a halogen light for illumination.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the electrical supply voltage matches the rating plate on the appliance.
- Do not operate the hood if the power cord is damaged. Contact qualified service personnel.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Adequate ventilation should be provided in the room when the range hood is used at the same time as appliances burning gas or other fuels.
- Do not flambé under the range hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Regularly clean the appliance and its filter according to the instructions to prevent fire hazards.
- Always disconnect the appliance from the power supply before cleaning or maintenance.

3. SETUP AND INSTALLATION

The Candy CFT610/3S cooker hood is designed for under cabinet mounting. Proper installation is crucial for optimal performance and safety.

3.1 Unpacking

Carefully remove the cooker hood from its packaging. Inspect for any damage during transit. Keep all packaging materials until you are satisfied with the installation.

3.2 Mounting

This hood is designed for under cabinet installation. Ensure the cabinet structure is strong enough to support the hood's weight (Net weight: 4.6 kg). The product dimensions are approximately 600mm (Width) x 470mm (Depth) x 77mm (Height).

For optimal extraction, ensure the hood is positioned correctly above your cooking surface. The diameter of the air outlet is 125mm, which should be considered for ducting connections.



Figure 1: Front-side view of the Candy CFT610/3S Cooker Hood, showcasing its silver finish and under-cabinet design. The slider controls and halogen light are visible.

3.3 Electrical Connection

Connect the hood to a suitable electrical supply (230-240V). All electrical work should be performed by a qualified electrician in accordance with local regulations.

3.4 Ducting (Extraction Mode) or Filter Installation (Re-circulation Mode)

The hood supports both extraction and re-circulation modes. For extraction, connect appropriate ducting to the 125mm air outlet to vent air outside. For re-circulation, ensure carbon filters are installed (sold separately) to purify the air before returning it to the kitchen.



Figure 2: Angled view of the Candy CFT610/3S Cooker Hood from below, highlighting the mesh filter and the integrated halogen light. This view is typical during maintenance or filter inspection.

4. OPERATING INSTRUCTIONS

Your Candy CFT610/3S cooker hood is equipped with user-friendly slider controls for easy operation.

4.1 Powering On/Off

Locate the main power switch or slider control. Slide it to the 'On' position to activate the hood.

4.2 Adjusting Fan Speed

The hood offers 3 speed settings. Use the slider control to select the desired extraction power:

- **Speed 1:** Low setting for light cooking or maintaining air quality.
- **Speed 2:** Medium setting for general cooking.
- **Speed 3:** High setting for heavy cooking, frying, or strong odors.

The maximum extraction flow rate is 180m³/h.

4.3 Lighting

The hood is equipped with a 1 x 28W Halogen light. Use the dedicated light switch or slider control to turn the light on or off, illuminating your cooking area.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your cooker hood.

5.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with mild detergent. Do not use abrasive cleaners or corrosive detergents.

5.2 Cleaning/Replacing the Grease Filter

The hood uses a mesh filter. Grease filters should be cleaned regularly (approximately every 2 months of operation, or more frequently with heavy use) to prevent grease buildup and maintain extraction efficiency. They can typically be washed by hand or in a dishwasher.

Refer to the specific instructions for removing and re-installing the mesh filter.

5.3 Replacing the Halogen Light Bulb

Ensure the hood is disconnected from the power supply before attempting to replace the bulb. Replace with a 28W Halogen bulb of the same type.

6. TROUBLESHOOTING

If you encounter issues with your cooker hood, refer to the following common problems and solutions:

- **Hood not turning on:**
 - Check if the hood is properly plugged into a working power outlet.
 - Check the circuit breaker or fuse.
 - Ensure the power switch/slider is in the 'On' position.
- **Poor extraction performance:**
 - Clean or replace the grease filters.
 - Check if the ducting is clear and not obstructed (for extraction mode).
 - Ensure carbon filters are not saturated (for re-circulation mode).
 - Verify the fan speed setting is appropriate for the cooking activity.

- **Excessive noise:**
 - Ensure the hood is securely mounted and all screws are tightened.
 - Check for any loose parts or foreign objects in the fan area.
 - Verify ducting is properly installed and not causing vibrations.
- **Light not working:**
 - Check if the light switch is on.
 - Replace the halogen bulb if it is burnt out.

If the problem persists after checking these points, contact qualified service personnel.

7. SPECIFICATIONS

Detailed technical specifications for the Candy CFT610/3S Cooker Hood:

Feature	Value
Model Number	CFT610/3S (36900775)
Brand	Candy
Mounting Type	Under Cabinet Mount
Product Dimensions (D x W x H)	23.62" x 18.5" x 3.02" (600mm x 470mm x 77mm)
Item Weight	9.81 pounds (4450 Grams)
Color	Silver
Number of Speeds	3
Extraction Flow Rate	180m ³ /h
Noise Level	64 dB
Voltage	230-240 Volts
Light Source Type	Halogen (1 x 28W)
Filter Type	Mesh
Air Outlet Diameter	125mm
Special Features	Re-Circulation capable
Manufacturer	Candy
Date First Available	February 19, 2018

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your local Candy authorized dealer or service center. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please visit the official Candy website or contact their customer service department. When contacting support, please have your product model number

You can find more information about Candy products and support at the [Candy Store on Amazon](#).

This manual is subject to change without notice.

Related Documents - CFT610/3S

 <p>Hotte aspirante Manuel d'instruction</p>	<p>Candy CVMAD90N Cooker Hood: Installation, Usage, and Maintenance Manual</p> <p>Comprehensive instruction manual for the Candy CVMAD90N cooker hood, covering safety, installation, operation, troubleshooting, maintenance, and environmental disposal. Provides detailed guidance for optimal use and care.</p>
 <p>CBT6130/3X Cooker Hood Instruction Manual</p> <p>ENGLISH (P1) PAGE 111 FRANÇAIS (P2) PAGE 111 MAGNET (P3) 125, 126 MAGNET (P4) 125, 126 PORTUGUESE (P5) PÁGINA 111 DEUTSCH (P6) SEITE 111 ITALIANO (P7) PAGINA 111</p>	<p>CBT6130/3X Cooker Hood: Installation and User Manual</p> <p>Comprehensive instruction manual for the Candy CBT6130/3X Cooker Hood, covering installation, safe operation, maintenance, troubleshooting, and environmental protection guidelines.</p>
 <p>CBT625/2X/1 CBT625/2W/1, CBT625/2B/1 Cooker Hood Instruction Manual</p> <p>ENGLISH (P1) PAGE 111 FRANÇAIS (P2) PAGE 111 MAGNET (P3) 125, 126 MAGNET (P4) 125, 126 PORTUGUESE (P5) PÁGINA 111 DEUTSCH (P6) SEITE 111 ITALIANO (P7) PAGINA 111</p>	<p>Candy CBT625/2X/1, CBT625/2W/1, CBT625/2B/1 Cooker Hood Instruction Manual</p> <p>Instruction manual for Candy CBT625/2X/1, CBT625/2W/1, and CBT625/2B/1 cooker hoods, detailing installation, safe usage, maintenance, troubleshooting, and environmental information.</p>
	<p>Manuale d'Uso e Manutenzione Lavastoviglie Candy</p> <p>Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.</p>
 <p>ENGLISH INSTALLATION AND USER MANUAL FRANÇAIS MANUEL D'INSTALLATION ET D'UTILISATION MAGNET MAGNET PORTUGUESE MANUAL DE INSTALACÃO E UTILIZAÇÃO DEUTSCH MANUALE D'USO E MANUTENZIONE ITALIANO MANUALE D'USO E MANUTENZIONE ESPANOL MANUAL DE INSTALACIÓN Y USO ROMÂNIA MANUAL DE INSTALARE ȘI UTILIZARE</p>	<p>Candy Cooker Hood Installation and User Manual</p> <p>Comprehensive guide for Candy cooker hoods, covering installation, operation, maintenance, safety precautions, and troubleshooting. Includes model specifications and environmental guidelines.</p>



USER INSTRUCTIONS	EN	1
NOTICE D'EMPLOI ET D'INSTALLATION	FR	1
NOTICE D'EMPLOI ET D'INSTALLATION	FR	1
BEWEGUNGSANLEITUNG	DE	1
OVEN	NL	1

[Candy Oven User Manual: Comprehensive Guide to Operation and Maintenance](#)

Official user manual for Candy ovens, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting. Available in English, French, German, and Dutch.