

Manuals.plus /

- › SANSUI /
- › SANSUI SCM39-B11 39V High-Vision LCD TV User Manual

## SANSUI SCM39-B11

# SANSUI SCM39-B11 39V High-Vision LCD TV User Manual

Model: SCM39-B11 | Brand: SANSUI

## INTRODUCTION

This manual provides essential information for the safe and efficient use of your SANSUI SCM39-B11 39V High-Vision LCD TV. Please read these instructions thoroughly before operating the television and retain them for future reference. This television features a reliable Japanese design, incorporating a main board developed by Toshiba Visual Solutions Corporation, with evaluation and production management handled by a specialized team in Echizen City, Fukui Prefecture.

The SCM39-B11 model is a 2017 release, designed for terrestrial digital broadcasting, and supports external HDD recording via USB connection.

## SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the television to rain or moisture.
- Do not block ventilation openings. Ensure adequate space around the television for proper airflow.
- Do not place the television on an unstable cart, stand, tripod, bracket, or table.
- Unplug the television during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- SANSUI SCM39-B11 39V LCD TV
- Remote Control
- Batteries (for remote control)

- MiniB-CAS Card
- B-CAS Card Cover (with screws)
- Stand (with screws)
- Instruction Manual (this document)
- Warranty Card

## SETUP GUIDE

---

### 1. Stand Installation

Carefully place the television screen-down on a soft, flat surface. Attach the included stand to the bottom of the television using the provided screws. Ensure the stand is securely fastened before placing the television upright.



Image: Front view of the SANSUI SCM39-B11 TV with its stand, showing the display and the two silver-colored feet.

### 2. Connecting Cables

Refer to the back panel of the television for connection ports.



Image: Rear view of the SANSUI SCM39-B11 TV, displaying the back panel with various input ports including HDMI, USB, and antenna connections.

- **Antenna Connection:** Connect your terrestrial digital antenna cable to the ANTENNA IN port.
- **HDMI Devices:** Connect DVD players, Blu-ray players, game consoles, or other HDMI-compatible devices to the HDMI 1 or HDMI 2 ports. This model has 2 HDMI ports.
- **USB External HDD:** For recording, connect a compatible external USB Hard Disk Drive (HDD) to the USB port.
- **Power:** Connect the power cord to the AC inlet on the television and then to a wall outlet.

### 3. Initial Setup

After connecting all cables and powering on the TV, the initial setup wizard will guide you through the process. This typically includes:

- Language selection.
- Region selection.
- Automatic channel scan for terrestrial digital broadcasts. Ensure your antenna is properly connected for this step.

## OPERATING INSTRUCTIONS

---

## Basic Operations

- **Power On/Off:** Press the **POWER** button on the remote control.
- **Channel Selection:** Use the **CH +/-** buttons or the number buttons on the remote.
- **Volume Adjustment:** Use the **VOL +/-** buttons.
- **Input Source:** Press the **INPUT** button to cycle through connected devices (TV, HDMI 1, HDMI 2, etc.).

## Recording with External HDD

This TV supports recording terrestrial digital broadcasts to an external USB HDD. Ensure your HDD is connected to the USB port.

- **Scheduling Recordings:** Use the Electronic Program Guide (EPG) to select programs for recording. The EPG supports a 1-week display.
- **Automatic Chapter Marking:** The TV can detect commercials during recording and automatically set chapter marks, allowing for easier navigation during playback.

## Playback Functions

When playing back recorded content from an external HDD, the following functions are available:

- **Repeat Playback:** Replay a section or the entire program.
- **Chase Playback:** Watch a program from the beginning while it is still being recorded.
- **1.5x Speed Playback:** Watch recorded content at an accelerated speed.

## Picture and Sound Enhancements

- **Blue Light Guard:** Activate this function via the remote control to reduce blue light emission by up to approximately 50%, which may help reduce eye strain.
- **Picture Enhancer:** This feature automatically adjusts the super-resolution processing level according to the input content, ensuring optimal image display at all times.
- **Japanese Paper Speakers:** The integrated speakers utilize Japanese paper for clear sound reproduction across high to low frequencies.

## Additional Features

- **Screen Freeze Function:** Pause the live broadcast or current display.
- **HDMI Connected Device Linkage:** Control compatible HDMI-connected devices using the TV remote.
- **Bi-directional Data Communication:** Supports two-way data communication.

## MAINTENANCE

---

### Cleaning the Television

- **Screen:** Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (ensure it is safe for LCD screens) and wipe carefully. Do not spray liquid directly onto the screen.
- **Body:** Wipe the television body with a soft, dry cloth. Avoid using abrasive cleaners, waxes, or solvents as they can damage the finish.

### Remote Control Care

- Replace batteries when the remote control's response becomes slow or inconsistent.

- Do not mix old and new batteries, or different types of batteries.
- Keep the remote control away from moisture and direct sunlight.

## TROUBLESHOOTING

---

If you encounter issues with your television, refer to the following common problems and solutions before contacting support.

Problem	Possible Cause / Solution
No power	Ensure the power cord is securely plugged into both the TV and the wall outlet. Check if the outlet is functioning.
No picture / No signal	Verify antenna connection. Check the input source selection (e.g., HDMI 1, HDMI 2, TV). Perform a channel scan if necessary.
No sound	Check volume level and mute status. Ensure external audio devices are properly connected if used.
Remote control not working	Check and replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
External HDD recording issues	Ensure the USB HDD is properly connected and formatted for the TV. Some HDDs may have compatibility issues. Try a different USB port or HDD if available.
HDMI device not recognized	Ensure the HDMI cable is securely connected. Try a different HDMI port or cable. Power cycle both the TV and the HDMI device.

## PRODUCT SPECIFICATIONS

---

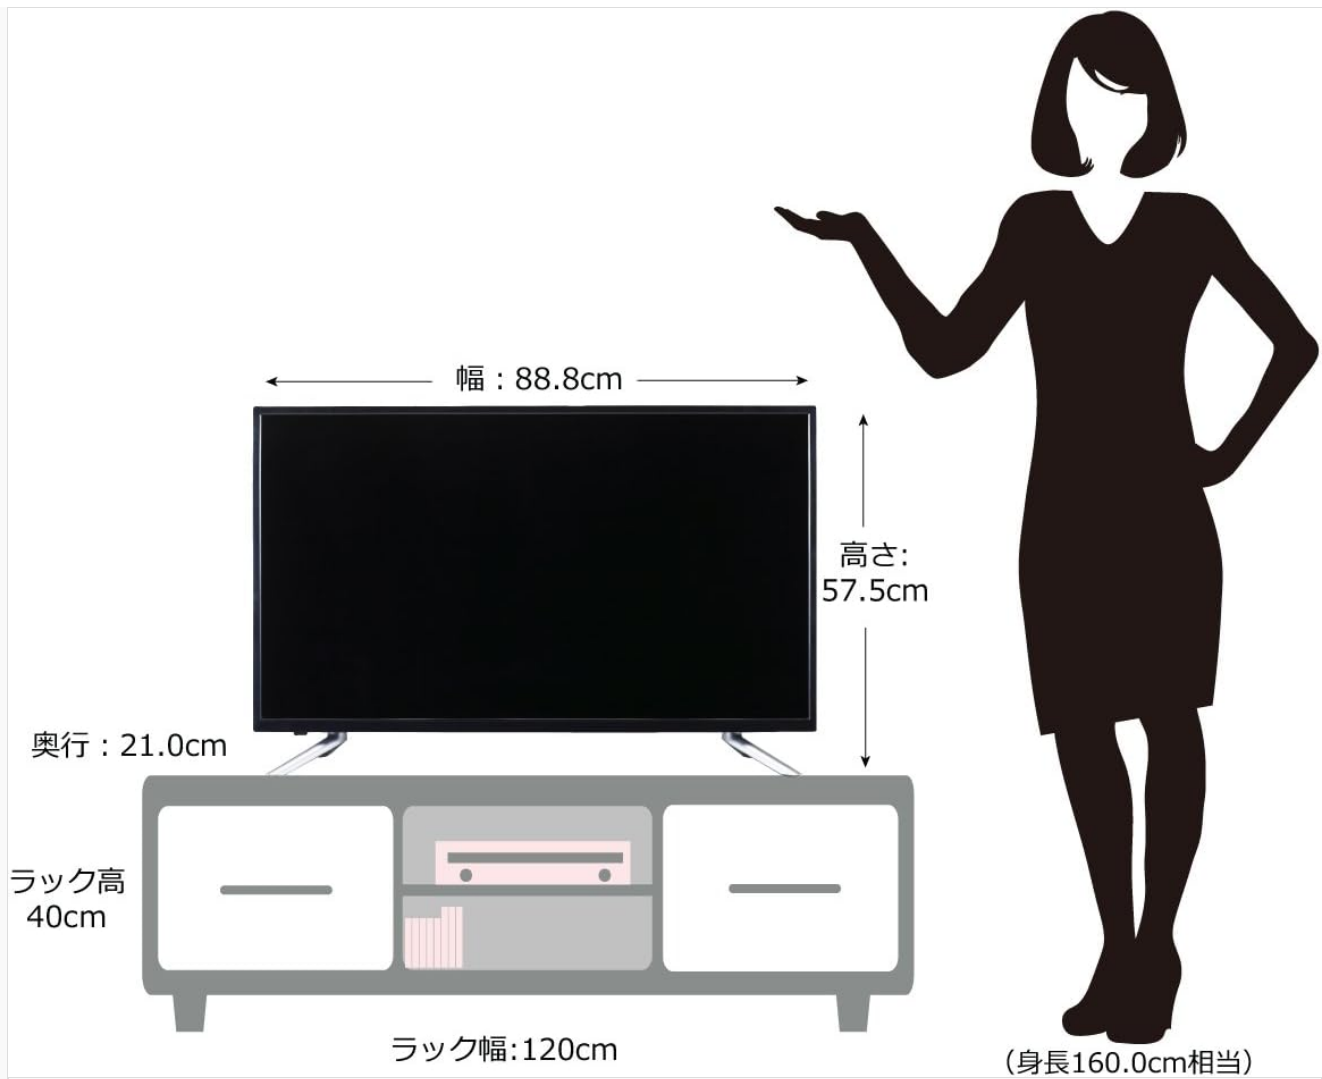


Image: A table detailing the specifications of the SANSUI SCM39-B11 TV, including screen size, resolution, tuner type, recording capabilities, connectivity, and power consumption.

Feature	Specification
Model Name	SCM39-B11
Screen Size	39V-type (39 inches)
Display Technology	LCD
Resolution	High-Vision (HD 1366 x 768)
Tuners	Terrestrial Digital x1, BS Digital: None, CS Digital: None
External HDD Recording	Supported via USB
HDMI Ports	2 systems
USB Ports	1 system
Wall Mount Compatible	VESA 200mm x 200mm
Product Weight	6.1 kg
Dimensions (W x H x D)	Approx. 88.8 cm x 57.5 cm x 21.0 cm (with stand)
Power Consumption	61W
Release Year	2017

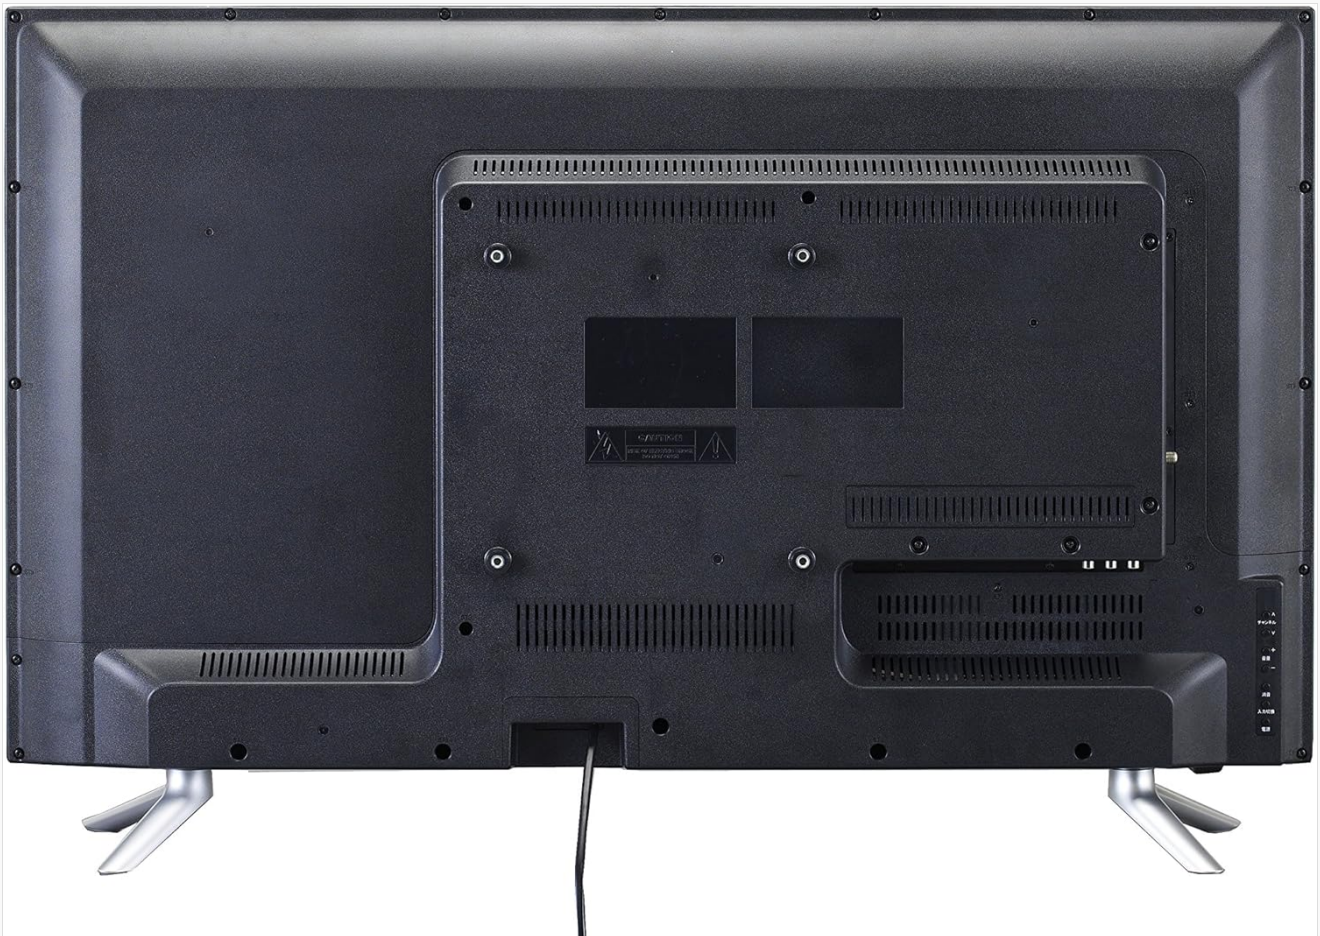


Image: Front view of the SANSUI SCM39-B11 TV with overlaid measurements for width (88.8cm), height (57.5cm), and weight (6.1kg).

幅: 88.8cm

高さ:  
57.5cm



重量  
6.1kg

2011年 地デジ化年度販売モデル  
32型液晶テレビと同じ重さ ※当社比

Image: Side view of the SANSUI SCM39-B11 TV, illustrating the depth of the television body (9.9cm) and the total depth including the stand (21cm).

奥行 (テレビ台含まず)  
9.9cm





Image: Diagram showing the SANSUI SCM39-B11 TV on a stand next to a human figure (approx. 160cm tall) for visual scale, with TV dimensions indicated.

## WARRANTY AND SUPPORT

Your SANSUI SCM39-B11 television comes with a warranty. Please refer to the included warranty card for details regarding coverage period and terms. Keep your purchase receipt as proof of purchase.

For technical support, service, or inquiries not covered in this manual, please contact SANSUI customer service. Contact information can typically be found on the warranty card or the official SANSUI website.