

[manuals.plus](#) /› [PlayStation](#) /› [PlayStation 4 Slim 1TB Console User Manual](#)**PlayStation 3003348**

PlayStation 4 Slim 1TB Console User Manual

Model: 3003348

1. INTRODUCTION

Welcome to the world of PlayStation 4 Slim. This lighter and slimmer console features a 1TB hard drive, providing ample space for games, TV shows, music, and more. It delivers incredible gaming experiences with exclusive titles and offers endless entertainment options.

This manual provides essential information for setting up, operating, and maintaining your PlayStation 4 Slim console. Please read it thoroughly to ensure proper use and to maximize your enjoyment of the system.

2. WHAT'S IN THE BOX

Upon unboxing your PlayStation 4 Slim, verify that all the following components are included:

- PlayStation 4 Slim 1TB Console (Model: CUH-2000 series)
- DUALSHOCK 4 Wireless Controller
- HDMI Cable
- Power Cable
- USB Cable (for controller charging/connection)
- Mono Headset
- Printed Materials (Quick Start Guide, Safety Guide)



Image: The retail packaging for the PlayStation 4 Slim 1TB Console, showing the console and controller on the box.

3. SETUP

3.1 Connecting Your Console

- 1. Place the Console:** Position your PS4 Slim horizontally or vertically in a well-ventilated area, away from direct sunlight or heat sources. Ensure there is adequate space around the console for airflow.
- 2. Connect HDMI Cable:** Insert one end of the supplied HDMI cable into the HDMI OUT port on the back of your PS4 Slim and the other end into an HDMI input on your TV or display.
- 3. Connect Power Cable:** Plug the power cable into the AC IN port on the back of your PS4 Slim, then plug the other end into a wall outlet.
- 4. Connect DUALSHOCK 4 Controller:** Use the supplied USB cable to connect your DUALSHOCK 4 wireless controller to a USB port on the front of your PS4 Slim. This will pair the controller and charge it.



Image: The PlayStation 4 Slim console positioned next to its DUALSHOCK 4 wireless controller, illustrating the compact design.

3.2 Initial System Setup

1. **Power On:** Press the power button on the front of the PS4 Slim. The indicator light will turn blue, then white.
2. **Follow On-Screen Instructions:** Your TV will display the PS4 setup screen. Follow the prompts to:
 - Select your language.
 - Adjust display area.
 - Connect to the Internet (Wi-Fi or Ethernet).
 - Set date and time.
 - Create or log in to a PlayStation Network (PSN) account.
3. **Controller Charging:** To charge your controller when the console is in rest mode, ensure the "Supply Power to USB Ports" option is enabled in (Settings) > [Power Saving Settings] > [Set Functions Available in Rest Mode].

4. OPERATING YOUR CONSOLE

4.1 Power On/Off

- **To Power On:** Press the power button on the console or the PS button on a paired DUALSHOCK 4 controller.
- **To Power Off:** From the function screen, select **(Power) > [Turn Off PS4]**. Alternatively, press and hold the power button on the console for at least 7 seconds until the system beeps twice.

- **Rest Mode:** To enter rest mode, select **(Power) > [Enter Rest Mode]**. The power indicator will turn orange.

4.2 DUALSHOCK 4 Wireless Controller

The DUALSHOCK 4 controller is your primary interface for interacting with the PS4. It features precise controls, a touch pad, light bar, and built-in speaker.



Image: A detailed view of the DUALSHOCK 4 wireless controller, highlighting its buttons, analog sticks, and touch pad.

- **PS Button:** Turns on the console, opens the Quick Menu, or returns to the home screen.
- **Share Button:** Allows you to share screenshots and video clips of your gameplay.
- **Options Button:** Accesses context-sensitive menus within games and applications.
- **Touch Pad:** Can be used for navigation, input, and specific game functions.

4.3 Playing Games and Media

- **Disc-based Games:** Insert a game disc into the disc slot on the front of the console. The game icon will appear on the home screen.
- **Digital Games:** Download games from the PlayStation Store. Once downloaded, they will appear on your home screen.
- **Media Apps:** Access streaming services like Netflix, Hulu, and PlayStation Vue from the TV & Video section of the home screen.

5. MAINTENANCE

- **Cleaning:** Regularly clean the console's exterior with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. Ensure ventilation ports are free from dust and obstructions.
- **Ventilation:** Do not block the ventilation openings on the console. Place the console in an area with good airflow to prevent overheating.
- **Software Updates:** Keep your system software updated to the latest version. This ensures optimal

performance, security, and access to new features. Updates can be configured to download automatically.

- **Data Backup:** Periodically back up your saved game data and other important files to a USB storage device or PlayStation Plus cloud storage.

6. TROUBLESHOOTING

Problem	Possible Solution
Console does not power on.	<ul style="list-style-type: none">• Ensure the power cable is securely connected to both the console and the wall outlet.• Try a different power outlet.
No video output on TV.	<ul style="list-style-type: none">• Verify the HDMI cable is securely connected to both the PS4 and the TV.• Ensure your TV is set to the correct HDMI input.• Try a different HDMI cable or HDMI port on your TV.
DUALSHOCK 4 controller not responding.	<ul style="list-style-type: none">• Connect the controller to the PS4 with the USB cable to re-pair it.• Ensure the controller is charged.• Reset the controller by pressing the small button inside the tiny hole on the back of the controller with a paperclip.
Disc read errors.	<ul style="list-style-type: none">• Clean the game disc with a soft, lint-free cloth.• Ensure the disc is inserted correctly.• Try a different disc to determine if the issue is with the console or the disc.

7. SPECIFICATIONS

Feature	Detail
Product Name	PlayStation 4 Slim 1TB Console
Model Number	3003348 (CUH-2000 series)
Brand	PlayStation
Storage Capacity	1TB Hard Drive
Dimensions (approx.)	2 x 1 x 2 inches (Product Dimensions)
Weight (approx.)	2.15 pounds (Item Weight)

Feature	Detail
Platform	PlayStation 4
Input Device	Gamepad (DUALSHOCK 4)
Color	Black
Manufacturer	Sony Computer Entertainment

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official PlayStation support website.

Additional support and a comprehensive user guide can be found online:

- [Official User Guide \(PDF\)](#)
- Visit the official PlayStation Support website for FAQs, troubleshooting, and contact information.

© 2024 PlayStation. All rights reserved.

PlayStation and DUALSHOCK are registered trademarks of Sony Interactive Entertainment Inc.