

Tefal Intense Pure Air Basic

Tefal Intense Pure Air Basic Air Purifier Instruction Manual

Model: Intense Pure Air Basic

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Tefal Intense Pure Air Basic Air Purifier. Please read these instructions carefully before using the appliance and retain them for future reference.

The Tefal Intense Pure Air Basic is designed to purify the air in your home, featuring a multi-stage filtration system including HEPA and patented NanoCaptur™ technology to remove various pollutants.

2. SAFETY INSTRUCTIONS

- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not operate the appliance with a damaged power cord or plug.
- Keep the appliance away from water and moisture. Do not immerse it in water or other liquids.
- Do not block the air inlet or outlet grilles.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Use only genuine Tefal replacement filters.

3. PRODUCT OVERVIEW

3.1 Components

The Tefal Intense Pure Air Basic Air Purifier consists of the main unit, a multi-layer filtration system, and a control panel.

- **Pre-filter:** Captures large particles like dust and pet hair.
- **Active Carbon Filter:** Absorbs odors, gases, and volatile organic compounds.
- **HEPA Filter:** Traps fine particles, including pollen, dust mites, and mold spores.
- **NanoCaptur™ Filter:** Specifically designed to permanently destroy formaldehyde.

3.2 Control Panel and Indicators

The control panel is located on the top of the unit and features various buttons and indicators for operation.



Image 1: Close-up view of the control panel on the Tefal Intense Pure Air Basic Air Purifier. It shows buttons for power, fan speed, timer, and an ionizer function, along with indicators for filter status and air quality.

- **Power Button:** Turns the appliance on or off.
- **Fan Speed Button:** Adjusts fan speed (4 settings).
- **Timer Button:** Sets operation duration (1h/2h/4h/8h).
- **Ionizer Button:** Activates or deactivates the ionizer function.
- **Filter Change Indicator:** Illuminates when a filter needs replacement.



Image 2: Front view of the Tefal Intense Pure Air Basic Air Purifier, showcasing its white and blue design and the "Tefal Intense Pure Air" branding.



Image 3: Angled view of the Tefal Intense Pure Air Basic Air Purifier, highlighting its sleek profile and the air outlet grille at the top.



Image 4: Exploded view of the Tefal Intense Pure Air Basic Air Purifier, showing the internal fan and the four distinct filter layers: pre-filter, active carbon filter, HEPA filter, and NanoCaptur™ filter.

4. SETUP

4.1 Unpacking

1. Carefully remove the air purifier from its packaging.
2. Remove all protective materials and plastic bags.
3. Ensure all filters are correctly installed and unwrapped from any protective plastic. Refer to the "Maintenance" section for filter installation details.

4.2 Placement

- Place the air purifier on a flat, stable surface.
- Ensure there is adequate space (at least 20 cm) around the air inlet and outlet grilles for optimal air circulation.
- Avoid placing the unit near heat sources, direct sunlight, or in areas with high humidity.
- The recommended coverage area is 377 sq. ft. / 35 sq. mtrs. for effective purification.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

1. Plug the power cord into a suitable electrical outlet.
2. Press the **Power Button** on the control panel to turn the unit on. The default settings will activate.
3. Press the **Power Button** again to turn the unit off.

5.2 Adjusting Fan Speed

Press the **Fan Speed Button** repeatedly to cycle through the 4 available fan speed settings. Higher speeds provide faster air purification.

5.3 Setting the Timer

Press the **Timer Button** to set the desired operating duration. You can choose between 1 hour, 2 hours, 4 hours, or 8 hours. The unit will automatically turn off after the selected time.

5.4 Ionizer Function

Press the **Ionizer Button** to activate or deactivate the ionizer function. The ionizer helps to clump small particles together, making them easier for the filters to capture.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air purifier. Always unplug the appliance before cleaning or replacing filters.

6.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Clean the air inlet and outlet grilles with a soft brush or vacuum cleaner attachment to remove dust buildup.

6.2 Filter Replacement

The Filter Change Indicator on the control panel will illuminate when a filter needs to be replaced. The lifespan of filters varies depending on usage and air quality.

1. Unplug the air purifier from the power outlet.
2. Open the filter compartment cover (refer to your specific model's design for access).
3. Remove the old filters. Dispose of them according to local regulations.
4. Unwrap new genuine Tefal replacement filters from their protective packaging.
5. Insert the new filters in the correct order: Pre-filter, Active Carbon Filter, HEPA Filter, NanoCaptur™ Filter. Ensure they are securely seated.
6. Close the filter compartment cover.
7. Plug in the air purifier and press the reset button (if available, or hold the power button for a few seconds) to reset the filter change indicator.

Note: Replacement filters are essential for maintaining purification efficiency. Refer to Tefal's official website or authorized dealers for purchasing genuine replacement filters.

7. TROUBLESHOOTING

Problem	Solution
Appliance does not turn on.	Check if the power cord is securely plugged into the outlet. Ensure the outlet is functional.
Airflow is weak.	Clean or replace filters as indicated. Ensure no obstructions around the grilles.
Unusual noise.	Unplug and check for any foreign objects. Reinstall filters correctly.
Filter Change Indicator remains on after replacement.	Refer to the manual for specific filter reset instructions (usually holding a button for a few seconds).

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	Intense Pure Air Basic
Brand	Tefal
Colour	White and Blue
Purification Method	HEPA filter type, Active Carbon, NanoCaptur™
Filtration Levels	4 (Pre-filter, Active Carbon, HEPA, NanoCaptur™)
Contaminant Filtration Capability	Up to 99.97% pollutants
Special Feature	Patented NanoCaptur™ technology for Formaldehyde destruction
Coverage Area	377 sq. ft. / 35 sq. mtrs.
Wattage	30 Watts
Noise Level	22-45 dB(A)
Controller Type	Touch
Dimensions (LxWxH)	30 x 28.5 x 54 Centimeters
Item Weight	5 kg 700 g

9. WARRANTY AND SUPPORT

Your Tefal Intense Pure Air Basic Air Purifier comes with a **2-year warranty** on the product from the date of purchase. Please retain your purchase receipt and the instruction manual cum warranty card for any warranty claims.

For technical assistance, service, or to purchase genuine replacement parts and filters, please contact

Tefal customer support through their official website or authorized service centers.

Manufacturer: Tefal