

[Manuals.plus](#) /

› [CLEANmaxx](#) /

› CLEANmaxx Automatic Shirt Ironing Machine User Manual

CLEANmaxx 00384

CLEANmaxx Automatic Shirt Ironing Machine User Manual

Model: 00384

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always connect the appliance to a grounded power outlet.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from children and pets.
- Do not operate the appliance with a damaged cord or plug.
- Ensure proper ventilation during operation.
- Do not use the appliance for purposes other than drying and ironing textiles as described in this manual.
- Always unplug the appliance when not in use and before cleaning.
- Observe the care labels on your garments. Do not use on delicate fabrics like wool that are not suitable for tumble drying or high heat.

2. PRODUCT OVERVIEW

The CLEANmaxx Automatic Shirt Ironing Machine is designed to dry and smooth shirts, blouses, and other suitable garments quickly and efficiently.



This image shows the CLEANmaxx Automatic Shirt Ironing Machine. A dark blue long-sleeved shirt is placed over the white inflatable balloon body, which sits atop the main white base unit. The base unit has a central control dial and air vents.

Components:

- Main Unit (Base)
- Inflatable Balloon Body
- Clamps (for securing garments)
- Power Cord

3. SETUP

The CLEANmaxx Automatic Shirt Ironing Machine is designed for easy assembly.

1. Unpack all components from the packaging.
2. Place the main unit on a stable, flat, and heat-resistant surface. Ensure there is adequate space around the unit for air circulation.
3. Attach the inflatable balloon body securely to the main unit according to the assembly instructions provided in the packaging.
4. Ensure the power cord is not tangled or obstructed.

4. OPERATING INSTRUCTIONS

Follow these steps for optimal drying and smoothing results:

1. **Prepare the Garment:** Ensure the shirt or blouse is spin-dried (e.g., from a washing machine) but still slightly damp. Do not use on completely dry garments for best results.
2. **Place on Balloon Body:** Carefully pull the garment over the inflatable balloon body. Ensure it is centered and smooth.
3. **Secure with Clamps:** Use the provided clamps to secure the bottom hem of the garment to the base of the balloon body. This helps to keep the garment taut and prevents it from slipping.
4. **Plug In:** Connect the power cord to a suitable electrical outlet.
5. **Set Timer:** Use the control dial or buttons on the main unit to set the desired operating time. The duration will depend on the garment's material and dampness.
6. **Start Operation:** The balloon body will inflate, and warm air will be released, drying and smoothing the garment simultaneously.
7. **Completion:** Once the timer finishes, the appliance will stop. Carefully remove the garment, which should now be dry and largely wrinkle-free.

Suitable Garments:

- Shirts
- Blouses
- T-shirts
- Sweaters (if suitable for tumble drying)

Always check the garment's care label before use.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your CLEANmaxx appliance.

- **Cleaning:** Before cleaning, always unplug the appliance and allow it to cool completely. Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Balloon Body:** The inflatable balloon body can be wiped clean with a damp cloth. Ensure it is completely dry before storage.
- **Storage:** Store the appliance in a cool, dry place, away from direct sunlight and moisture. If disassembling for storage, ensure all parts are clean and dry.
- **Air Vents:** Periodically check the air vents on the main unit for dust or lint accumulation and clean if necessary to ensure proper airflow.

6. TROUBLESHOOTING

If you encounter issues with your CLEANmaxx Automatic Shirt Ironing Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet fault; appliance fault.	Check power cord connection. Try a different outlet. If problem persists, contact support.
Garments are not dry or smooth.	Insufficient operating time; garment too wet; garment material unsuitable.	Increase drying time. Ensure garment is spin-dried. Check care label for suitability.

Problem	Possible Cause	Solution
Appliance is excessively noisy.	Normal operation sound; obstruction in fan.	Some operating noise is normal. Check for any obstructions in air vents.
Garment slips off the balloon body.	Not properly secured with clamps.	Ensure garment is taut and securely fastened with all clamps.

7. SPECIFICATIONS

Feature	Detail
Brand	CLEANmaxx
Model Number	00384
Color	White
Dimensions (L x W x H)	33 x 24.5 x 47 cm
Weight	2 Kilograms
Power	1800 Watts
Material	Plastic

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

Customer Support:

If you have any questions, require technical assistance, or need to report a problem that cannot be resolved using the troubleshooting guide, please contact CLEANmaxx customer support through their official website or the contact details provided in your product packaging.

Please have your model number (00384) and purchase details ready when contacting support.

© 2024 CLEANmaxx. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question