

[Manuals.plus](#) /

> [Copper Chef](#) /

> Copper Chef PRO XL Crisper Tray and Sheet Instruction Manual

Copper Chef 752356819330

Copper Chef PRO XL Crisper Tray and Sheet Instruction Manual

Model: 752356819330

INTRODUCTION

The Copper Chef PRO XL Crisper Tray and Sheet provides an innovative method for cooking a variety of foods with reduced oil. This system utilizes a unique design to circulate heated air around your food, ensuring even cooking and crispy results. It is designed for oven use, offering a convenient and efficient way to prepare meals.

PRODUCT COMPONENTS

Your Copper Chef PRO XL set includes two primary components:

- **Crisper Basket:** A stainless steel mesh tray with a chef-grade nonstick coating. Dimensions: 12 inches (L) x 18 inches (W).
- **Cookie Sheet/Drip Pan:** An aluminum pan with a chef-grade nonstick coating. Dimensions: 13 inches (L) x 19 inches (W).



Image: The Copper Chef PRO XL Crisper Basket placed on the Drip Pan, shown with various uncooked vegetables.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash both the crisper basket and the cookie sheet with warm, soapy water. Rinse thoroughly and dry completely.
3. **Assembly:** Place the crisper basket directly onto the cookie sheet. The cookie sheet acts as a drip pan to catch any crumbs, drips, or splatters, helping to keep your oven clean.

OPERATING INSTRUCTIONS

The Copper Chef PRO XL is designed for oven use to achieve crispy, evenly cooked results without the need for excessive oil.

1. **Preparation:** Place your food directly onto the crisper basket. The nonstick coating typically eliminates the need for oil, butter, or grease. For certain recipes or desired browning, a light mist of cooking spray can be used.
2. **Oven Placement:** Place the assembled crisper basket and cookie sheet into a preheated oven. The set is oven safe up to 850°F (454°C).
3. **Cooking Process:** The elevated mesh design allows heated air to circulate 360 degrees around your food, cooking all sides simultaneously. This often eliminates the need to flip or turn food during cooking.
4. **Versatility:** This system is suitable for roasting, frying, and baking. It can be used for items such as chicken, fish, bacon, vegetables, french fries, onion rings, and more. The cookie sheet can also be used independently for baking pastries.
5. **Monitoring:** Always monitor your food during cooking to achieve desired doneness and crispness. Cooking times may vary based on oven type and food quantity.



Image: Cooked salmon, asparagus, and corn on the cob arranged on the Copper Chef PRO XL Crisper Basket and Drip Pan.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Copper Chef PRO XL set.

- **Dishwasher Safe:** Both the crisper basket and the cookie sheet are dishwasher safe for convenient cleaning.
- **Hand Washing:** For best results and to preserve the nonstick coating, hand washing with warm, soapy water and a soft sponge is recommended. Avoid abrasive scrubbers or harsh detergents that could damage the nonstick surface.
- **Stubborn Residue:** If food residue is stubborn, allow the pan to soak in warm, soapy water for a short period before cleaning.
- **Storage:** Ensure both components are completely dry before storing to prevent water spots or potential damage.

TROUBLESHOOTING

If you encounter issues while using your Copper Chef PRO XL, consider the following:

- **Food Not Crisping Evenly:** Ensure your oven is preheated to the correct temperature. Avoid overcrowding the crisper basket, as this can restrict air circulation. For optimal crisping, ensure there is space around each food item.
- **Food Sticking:** While the coating is nonstick, extreme temperatures or certain food types might occasionally cause minor sticking. Ensure the surface is clean before use. A very light application of cooking oil or spray can be used if necessary.
- **Smoke in Oven:** Excessive smoke can occur if there is accumulated grease or food residue on the pan or in the oven. Ensure both the crisper and oven are clean before use.

SPECIFICATIONS

Brand	Copper Chef
Model Number	752356819330
Crisper Basket Dimensions	12 inches (L) x 18 inches (W)
Cookie Sheet Dimensions	13 inches (L) x 19 inches (W)
Crisper Basket Material	Stainless Steel with Nonstick Coating
Cookie Sheet Material	Aluminum with Nonstick Coating
Oven Safe Temperature	Up to 850°F (454°C)
Dishwasher Safe	Yes
Item Weight	3.6 Pounds

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Copper Chef website.

You can find more information and contact support through the official Copper Chef store: [Copper Chef Store](#).