

RCECAOSHAN YKR-H/002E

RCECAOSHAN YKR-H/002E Air Conditioner Remote Control

Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the RCECAOSHAN YKR-H/002E replacement air conditioner remote control. It is designed to help you set up, operate, and maintain your remote control effectively. This remote is compatible with various Klimaire air conditioner models, including KSIA009-H216-I, KSIA012-H216-I, KSIA018-H216-I, and KSIA024-H216-I.

Please read this manual carefully before using the remote control to ensure proper functionality and to avoid any operational issues.

PRODUCT OVERVIEW

The RCECAOSHAN YKR-H/002E remote control features a clear display and intuitive buttons for easy operation of your air conditioner. Below is an image of the remote control with a description of its key components.



Image: Front view of the RCECAOSHAN YKR-H/002E air conditioner remote control. It is white with a rectangular LCD screen on the left side. The screen displays "SET TEMPERATURE(°C)" and indicators for "AUTO", "COOL", "DRY", "HEAT" modes, and "FAN HIGH MID LOW" speeds. To the right of the screen are various gray buttons and a prominent red "ON/OFF" button. Other buttons include "SET", "MODE", "SLEEP", "SWING", "CLEAN", "FRESH", "DUST", "HEALTH", "FUNGUSPROOF", "SCREEN", "SPEED", "STRONG", "FEELING", and "TIMER".

Button Functions:

- **ON/OFF:** Powers the air conditioner on or off.
- **SET TEMPERATURE (Up/Down Arrows):** Adjusts the desired temperature. The display shows temperature in Celsius.
- **MODE:** Cycles through operating modes: AUTO, COOL, DRY, HEAT.
- **FAN (Speed):** Adjusts fan speed: HIGH, MID, LOW.
- **SLEEP:** Activates or deactivates sleep mode for comfortable night operation.
- **SWING:** Controls the louver swing function for air distribution.
- **CLEAN:** Initiates a self-cleaning function (if supported by AC unit).
- **FRESH:** Activates the fresh air function (if supported by AC unit).
- **DUST:** Activates a dust removal function (if supported by AC unit).
- **HEALTH:** Activates health-related functions (e.g., ionizer, if supported by AC unit).
- **FUNGUSPROOF:** Activates a mold/fungus prevention function (if supported by AC unit).
- **SCREEN:** Controls the display on the air conditioner unit.
- **SPEED:** Another button for fan speed adjustment.
- **STRONG:** Activates a powerful cooling/heating mode for rapid temperature change.
- **FEELING:** Activates a "Follow Me" or "I Feel" function, sensing temperature at the remote's location.
- **TIMER:** Sets the timer for automatic on/off operations.

SETUP

Battery Installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: This remote control does not include batteries. Please purchase two AAA batteries separately.

Initial Use:

Once batteries are installed, the remote control is ready for use. Point the remote directly at the air conditioner unit's receiver. No complex pairing is typically required for this replacement remote.

OPERATING INSTRUCTIONS

Basic Operation:

- **Power On/Off:** Press the **ON/OFF** button to turn the air conditioner on or off.
- **Selecting Mode:** Press the **MODE** button repeatedly to cycle through the available operating modes:
 - **AUTO:** The unit automatically selects the operating mode (Cool, Heat, Fan) based on the room temperature.
 - **COOL:** Provides cooling.
 - **DRY:** Dehumidifies the room.
 - **HEAT:** Provides heating (if your AC unit supports heating).
- **Adjusting Temperature:** Use the **SET TEMPERATURE** up (▲) and down (▼) arrow buttons to increase or decrease the desired temperature. The display shows temperature in Celsius.
- **Adjusting Fan Speed:** Press the **FAN** or **SPEED** button repeatedly to select the desired fan speed: HIGH, MID, LOW.

Advanced Functions:

- **SLEEP Mode:** Press the **SLEEP** button to activate a quiet, energy-saving mode for comfortable sleep. The temperature may adjust automatically.
- **SWING Function:** Press the **SWING** button to activate or deactivate the automatic louver swing, which helps distribute air evenly.
- **TIMER Function:** Press the **TIMER** button to set a specific time for the air conditioner to turn on or off. Refer to your air conditioner's main manual for detailed timer programming.
- **STRONG Mode:** Press the **STRONG** button for rapid cooling or heating. This mode typically operates at maximum fan speed and compressor output.
- **FEELING Function:** Activates a function where the remote control senses the ambient temperature at its location and adjusts the air conditioner's operation accordingly.
- **CLEAN, FRESH, DUST, HEALTH, FUNGUSPROOF Functions:** These buttons activate specific

features on your air conditioner unit, such as self-cleaning, air purification, or mold prevention. Availability and specific operation depend on your air conditioner model.

- **SCREEN Button:** This button may control the display lights or information shown on your air conditioner unit.

Temperature Display Note: The remote control's display shows temperature in Celsius. However, it is designed to work with Fahrenheit air conditioners as well. The air conditioner unit will interpret the signal correctly based on its internal settings.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote control's display becomes dim or when the remote stops responding consistently. Always replace both batteries at the same time with new AAA batteries.

Cleaning the Remote Control:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control not communicating with AC unit.	Obstruction between remote and AC unit; remote too far away; AC unit's IR receiver blocked.	Ensure a clear line of sight to the AC unit. Move closer to the unit. Check if anything is blocking the AC unit's IR receiver.
AC unit not responding to specific functions.	Function not supported by your specific AC model.	Refer to your air conditioner's original manual to confirm supported features.
Temperature display is in Celsius, but AC unit uses Fahrenheit.	Remote displays Celsius by design.	This is normal. The remote sends the correct signal, and the AC unit will operate according to its internal Fahrenheit settings. No action required.

SPECIFICATIONS

- **Brand:** RCECAOSHAN

- **Model Numbers:** YKR-H/002E, YK-H/002E
- **Compatible Air Conditioner Models:** KSIA009-H216-I, KSIA012-H216-I, KSIA018-H216-I, KSIA024-H216-I
- **Connectivity Technology:** Infrared (IR)
- **Maximum Range:** 10 Meters (approx. 33 feet)
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Display:** LCD, showing temperature in Celsius

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. For any warranty claims, technical support, or further inquiries, please contact the seller directly through your purchase platform.

When contacting support, please have your purchase details and the remote control model number (YKR-H/002E) available.