

[Manuals.plus](#) /

> [Aigostar](#) /

> Aigostar Tummie 33JIE Portable Oil-Filled Radiator User Manual

Aigostar 330000JIE

Aigostar Tummie 33JIE Portable Oil-Filled Radiator

Model: 330000JIE

1. INTRODUCTION

Thank you for choosing the Aigostar Tummie 33JIE Portable Oil-Filled Radiator. This manual provides important information for the safe and efficient operation of your new appliance. Please read it thoroughly before use and keep it for future reference.

This oil-filled radiator is designed to provide comfortable and consistent heat for indoor spaces. It features 11 heating elements, multiple power settings, and an adjustable thermostat for optimal temperature control.





Image: The Aigostar Tummie 33JIE Portable Oil-Filled Radiator, showcasing its sleek black design, 11 heating fins, and integrated wheels for easy mobility.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic precautions.

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left

operating and unattended.

- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- The heater is equipped with an automatic safety system that shuts off the unit if it is tilted more than 45 degrees or if it overheats. If this occurs, unplug the unit and allow it to cool down before attempting to restart.



Image: Visual representation of the radiator's safety features, including automatic shutdown upon tilting and overheating protection, indicated by a thermometer icon.

3. PARTS AND FEATURES

Familiarize yourself with the components of your Aigostar Tummie 33JIE radiator:

- **Heating Elements:** 11 U-shaped elements for efficient heat distribution.
- **Control Panel:** Includes power indicator light, thermostat dial, and power setting dial.
- **Thermostat Dial:** For adjusting desired room temperature (MIN to MAX).
- **Power Setting Dial:** Selects between Low, Mid, and High heat output.
- **Casters:** 360° rotating wheels for easy movement.
- **Cord Storage:** Convenient area to wrap and store the power cord when not in use.



Image: Detailed view of the radiator's control panel and base, highlighting the adjustable thermostat, three heat settings, 360° rotating casters, and integrated power line storage.

4. SETUP

Your Aigostar Tummie 33JIE radiator comes with casters that need to be attached before first use. Follow these steps:

1. Carefully unpack the radiator and ensure all components are present.
2. Turn the radiator upside down on a soft, non-abrasive surface to avoid scratching the finish.
3. Locate the caster assemblies. Each assembly typically consists of a U-shaped bracket and two wheels.
4. Align the U-shaped brackets with the designated slots on the bottom of the radiator, usually at each end.
5. Insert the threaded rods of the casters into the holes on the brackets and secure them with the provided nuts or clips. Ensure they are firmly attached.
6. Once both caster assemblies are securely attached, carefully turn the radiator upright.

7. Place the radiator on a firm, level surface, away from curtains, furniture, or other combustible materials. Ensure there is at least 3 feet (0.9 m) of clear space around the heater.
8. Unwind the power cord completely before plugging it into a 240V AC electrical outlet.

Note: While the wheels are designed for mobility, they are made of hard plastic. Exercise caution when moving the radiator on delicate surfaces like polished parquet floors to prevent scratches.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your Aigostar Tummie 33JIE radiator:

1. **Plug In:** Ensure the radiator is placed on a stable surface and plug the power cord into a standard 240V AC wall outlet.
2. **Set Power Level:** Turn the Power Setting Dial to your desired heat output:
 - **LOW:** For minimal heat or maintaining temperature.
 - **MID:** For moderate heating.
 - **HIGH:** For maximum heat output (2300 Watts) and rapid heating of areas up to 20-24m².
3. **Adjust Thermostat:** Turn the Thermostat Dial to your desired temperature setting.
 - Turn the dial towards **MAX** for higher temperatures.
 - Turn the dial towards **MIN** for lower temperatures.

The radiator will cycle on and off to maintain the set temperature. When the room temperature falls below the set temperature, the heater will turn on. When the room temperature rises above the set temperature, the heater will turn off.

4. **Power Indicator Light:** The power indicator light will illuminate when the heater is actively heating.
5. **To Turn Off:** Turn the Power Setting Dial to the "OFF" position and unplug the radiator from the wall outlet.

Room temperature
<
Setting temperature
Start working

Room temperature
>
Setting temperature
Stop working



Image: Illustration demonstrating the thermostat's function, where the radiator activates when the room temperature is below the set point and deactivates when it exceeds the set point.



11 U-shaped Heaters

Rapid Heating

Applicable area 20-24m²

Image: Visual explanation of the 11 U-shaped heating elements, emphasizing rapid heating capability and suitability for rooms sized 20-24 square meters.

6. MAINTENANCE

Proper maintenance ensures the longevity and efficient operation of your radiator:

- **Cleaning:**

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater.
- Do not use abrasive cleaners or solvents as they may damage the finish.
- Do not immerse the heater in water or allow water to drip into the interior of the heater.

- **Storage:**

- When not in use, store the heater in a cool, dry place.
- Wrap the power cord neatly around the cord storage area to prevent damage.

- It is recommended to store the heater in its original packaging to protect it from dust and damage.

7. TROUBLESHOOTING

If your radiator is not operating correctly, consult the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in securely.	Ensure plug is fully inserted into a 240V outlet. Turn power setting dial to LOW, MID, or HIGH. Increase thermostat setting. Unplug the heater, allow it to cool for 10-15 minutes, then plug it back in. Ensure it is on a stable, level surface.
	Power setting dial is OFF.	
	Thermostat set too low.	
	Overheat or tilt safety switch activated.	
Heater produces no heat or insufficient heat.	Power setting too low.	Increase power setting to MID or HIGH. Increase thermostat setting. For larger rooms (over 24m ²), consider using an additional heating unit.
	Thermostat set too low.	
	Room size exceeds recommended area.	
Clicking noise from thermostat.	Normal operation.	This is the sound of the thermostat cycling on and off to maintain the set temperature. It is normal and not a defect.

8. SPECIFICATIONS

Feature	Detail
Brand	Aigostar
Model Number	330000JIE (AIG-8433325504304)
Dimensions (L x W x H)	27.99 x 53.01 x 64.01 cm (11.02 x 20.87 x 25.20 inches)
Weight	11.23 kg (24.76 lbs)
Power Output	2300 Watts (Max)
Voltage	240 Volts
Power Levels	3 (Low, Mid, High)
Heating Elements	11 U-shaped fins
Heating Method	Oil-filled, Convection
Recommended Area	20-24 m ²

Feature	Detail
Safety Features	Overheat Protection, Tilt-over Safety Switch
Usage	Indoor use only



Image: Technical drawing illustrating the precise dimensions of the radiator, including its height, width, and depth, for accurate placement and space planning.

9. WARRANTY AND SUPPORT

Information regarding warranty coverage and customer support for Aigostar products is typically provided with the product packaging or available on the official Aigostar website. Please refer to these resources for details on:

- Warranty period and terms.
- How to register your product.
- Contact information for technical support and customer service.
- Information on spare parts availability (Note: Product specifications indicate "Information unavailable on spare parts").

For the most up-to-date information, please visit the official Aigostar website or contact their customer service directly.

© 2024 Aigostar. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question