

Remax RB-S10

Remax RB-S10 Sport In-ear Wireless Headphones User Manual

Model: RB-S10

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Remax RB-S10 Sport In-ear Wireless Headphones. Please read this manual thoroughly before using the product and retain it for future reference.

2. PRODUCT OVERVIEW

2.1 Package Contents

Upon unpacking, ensure all items listed below are present:

- Remax RB-S10 Wireless Headphones
- USB Charging Cable
- Multiple pairs of Eartips (S, M, L)
- User Manual



Image: The Remax RB-S10 headphones, charging cable, and various eartip sizes are neatly arranged within their packaging.

2.2 Headphone Features

- **Wireless Connectivity:** Connects to devices via Bluetooth.
- **In-ear Design:** Provides a secure and comfortable fit for active use.
- **Magnetic Adsorption:** Earbuds can magnetically attach to each other for secure storage around the neck.
- **Integrated Microphone:** Allows for hands-free calling.
- **Inline Remote Control:** For managing music playback and calls.
- **Sweatproof Design:** Suitable for sports and exercise.

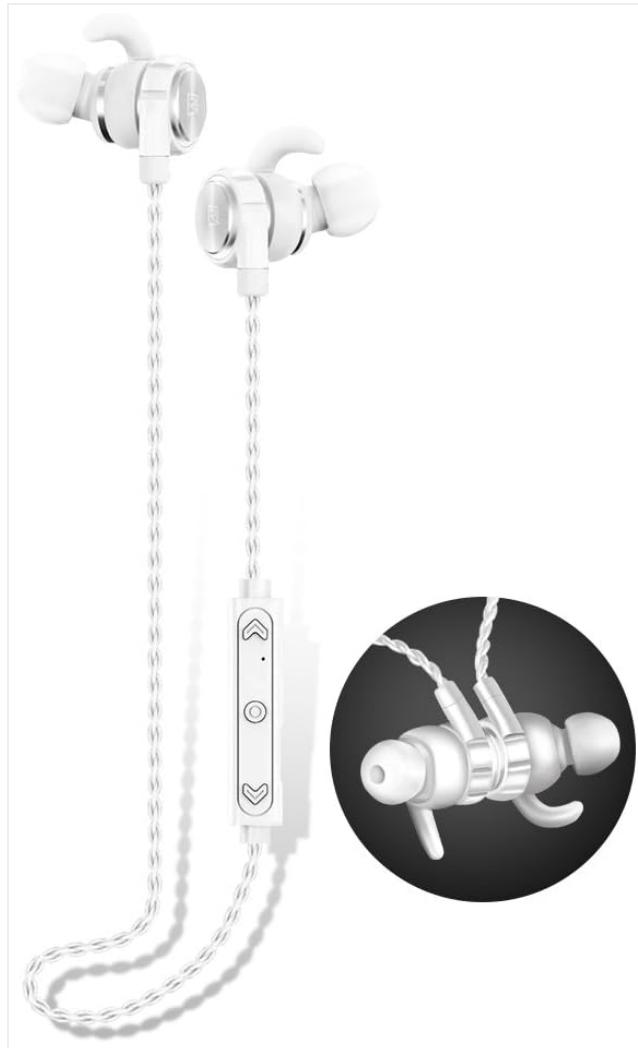


Image: A clear view of the Remax RB-S10 wireless headphones, showcasing the earbuds, braided cable, and inline remote control.

3. SETUP

3.1 Charging the Headphones

The RB-S10 headphones are powered by a rechargeable battery. Before first use, fully charge the headphones.

1. Connect the provided USB charging cable to the charging port on the inline remote.
2. Connect the other end of the USB cable to a USB power source (e.g., computer USB port, wall adapter).
3. The indicator light on the remote will illuminate during charging and change color or turn off when fully charged.

3.2 Bluetooth Pairing

To connect your headphones to a device (e.g., smartphone, tablet):

1. Ensure the headphones are charged and turned off.

2. Press and hold the Multi-function button (center button on the inline remote) until the indicator light flashes red and blue, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "Remax RB-S10" from the list of found devices.
5. Once paired, the indicator light will typically flash blue slowly or turn off, and you may hear an audible confirmation.

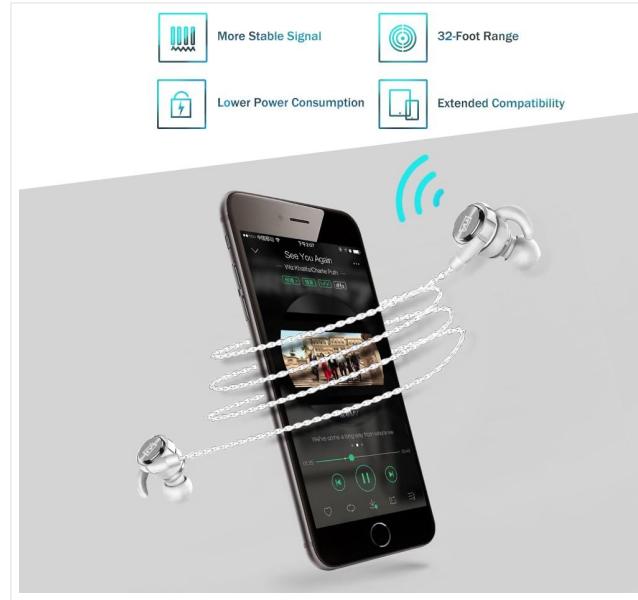


Image: The Remax RB-S10 headphones are shown wirelessly connected to a smartphone, illustrating active use.

4. OPERATING INSTRUCTIONS

4.1 Inline Remote Control

The inline remote provides control over various functions:



Image: A detailed view of the inline remote, highlighting the Volume Up (+), Volume Down (-), and Multi-function (center) buttons.

- **Multi-function Button (Center):**

- Press and hold: Power On/Off, Enter Pairing Mode.

- Single press: Play/Pause music, Answer/End calls.
- Double press: Redial last number.

- **Volume Up (+) Button:**

- Single press: Increase volume.
- Press and hold: Next track.

- **Volume Down (-) Button:**

- Single press: Decrease volume.
- Press and hold: Previous track.

4.2 Wearing the Headphones

Select the appropriate eartip size for a comfortable and secure fit. The headphones are designed to be worn with the cable behind your neck.



Image: This illustration demonstrates the correct fit of the earbud in the ear and highlights the availability of small, medium, and large eartips for optimal comfort.

4.3 Magnetic Adsorption Feature

When not in use, the earbuds can be magnetically attached to each other, forming a necklace-like loop. This prevents tangling and ensures the headphones remain securely around your neck.



Image: The magnetic design allows the earbuds to connect, enabling them to be worn securely around the neck when not actively listening.

5. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. Utilize the magnetic feature to keep the earbuds together and prevent cable tangling.
- **Sweat Resistance:** The headphones are designed to be sweatproof, making them suitable for workouts. However, avoid submerging them in water.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly.

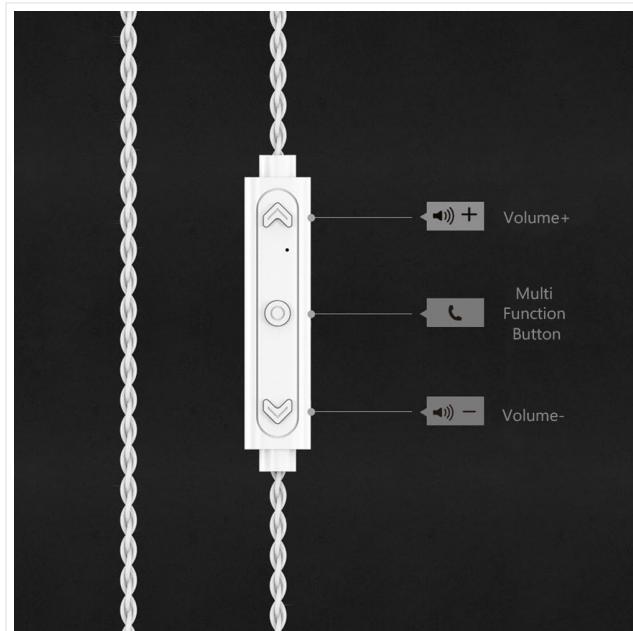


Image: Individuals engaged in physical activity while wearing the headphones, demonstrating their suitability for sports due to their sweatproof design.

6. TROUBLESHOOTING

If you encounter issues with your Remax RB-S10 headphones, refer to the following common solutions:

- **Headphones not turning on:** Ensure the battery is charged. Connect to a power source and try again.

- **Cannot pair with device:**

- Ensure headphones are in pairing mode (flashing red and blue light).
- Turn off and on your device's Bluetooth.
- Move the headphones closer to your device.
- Clear previous Bluetooth connections on your device if necessary.

- **No sound or low volume:**

- Increase the volume on both the headphones and your connected device.
- Ensure the headphones are properly paired and connected.
- Check if the audio source is playing.

- **Intermittent connection:**

- Ensure there are no obstructions between the headphones and your device.
- Move away from other wireless devices that may cause interference.
- Ensure the headphones are within the effective Bluetooth range (approximately 10 meters or 32 feet).


7. SPECIFICATIONS

| | |
|--------------------------------|---------------------------------------|
| Model Name | RB-S10 |
| Connectivity Technology | Wireless (Bluetooth) |
| Headphones Form Factor | In Ear |
| Material | Plastic, Rubber |
| Compatible Devices | All Bluetooth-enabled devices |
| Control Type | Volume Control, Multi-function Button |
| Cable Feature | Wireless (no direct cable to device) |
| Color | White |
| Product Dimensions (Packaging) | 33 x 7 x 6 cm; 333 g |

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Remax products typically come with a limited warranty against manufacturing defects.

Related Documents - RB-S10
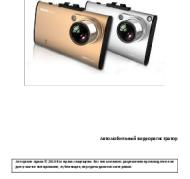
| | |
|---|--|
|  <p>REMEX 音量 Stereofonni bezprzewodowe słuchawki Remax Marshmallow TWS-19 NAVOD K OBSLUZE</p> | <p>Remax Marshmallow TWS-19 Wireless Earbuds: User Manual, Features, and Safety Guide</p> <p>Get detailed instructions for your Remax Marshmallow TWS-19 wireless earbuds. This guide covers setup, pairing, controls, battery management, safety precautions, and troubleshooting.</p> |
|  | <p>REMAX SleepBuds Z2 True Wireless Music Earbuds - User Manual</p> <p>Comprehensive user manual for REMAX SleepBuds Z2 Dreamer Series True Wireless Music Earbuds, covering features, specifications, operation, troubleshooting, and warranty information.</p> |
|  | <p>Remax RB-M52 Alarm Speaker User Manual</p> <p>User manual for the Remax RB-M52 Alarm Speaker, detailing its features, functions, and operation, including Bluetooth connectivity, clock and alarm settings, and audio modes.</p> |
|  <p>REMEX CX-01 Руководство пользователя Автомобильный видеорегистратор Instruction manual for the car video recorder</p> | <p>REMAX CX-01 Руководство пользователя: Особенности, установка и эксплуатация</p> <p>Полное руководство пользователя для автомобильного видеорегистратора REMAX CX-01. Ознакомьтесь с функциями, комплектацией, установкой, рекомендациями и инструкциями по эксплуатации.</p> |
|  <p>SMART WATCH Instrukcja obsługi</p> | <p>REMAX WATCH8 Smartwatch User Manual and Features</p> <p>Comprehensive user manual for the REMAX WATCH8 Smartwatch. Learn about its features, Bluetooth connectivity, app setup, health monitoring, sports tracking, and more. Includes technical specifications and safety precautions.</p> |
|  <p>REMEX RP3 Dyktafon Remax, RP3 Instrukcja obsługi</p> | <p>Instrukcja obsługi Dyktafonu Remax RP3</p> <p>Szczegółowy przewodnik użytkownika dla dyktafonu Remax RP3, zawierający informacje o specyfikacji, funkcjach, obsłudze nagrywania i odtwarzania, muzyki, ustawieniach oraz konserwacji.</p> |