

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit EWE 61252 W EU Front-Load Washing Machine User Manual

Indesit 869990887680

Indesit EWE 61252 W EU Front-Load Washing Machine User Manual

Model: EWE 61252 W EU (869990887680)

INTRODUCTION

Welcome to the user manual for your new Indesit EWE 61252 W EU Front-Load Washing Machine. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before using the washing machine to ensure optimal performance and longevity.

SETUP

Unpacking and Placement

Carefully remove all packaging materials, including any transport bolts or internal packing from the drum. Ensure no parts are left inside the drum before first use.



Image: Front view of the Indesit EWE 61252 W EU washing machine, showing the control panel, detergent drawer, and front-loading door.

Place the washing machine on a flat, stable, and level surface. Ensure there is adequate space around the appliance for proper ventilation and ease of maintenance. Avoid placing it in areas with extreme temperatures or high humidity.



Image: Side view of the Indesit EWE 61252 W EU washing machine with key dimensions indicated: 85cm height, 59.5cm width, and 51.7cm depth.

Electrical Connection

- Connect the washing machine to a properly grounded electrical outlet.
- Ensure the power supply matches the appliance's requirements: 220-240V AC, 50Hz.
- The connected load is 1850W, and the required current is 10A.
- The power cable length is 1.7 meters.

Water Connection

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose correctly to allow for proper water discharge into a sink or standpipe. Ensure it is not kinked or obstructed.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel is located on the front of the machine and features a combination of buttons and a rotary dial for program selection. An integrated display provides information about the selected cycle and remaining time.

Loading the Washing Machine

- Open the front-load door, which is hinged on the left.
- Load laundry into the drum, ensuring not to exceed the maximum 6 kg capacity. Do not overload the machine, as this can affect washing performance and cause excessive vibration.
- Add the appropriate amount of detergent and fabric softener to the designated compartments in the dispenser drawer.

Selecting a Wash Program

- Turn the rotary dial to select the desired wash program based on the fabric type and soil level.
- Use the control buttons to adjust additional options such as spin speed (up to 1200 RPM) or other special functions if available.

Starting a Wash Cycle

- Once the program and options are selected, press the Start button to begin the wash cycle.
- The typical cycle time is approximately 190 minutes, depending on the selected program and options.
- The machine is equipped with an automatic load control system to optimize water and energy consumption, and an anti-foam system to prevent excessive suds.

MAINTENANCE

Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer to prevent the buildup of detergent and fabric softener residues. Rinse it under running water and dry thoroughly before reinserting.

Drum Cleaning

The drum is made of plastic. To maintain hygiene and prevent odors, periodically run a maintenance wash cycle (e.g., a

hot wash with no laundry and a small amount of detergent or a specialized washing machine cleaner).

Filter Cleaning

The pump filter should be cleaned periodically to ensure proper drainage and prevent blockages. Refer to the detailed instructions in the full product manual for the exact location and procedure for cleaning the pump filter.

TROUBLESHOOTING

This section provides solutions for common issues you might encounter. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
Machine does not start	No power supply; Door not properly closed; Program not selected.	Check power connection and fuse; Ensure the door is firmly latched; Select a wash program.
Excessive vibration or noise	Uneven load distribution; Machine not level; Transport bolts not removed.	Redistribute laundry evenly in the drum; Adjust the machine's feet to ensure it is level and stable; Ensure all transport bolts are removed before operation. The plastic feet may require frequent adjustment to prevent slipping during high spin cycles.
Water not draining	Drain hose kinked or blocked; Pump filter clogged.	Check the drain hose for kinks or obstructions; Clean the pump filter as per the maintenance instructions.
Water leaking	Loose hose connections; Detergent dispenser overflowing.	Check and tighten all water inlet and drain hose connections; Do not overfill the detergent dispenser.

SPECIFICATIONS

Technical Data

- **Model Name:** EWE 61252 W EU
- **Model Number:** 869990887680
- **Type:** Freestanding, Front-Load Washing Machine
- **Color:** White
- **Dimensions (H x W x D):** 850 mm x 595 mm x 517 mm (approximately 33.5 x 23.4 x 20.4 inches)
- **Weight:** 63.5 kg (approximately 140 lbs)
- **Load Capacity:** 6 kg
- **Maximum Spin Speed:** 1200 RPM

- **Energy Efficiency Class:** A++
- **Washing Performance Class:** B
- **Annual Energy Consumption:** 173 kWh
- **Energy Consumption per Cycle:** 0.93 kWh
- **Annual Water Consumption:** 8400 L
- **Drum Volume:** 46 L
- **Noise Level (Spin):** 80 dB
- **Connected Load:** 1850 W
- **Voltage:** 220-240V AC
- **Frequency:** 50 Hz
- **Cable Length:** 1.7 m
- **Drum Material:** Plastic
- **Control Type:** Buttons, Rotary Dial
- **Door Hinge:** Left
- **Special Features:** Built-in display, Automatic load control, Anti-foam system, Adjustable spin speed.

WARRANTY AND SUPPORT

Warranty Information

For detailed warranty terms and conditions, please refer to the warranty card included with your product at the time of purchase. You may also find comprehensive warranty information on the official Indesit website.

Customer Support

Should you require technical assistance, spare parts, or have any questions regarding your Indesit washing machine, please contact Indesit customer service. Contact information can typically be found on the Indesit website or in the documentation provided with your appliance.

Official Indesit Website: www.indesit.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B071FXVWZB>

More documents and user manuals: <https://manuals.plus/>