Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > eKids /
- › eKids Spiderman Wireless Bluetooth Headphones User Manual (Model SM-B50.Fxv8)

eKids SM-B50.Fxv8

eKids Spiderman Wireless Bluetooth Headphones

Model: SM-B50.Fxv8

User Manual

1. Introduction

Thank you for choosing the eKids Spiderman Wireless Bluetooth Headphones. These headphones are designed to provide a safe and enjoyable audio experience for children, featuring volume-limited listening, a built-in microphone, and both wireless and wired connectivity options. This manual will guide you through the setup, operation, and maintenance of your new headphones.



Image 1.1: eKids Spiderman Wireless Bluetooth Headphones

2. What's in the Box

- eKids Spiderman Wireless Bluetooth Headphones
- USB Charging Cable
- 3.5mm Audio Cable

3. Product Overview

Familiarize yourself with the various parts and controls of your headphones:



Image 3.1: Headphone Controls and Ports

- 1. Play/Pause, Power On/Off, Hang Up/Answer Phone Button: Multifunction button for controlling playback and calls
- 2. **USB Charging Port:** For connecting the USB charging cable.
- 3. Aux Jack: For connecting the 3.5mm audio cable for wired listening.
- 4. Microphone: Built-in for voice communication.
- 5. Volume Up/Skip Forward Button: Press for volume up, hold to skip forward.
- 6. Volume Down/Skip Back Button: Press for volume down, hold to skip back.
- 7. **Power/Pairing/Charging LED Indicators:** Shows power status, Bluetooth pairing status, and charging status.

The headphones feature an adjustable headband and soft ear cushions for maximum comfort. The design is also foldable for convenient travel and storage.



Image 3.2: Foldable Design for Portability

4. Setup

4.1. Charging the Headphones

Before first use, fully charge the headphones. A built-in rechargeable battery provides up to 18 hours of continuous playtime.

- 1. Connect the small end of the USB charging cable to the USB Charging Port on the headphone earcup.
- 2. Connect the large end of the USB charging cable to a powered USB port (e.g., computer, USB wall adapter).
- 3. The LED indicator will show charging status.

4.2. Bluetooth Pairing

To connect your headphones wirelessly to a device:

- 1. Ensure the headphones are charged.
- 2. Press and hold the Power On/Off button until the LED indicator flashes, indicating pairing mode.
- 3. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings.
- 4. Select "eKids B52" (or similar model name) from the list of available devices.
- 5. Once connected, the LED indicator will show a steady light or a different flashing pattern, depending on the model.

4.3. Wired Connection

If the battery is low or you prefer a wired connection, use the included 3.5mm audio cable:

- 1. Plug one end of the 3.5mm audio cable into the Aux Jack on the headphone earcup.
- 2. Plug the other end of the 3.5mm audio cable into the headphone jack of your audio device.
- 3. The headphones will now function in wired mode.

5. Operating Instructions

5.1. Power On/Off

- To Power On: Press and hold the Power On/Off button until the LED indicator lights up.
- To Power Off: Press and hold the Power On/Off button until the LED indicator turns off.

5.2. Volume Control

- Volume Up: Press the Volume Up (+) button.
- Volume Down: Press the Volume Down (-) button.

These headphones feature volume reduction to ensure safe listening levels for children.

5.3. Using the Microphone

The built-in microphone allows for hands-free communication when connected via Bluetooth:

- Answer Call: Press the Play/Pause/Phone button once.
- End Call: Press the Play/Pause/Phone button once during a call.
- Reject Call: Press and hold the Play/Pause/Phone button.

5.4. Playback Controls

- Play/Pause: Press the Play/Pause/Phone button once.
- Skip Forward: Press and hold the Volume Up (+) button.
- Skip Back: Press and hold the Volume Down (-) button.

6. Maintenance

- Clean the headphones with a soft, dry cloth.
- · Avoid using harsh chemicals or abrasive materials.
- · Keep the headphones dry; they are not water resistant.
- Store in a cool, dry place when not in use. The foldable design helps protect them during storage and travel.

7. Troubleshooting

- No Power: Ensure the headphones are fully charged.
- No Sound (Bluetooth): Check that the headphones are paired correctly with your device. Ensure the volume
 on both the headphones and the connected device is turned up. Try re-pairing the headphones.
- **No Sound (Wired):** Ensure the 3.5mm audio cable is securely plugged into both the headphones and the audio device. Check the volume on the audio device.

• **Poor Audio Quality:** Ensure the headphones are within Bluetooth range of your device. Check for interference from other wireless devices.

8. Specifications

Feature	Detail
Brand	eKids
Model Name	Spiderman Bluetooth Youth Headphones
Item Model Number	SM-B50.Fxv8
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.0
Headphones Jack	3.5 mm Jack
Battery Life	18 Hours
Charging Time	24 Hours (Note: This likely refers to standby time or total usage over multiple charges, as 18 hours play time is listed.)
Special Feature	Foldable, Microphone Included
Noise Control	Active Noise Cancellation
Age Range (Description)	Kid (Manufacturer recommended age: 3 years and up)
Material	Plastic
Item Weight	0.01 Ounces
Product Dimensions	6 x 3 x 6 inches
Water Resistance Level	Not Water Resistant

9. Warranty & Support

These headphones come with a **One Year Limited Warranty**. For detailed warranty information or technical support, please refer to the documentation included with your product or visit the official eKids website.

Video 9.1: Official eKids Spiderman Wireless Bluetooth Portable Kids Headphones Product Showcase. This video highlights the design and features of the headphones.

© 2025 eKids. All rights reserved. Spiderman and related characters are trademarks of Marvel.

