

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SKG](#) /

› [SKG Automatic Bread Machine SKG-3920 User Manual](#)

## SKG SKG-3920

# SKG Automatic Bread Machine SKG-3920 User Manual

Model: SKG-3920

## INTRODUCTION

Thank you for choosing the SKG Automatic Bread Machine SKG-3920. This manual provides essential information for the safe and efficient operation of your new appliance. Please read all instructions carefully before first use and keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the bread machine is placed on a stable, flat, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use attachments not recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

## PRODUCT OVERVIEW



This image shows the SKG Automatic Bread Machine SKG-3920, a compact appliance designed for home bread making. It features a white body with a grey top panel and control interface.

The SKG Automatic Bread Machine SKG-3920 is designed to simplify the bread-making process. It features 19 programmable menus, allowing you to bake various types of bread, make jam, yogurt, and more. The machine includes automatic dough kneading and well-distributed heating for consistent results.

## SETUP AND FIRST USE

- Unpacking:** Carefully remove the bread machine and all accessories from the packaging. Check for any damage.
- Cleaning:** Before first use, wash the bread pan, kneading paddle, and measuring accessories with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
- Placement:** Place the bread machine on a dry, stable, heat-resistant surface, ensuring adequate ventilation around the appliance.
- Install Bread Pan:** Insert the bread pan into the baking chamber and turn it clockwise until it clicks into place. Attach the kneading paddle to the shaft inside the bread pan.

## OPERATING INSTRUCTIONS

## Control Panel Overview

The control panel features a digital display and several buttons for program selection, crust color, loaf size, delay timer, and start/stop functions. Refer to the diagram in your printed manual for specific button locations.

## Basic Bread Making Steps

- Add Ingredients:** Add ingredients to the bread pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast added last on top of the dry ingredients, away from liquids and salt).
- Select Program:** Close the lid. Press the 'Menu' button to cycle through the 19 available programs (e.g., Basic, French, Whole Wheat, Sweet, Gluten-Free, Jam, Yogurt, Rice Bread).
- Select Loaf Size and Crust Color:** Use the 'Loaf Size' button to select your desired loaf weight (e.g., 1LB). Use the 'Crust Color' button to choose light, medium, or dark crust.
- Set Delay Timer (Optional):** If you wish to delay the start of the baking process, use the '+' and '-' buttons to set the desired delay time.
- Start Baking:** Press the 'Start/Stop' button to begin the selected program. The machine will automatically knead, rise, and bake.
- Remove Bread:** Once the program is complete, the machine will beep. Unplug the appliance. Using oven mitts, carefully remove the bread pan by turning it counter-clockwise and lifting it out. Invert the pan to release the bread onto a wire rack to cool.

## Special Functions: Jam, Yogurt, and Rice Bread

The SKG-3920 offers dedicated programs for making homemade jam, yogurt, and rice bread. Follow specific recipes for these functions, ensuring correct ingredient ratios and program selection.

### Watch the official product video for a visual guide on key features and functions:

Your browser does not support the video tag.

*This video demonstrates the key features and functions of the SKG Automatic Bread Machine, including its automatic dough kneading, well-distributed heating, and various programmable menus for different types of bread, jam, and yogurt.*

## MAINTENANCE AND CLEANING

- Bread Pan and Kneading Paddle:** After each use, remove the bread pan and kneading paddle. Fill the pan with warm, soapy water and let it soak for 10-15 minutes to loosen any stuck dough. Clean with a soft sponge, rinse, and dry thoroughly. Do not use abrasive cleaners or metal scouring pads.
- Exterior:** Wipe the exterior of the bread machine with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Storage:** Ensure the appliance is clean and dry before storing. Store in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt/sugar.	Check yeast expiration, use lukewarm water (105-115°F), ensure correct ingredient measurements.
Bread is too dense	Too much flour, not enough liquid, old yeast.	Measure ingredients precisely, ensure fresh yeast.
Kneading paddle stuck in bread	Common occurrence.	Remove paddle after bread cools. A small hole at the bottom is normal.
Machine not starting	Not plugged in, lid not closed, program not selected.	Check power connection, ensure lid is securely closed, select a program and press 'Start/Stop'.

## SPECIFICATIONS

- Model:** SKG-3920
- Color:** Stainless Steel
- Wattage:** 500 watts
- Voltage:** 120 Volts
- Number of Programs:** 19
- Capacity:** 1 Pound
- Product Dimensions:** 10.74 x 14.88 x 13.11 inches
- Item Weight:** 8.59 pounds
- Material:** Stainless Steel
- Product Care Instructions:** Wipe with Dry Cloth

## WARRANTY AND SUPPORT

SKG offers a warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions. To register your product or for customer support, please visit the official SKG website or contact their customer service department. Retain your proof of purchase for warranty claims.