

[Manuals.plus](#) /

> [BLACK+DECKER](#) /

> BLACK+DECKER 7.2V Cordless Li-Ion Wet & Dry Cyclonic Dustbuster Hand Vacuum WD7201G Instruction Manual

BLACK+DECKER WD7201G

BLACK+DECKER 7.2V Cordless Li-Ion Wet & Dry Cyclonic Dustbuster Hand Vacuum WD7201G Instruction Manual

Model: WD7201G

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your BLACK+DECKER 7.2V Cordless Li-Ion Wet & Dry Cyclonic Dustbuster Hand Vacuum, model WD7201G. Please read these instructions thoroughly before using the appliance and retain them for future reference.

SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This appliance is intended for household use only. Do not use it for industrial or commercial purposes. Keep the appliance out of reach of children.

- Ensure the charging adapter is compatible with your local power supply.
- Do not immerse the appliance in water or other liquids.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the filter in place.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

PACKAGE CONTENTS

Verify that all components are present and in good condition:

- BLACK+DECKER 7.2V Cordless Li-Ion Wet & Dry Cyclonic Dustbuster Hand Vacuum
- Charging wall/stand mount
- Washable filter
- Accessory Kit (specific accessories may vary)

SETUP

Charging the Appliance

Before first use, fully charge the vacuum for approximately 10-16 hours. Subsequent charges will typically take less time. The appliance is powered by a Lithium-ion battery.

1. Connect the charging adapter to the charging wall/stand mount.
2. Plug the adapter into a standard electrical outlet.
3. Place the hand vacuum onto the charging mount. Ensure the charging indicator light illuminates, confirming proper connection.



Figure 1: The hand vacuum placed on its charging stand, connected to power. The charging stand allows for convenient storage and ensures the vacuum is always ready for use.

OPERATING INSTRUCTIONS

General Use

To turn the vacuum on, slide the power switch to the 'ON' position. To turn it off, slide the switch to the 'OFF' position. The vacuum is designed for both wet and dry cleaning tasks.

Dry Cleaning

For dry debris such as crumbs, dust, or pet hair, ensure the wet pick-up nozzle is removed (if attached) and the filter is clean and dry. Position the nozzle over the debris and activate the vacuum. Move the vacuum slowly over the area to ensure thorough cleaning.



Figure 2: The hand vacuum effectively picking up dry crumbs from a kitchen counter. Its compact design allows for easy maneuverability for quick clean-ups.

Wet Cleaning

For liquid spills, attach the wet pick-up nozzle (if included in your accessory kit). Ensure the dust container is empty before picking up liquids. Do not exceed the maximum liquid fill line indicated on the dust container. After picking up liquids, always empty and clean the dust container and filter immediately to prevent odors and maintain performance.



Figure 3: The hand vacuum demonstrating its wet cleaning capability by suctioning a liquid spill from a table surface. This feature makes it versatile for various household accidents.

MAINTENANCE

Emptying the Dust Container

For optimal suction performance, empty the dust container after each use or when the debris reaches the 'MAX' fill line. To empty:

1. Ensure the vacuum is turned off.
2. Press the release button to detach the dust container from the main body.
3. Carefully remove the filter assembly.
4. Empty the contents of the dust container into a waste bin.
5. Reassemble the filter and dust container, ensuring they click securely into place.

Cleaning the Filter

The washable filter should be cleaned regularly to maintain suction power. For best results, clean the filter after every 5-10 uses, or more frequently if vacuuming fine dust.

1. Remove the dust container and filter as described above.
2. Tap the filter gently over a waste bin to dislodge loose dirt.
3. Rinse the filter under running water until the water runs clear. Do not use hot water or detergents.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Using a wet filter can damage the motor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the battery for the recommended time.
Reduced suction power.	Dust container is full. Filter is clogged. Nozzle is blocked.	Empty the dust container. Clean or replace the filter. Clear any blockages from the nozzle.
Water leaks from the vacuum during wet pick-up.	Dust container is overfilled. Wet pick-up nozzle not properly attached.	Do not exceed the maximum liquid fill line. Ensure the wet pick-up nozzle is securely attached.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	WD7201G-B1
Voltage	7.2 Volts
Power Source	Battery Powered
Special Features	Wet & Dry Cleaning
Filter Type	Cartridge
Surface Recommendation	Upholstery, Car Interiors
Item Weight	0.72 Kilograms
Wattage	100 watts
Included Components	Accessory Kit
Form Factor	Handheld
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

This BLACK+DECKER appliance comes with a **1 Year Local (Singapore) Manufacturer Warranty**. For warranty claims, technical support, or service inquiries, please contact your local BLACK+DECKER service center or the retailer from whom the product was purchased. Keep your proof of purchase for warranty validation.

