

[Manuals.plus](#) /

> [BANDAI](#) /

> Bandai DX Hyper Muteki Gashat Instruction Manual

BANDAI DX Hyper Muteki Gashat

Bandai DX Hyper Muteki Gashat Instruction Manual

Model: DX Hyper Muteki Gashat

1. INTRODUCTION

The Bandai DX Hyper Muteki Gashat is a collectible electronic device inspired by the popular Japanese tokusatsu series, *Kamen Rider Ex-Aid*. Designed to resemble a video game cartridge, this Gashat allows users to recreate iconic sounds and light effects from the show. It can also be combined with other compatible items (sold separately) to unlock additional play patterns. This manual provides essential information for the safe and proper use of your DX Hyper Muteki Gashat.

2. IMPORTANT SAFETY INFORMATION

- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Do not short-circuit battery terminals.
 - Remove batteries if the product is not used for an extended period.
 - Dispose of batteries properly according to local regulations.
- Avoid dropping or subjecting the product to strong impacts.
- Do not attempt to disassemble or modify the product.

3. PACKAGE CONTENTS

- 1 x Bandai DX Hyper Muteki Gashat
- 3 x LR44 (AG13) Batteries (pre-installed or included separately)

4. SETUP: BATTERY INSTALLATION

The DX Hyper Muteki Gashat requires three (3) LR44 (also known as AG13) coin cell batteries for operation. These batteries are typically included with the product. If replacement is needed, follow these steps:

1. Locate the battery compartment on the back or side of the Gashat. It is usually secured with a small screw.
2. Using a small Phillips head screwdriver, carefully loosen the screw and remove the battery compartment cover.
3. Remove any old batteries and dispose of them properly.
4. Insert three new LR44 (AG13) batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw securely. Do not overtighten.



Figure 4.1: The Bandai DX Hyper Muteki Gashat. The battery compartment is typically located on the underside or back of the main body, often secured by a screw. The prominent star-shaped component is at the top, and the detailed golden casing features a colorful display panel.

5. OPERATING INSTRUCTIONS

The DX Hyper Muteki Gashat is designed for interactive play, featuring lights and sounds. Follow these steps to operate your Gashat:

1. **Activate Sounds and Lights:** Locate the activation button on the Gashat. Pressing this button will trigger various sound effects and light patterns, replicating those seen in the *Kamen Rider Ex-Aid* series.
2. **Combine with Other Items:** The DX Hyper Muteki Gashat is compatible with other Kamen Rider Ex-Aid DX series items (e.g., Driver belts, other Gashats, sold separately). Insert the Gashat into compatible slots on these items to unlock additional sounds, lights, and transformation sequences. Refer to the instruction manuals of the compatible items for specific combination methods.
3. **Role-Playing:** Use the Gashat to enhance imaginative play, mimicking your favorite Kamen Rider Ex-Aid transformations and battles.



Figure 5.1: A detailed view of the DX Hyper Muteki Gashat. The button for activation is typically located on the side or top of the main body, and the display panel shows intricate artwork related to the Hyper Muteki form.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the product with a dry, soft cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface.
- **Storage:** Store the Gashat in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Removal:** If the product will not be used for an extended period, remove the batteries to prevent leakage and corrosion.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or lights	Batteries are dead or low. Batteries are inserted incorrectly. Battery compartment cover is not secured.	Replace with new LR44 (AG13) batteries. Ensure batteries are inserted with correct polarity (+ and -). Securely close the battery compartment cover.
Intermittent sound or lights	Loose battery connection. Low battery power.	Check battery insertion and ensure they are snug. Replace batteries.

8. SPECIFICATIONS

- **Brand:** BANDAI
- **Model:** DX Hyper Muteki Gashat
- **ASIN:** B071JB6DYN
- **Dimensions (L x W x H):** 17 x 14 x 7 cm (6.7 x 5.5 x 2.8 inches)
- **Item Weight:** 189 Grams (0.42 lbs)
- **Power Source:** Battery Powered
- **Battery Type:** 3 x LR44 (AG13) coin cell batteries (included)
- **Recommended Age:** 36 months and up (Kid)
- **Operation Mode:** Manual
- **Assembly Required:** No
- **Indoor/Outdoor Usage:** Indoor

9. WARRANTY AND SUPPORT

Specific warranty information for the Bandai DX Hyper Muteki Gashat is not provided in the product details. For warranty claims or technical support, please refer to the retailer where the product was purchased or contact Bandai customer service directly through their official website.

You can often find additional support and product information on the official [Bandai website](#).

