

## TOSHIBA AC25CEW-BS

# TOSHIBA AC25CEW-BS Large 6-Slice Convection Toaster Oven Countertop Instruction Manual

Model: AC25CEW-BS

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your TOSHIBA AC25CEW-BS Toaster Oven. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven.
- Do not place cardboard, plastic, paper, or similar materials in the oven.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk

of electric shock.

## 2. PRODUCT OVERVIEW AND ACCESSORIES

The TOSHIBA AC25CEW-BS is a versatile 10-in-1 convection toaster oven designed for various cooking needs. It features a digital display and intuitive controls.



Image: The TOSHIBA AC25CEW-BS Toaster Oven shown with its full set of accessories, including racks, baking pan, crumb tray, and rotisserie kit.

### Included Accessories:

- **Baking Rack:** For general baking and roasting.
- **Baking Pan:** Collects drips and can be used for baking.
- **Removable Crumb Tray:** Catches crumbs for easy cleaning.
- **Rotisserie Kit and Lifter:** For rotisserie cooking of poultry or roasts.
- **Rack Clamp:** For safely removing hot racks.

## 3. SETUP AND INITIAL USE

### 3.1 Unpacking and Placement

1. Remove all packaging materials, including any internal packing and protective films.
2. Place the toaster oven on a stable, level, heat-resistant surface.
3. Ensure adequate clearance around the appliance for proper ventilation. Maintain at least 4 inches of space from walls and other objects.



Image: The toaster oven positioned on a countertop, illustrating recommended clearance from surrounding surfaces.

### 3.2 Initial Cleaning

1. Before first use, wash all removable accessories (baking rack, baking pan, crumb tray, rotisserie kit) in warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the interior and exterior of the oven with a damp cloth. Do not use abrasive cleaners or scouring pads.

## 4. OPERATING INSTRUCTIONS

## 4.1 Control Panel Overview

The toaster oven features a digital display and three control knobs for easy operation.

# INTUITIVE DIGITAL DISPLAY AND CONTROL KNOBS



Image: A detailed view of the control panel, showing the digital display, function knob, temperature knob, time knob, and start/stop button.

- **Function Knob:** Rotate to select desired cooking function (Toast, Bake, Broil, Pizza, Cookies, Defrost, Reheat, Rotisserie, Keep Warm, Convection).
- **Temperature Knob:** Rotate to adjust the cooking temperature.
- **Time Knob:** Rotate to set the cooking duration.
- **Stop/Start Button:** Press to begin or end a cooking cycle.

## 4.2 Cooking Functions

This toaster oven offers 10 versatile cooking functions to accommodate various recipes.

# 10-IN-1 VERSATILITY



PIZZA



COOKIES



TOAST



DEFROST



REHEAT



BAKE



ROTISSERIE



KEEP WARM



CONVECTION



BROIL

Image: Visual representation of the ten cooking functions available on the appliance.

- **Toast:** Ideal for bread, bagels, and waffles. Adjust toast shade and number of slices.
- **Bake:** For general baking, such as cakes, cookies, and casseroles.
- **Broil:** For grilling or browning food quickly.
- **Pizza:** Optimized setting for cooking pizzas.
- **Cookies:** Specific setting for baking cookies.
- **Defrost:** Gently thaws frozen foods.
- **Reheat:** Warms up leftovers without overcooking.
- **Rotisserie:** For evenly roasting whole chickens or other meats using the rotisserie kit.
- **Keep Warm:** Maintains food at a serving temperature.
- **Convection:** Uses a fan to circulate hot air for faster and more even cooking.

## 4.3 Using the Rotisserie Function

The rotisserie function allows for even roasting of items like a 4-pound chicken.



Image: A whole chicken being roasted using the rotisserie function inside the toaster oven.

1. Assemble the rotisserie spit and forks, securing the food item (e.g., chicken) firmly.
2. Insert the assembled rotisserie into the designated slots inside the oven.
3. Select the 'Rotisserie' function using the Function knob.
4. Adjust temperature and time as needed using the respective knobs.
5. Press the 'Stop/Start' button to begin cooking.
6. Use the rotisserie lifter to safely remove the hot rotisserie assembly after cooking.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster oven. Always unplug the appliance and allow it to cool completely before cleaning.

### 5.1 Crumb Tray Cleaning



Image: A hand demonstrating the removal of the crumb tray from the toaster oven for cleaning.

1. Pull out the removable crumb tray located at the bottom front of the oven.
2. Discard any accumulated crumbs.
3. Wash the tray in warm, soapy water, rinse, and dry thoroughly.
4. Ensure the tray is completely dry before reinserting it into the oven.

## 5.2 Rack and Pan Cleaning



Image: A hand cleaning an oven rack with a cloth under running water.

1. Remove the baking rack, baking pan, and rotisserie kit from the oven.
2. Wash these accessories in warm, soapy water. For stubborn food residue, soak them before cleaning.
3. Rinse thoroughly and dry completely before returning them to the oven.

## 5.3 Interior and Exterior Cleaning

1. Wipe the interior walls of the oven with a damp cloth and mild detergent. Avoid harsh abrasives.
2. Clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they can damage the finish.

## 6. TROUBLESHOOTING

- **Oven does not preheat or seems slow:** The oven preheats automatically. The temperature number on the display will blink until the desired temperature is reached, then it will stop blinking. There is no audible alert for preheating completion.
- **Uneven cooking:** Ensure food is placed centrally on the rack. For best results, refer to the rack position guidelines often indicated on the oven door or in the full manual. The convection fan helps distribute heat evenly.
- **Exterior of oven is hot:** It is normal for the exterior surfaces of the oven to become hot during operation. Ensure adequate clearance around the appliance as specified in the setup section.
- **Food is not cooking properly:** Verify that the correct function, temperature, and time settings have been selected for the food item. Adjust as necessary.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	TOSHIBA
Model Name	Toaster Oven (AC25CEW-BS)
Color	Black Stainless Steel
Product Dimensions (D x W x H)	15.59" x 18.98" x 10.78"
Capacity	25 Liters (fits 6 slices of bread, 11" pizza, up to 4-pound chicken)
Power Output	1500W
Temperature Range	150°F – 450°F
Control Type	Knob Control
Door Style	Dropdown Door
Included Components	Toaster oven, baking pan, 2 racks, crumb tray, rotisserie kit and lifter, rack clamp, instruction manual
Cable Length	4 Feet
Item Weight	16.21 pounds

## 8. WARRANTY AND SUPPORT

---

Your TOSHIBA AC25CEW-BS Toaster Oven comes with a 1-Year Limited Warranty, covering defects in materials and workmanship under normal use. Additionally, TOSHIBA provides lifetime customer support for this product. For warranty claims, technical assistance, or general inquiries, please refer to the contact information provided in the full product manual or visit the official TOSHIBA support website.