

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nintendo](#) /

› [Nintendo Wii Console \(Model RVL-001\) User Manual](#)

Nintendo RVL-001

Nintendo Wii Console (Model RVL-001) User Manual

Model: RVL-001 | Brand: Nintendo

INTRODUCTION

Welcome to the user manual for your Nintendo Wii Console, Model RVL-001. This console features innovative motion-control technology, allowing for an immersive and interactive gaming experience. Up to four Wii Remote Plus controllers can be connected simultaneously using built-in wireless Bluetooth technology. The Wii controller's integrated sensor enables seamless menu navigation and game activation. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Wii system.

PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- Wii game console (Model RVL-001 with GameCube ports)
- Wii game console stand
- Wii game power supply
- Wii Sports CD
- Wii Sports Resort CD
- Wii Sensor bar
- Wii RCA video cable
- Wii Composite video cable
- Wii Remote controller (white)
- Wii Motion Plus adapter (white)
- Wii Nunchuck (white)
- Wii Remote controller (black)
- Wii Motion Plus adapter (black)
- Wii Nunchuck (black)
- Silicone case regular length (clear)
- Silicone case regular length (black)

- Silicone case long for motion plus adapter (clear)
- Silicone case long for motion plus adapter (black)



Image: The Nintendo Wii console, Wii Remote, Nunchuk, sensor bar, power supply, and various cables included in the package.

SETUP GUIDE

1. Connecting the Console

1. **Connect the Sensor Bar:** Place the sensor bar either above or below your television, centered. Plug the sensor bar cable into the sensor bar port on the back of the Wii console.
2. **Connect the AV Cable:** Plug the multi-out AV cable into the AV Multi Out port on the back of the Wii console. Connect the yellow (video), white (left audio), and red (right audio) RCA plugs to the corresponding input jacks on your television.
3. **Connect the Power Supply:** Plug the AC adapter into the power input on the back of the Wii console. Plug the other end of the AC adapter into a standard wall outlet.
4. **Position the Console:** Place the Wii console on its stand in a stable, well-ventilated area. Ensure adequate space around the console for airflow.



Image: Rear view of the Nintendo Wii console showing ports for sensor bar, AV cable, and power supply, along with the console and accessories.

2. Syncing the Wii Remote

To sync your Wii Remote with the console:

1. Open the SD card slot cover on the front of the Wii console. Locate the red SYNC button.
2. Open the battery cover on the back of the Wii Remote and locate its red SYNC button.
3. Press the SYNC button on the console first, then immediately press the SYNC button on the Wii Remote. The player indicator lights on the remote will flash and then light up solid when synced.

3. GameCube Controller and Memory Card Ports

The RVL-001 model of the Wii console includes four GameCube controller ports and two GameCube memory card slots located under a flap on the top side of the console (when oriented horizontally) or the left side (when oriented vertically). These ports allow for compatibility with Nintendo GameCube games and accessories.



Image: Close-up view of the Nintendo Wii console with the top flap open, revealing the GameCube controller ports and memory card slots.

OPERATING INSTRUCTIONS

Powering On/Off

- To turn on the console, press the POWER button on the front of the Wii console or the POWER button on a synced Wii Remote.
- To turn off the console, press and hold the POWER button on the console or the Wii Remote until the console shuts down.

Inserting and Ejecting Discs

- Insert a Wii game disc or GameCube game disc into the disc slot on the front of the console with the label facing up. The console will automatically pull the disc in.
- To eject a disc, press the EJECT button located next to the disc slot.

Using the Wii Remote and Nunchuk

- The Wii Remote uses motion-sensing technology. Point the remote at the screen to control the on-screen cursor.
- The Nunchuk accessory connects to the bottom of the Wii Remote and provides an analog stick for movement and additional buttons for gameplay.
- Always use the wrist strap attached to the Wii Remote to prevent accidental drops during gameplay.

MAINTENANCE

Cleaning the Console and Accessories

- Wipe the console and accessories with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Keep the disc slot free of dust and debris.

Disc Care

- Handle discs by their edges. Avoid touching the shiny surface.
- Store discs in their cases when not in use to prevent scratches.
- If a disc is dirty, wipe it gently from the center outwards with a soft, lint-free cloth.

Battery Replacement (Wii Remote)

The Wii Remote uses two AA batteries. Replace them when the player indicator lights on the remote begin to flash or when the remote becomes unresponsive. Ensure correct polarity when inserting new batteries.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No power to console	Ensure the AC adapter is securely plugged into the console and a working wall outlet. Try a different outlet.
No video or audio output	Check that the AV cable is securely connected to both the console and the correct input jacks on your TV. Ensure your TV is set to the correct input source (e.g., AV1, Component, HDMI if using an adapter).
Wii Remote not responding or syncing	Replace the batteries in the Wii Remote. Resync the remote by pressing the SYNC buttons on both the console and the remote. Ensure the sensor bar is properly connected and positioned.
Disc not reading	Ensure the disc is clean and free of scratches. Insert the disc correctly with the label facing up. Try a different game disc to determine if the issue is with the console or the disc.

SPECIFICATIONS

Feature	Detail
Model Number	RVL-001
Manufacturer	Nintendo

Feature	Detail
Type of Item	Video Game Console
Dimensions (Package)	10.79 x 10.71 x 10.2 inches
Item Weight	5.44 pounds
Connectivity	Bluetooth (for Wii Remotes), AV Multi Out, Sensor Bar Port, USB ports (rear), SD Card Slot (front)
Compatibility	Wii Game Discs, Nintendo GameCube Game Discs, GameCube Controllers, GameCube Memory Cards

WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not available in the provided product data. For warranty claims or technical support, please refer to the official Nintendo website or contact Nintendo customer service directly.

PRODUCT VIDEOS

There are no official product videos available for embedding in this manual based on the provided data.