

Sony SHAKEX10

Sony SHAKEX10 High Power Home Audio System with Bluetooth Instruction Manual

Model: SHAKEX10

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Sony SHAKEX10 High Power Home Audio System with Bluetooth. Please read this manual thoroughly before using the system and retain it for future reference.

The SHAKEX10 system is designed to deliver powerful audio with features like Bluetooth connectivity, LED speaker lights, DJ effects, and karaoke functions.

IMPORTANT SAFETY INFORMATION

- Ensure proper ventilation to prevent overheating.
- Do not expose the unit to rain or moisture to reduce the risk of fire or electric shock.
- Avoid placing objects filled with liquids, such as vases, on the apparatus.
- Do not install in a confined space, such as a bookcase or built-in cabinet.
- Refer all servicing to qualified service personnel.

WHAT'S IN THE BOX

Upon unpacking your Sony SHAKEX10 system, please verify that all components are present:

- Main Unit (SHAKEX10)
- Speaker Units (2)
- FM Antenna
- Remote Control
- Power Cord
- Operating Instructions (this manual)

SETUP GUIDE

1. Placement

Place the main unit and speaker units on a stable, flat surface. Ensure there is adequate space around the unit for proper ventilation. Avoid direct sunlight, heat sources, and excessive dust or moisture.

SONY

SHAKE-X10

Shake up the party

Let your bass lines rumble with this high-power home audio system with Bluetooth and a Sound Pressure Horn that lets you really pump up the volume. Boost the atmosphere with LED speaker lights and put your own spin on your favorite tracks with built-in DJ effects.



Image: The Sony SHAKEX10 system, consisting of a main unit and two speakers, set up in a room with ambient lighting.



Image: A comprehensive view of the Sony SHAKEX10 High Power Home Audio System, showcasing its main unit and two large speaker components.

2. Connecting the Speakers

Connect the speaker cables from the main unit to the corresponding terminals on each speaker. Ensure correct polarity (red to red, black to black) for optimal sound quality.



Image: A close-up view of the speaker terminals, showing the connection points for audio cables.

3. Power Connection

Connect the power cord to the AC IN jack on the rear of the main unit, then plug it into a wall outlet.



Image: The rear panel of the main unit, displaying various input and output ports, including the power input.

4. FM Antenna Connection

Connect the supplied FM antenna to the FM ANTENNA terminal on the rear of the unit for radio reception.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button on the main unit or remote control to turn the system on or off.

2. Source Selection

Use the **FUNCTION** button to cycle through available input sources such as CD, USB, Bluetooth, FM, and Audio In.



Image: The main control panel of the audio system, featuring buttons for power, function selection, volume, and DJ effects.

3. Bluetooth Connectivity

To connect a Bluetooth device:

1. Select the **BLUETOOTH** function on the system.
2. Enable Bluetooth on your smartphone or tablet.
3. Select "SHAKEX10" from the list of available devices.
4. For one-touch pairing, touch your NFC-compatible device to the **NFC** logo on the system.

The system supports LDAC, AAC, A2DP (SINK), AVRCP (Ver1.5), and SPP Bluetooth profiles for high-quality streaming.



Image: A smartphone being tapped against the NFC logo on the audio system, demonstrating the one-touch pairing feature.

4. LED Speaker Lights

Enhance your audio experience with dynamic LED speaker lights. Use the **LIGHT MODE** button on the remote or main unit to select different lighting patterns and colors.



Image: A close-up of one of the speaker units, highlighting its illuminated LED lights, creating a vibrant visual effect.

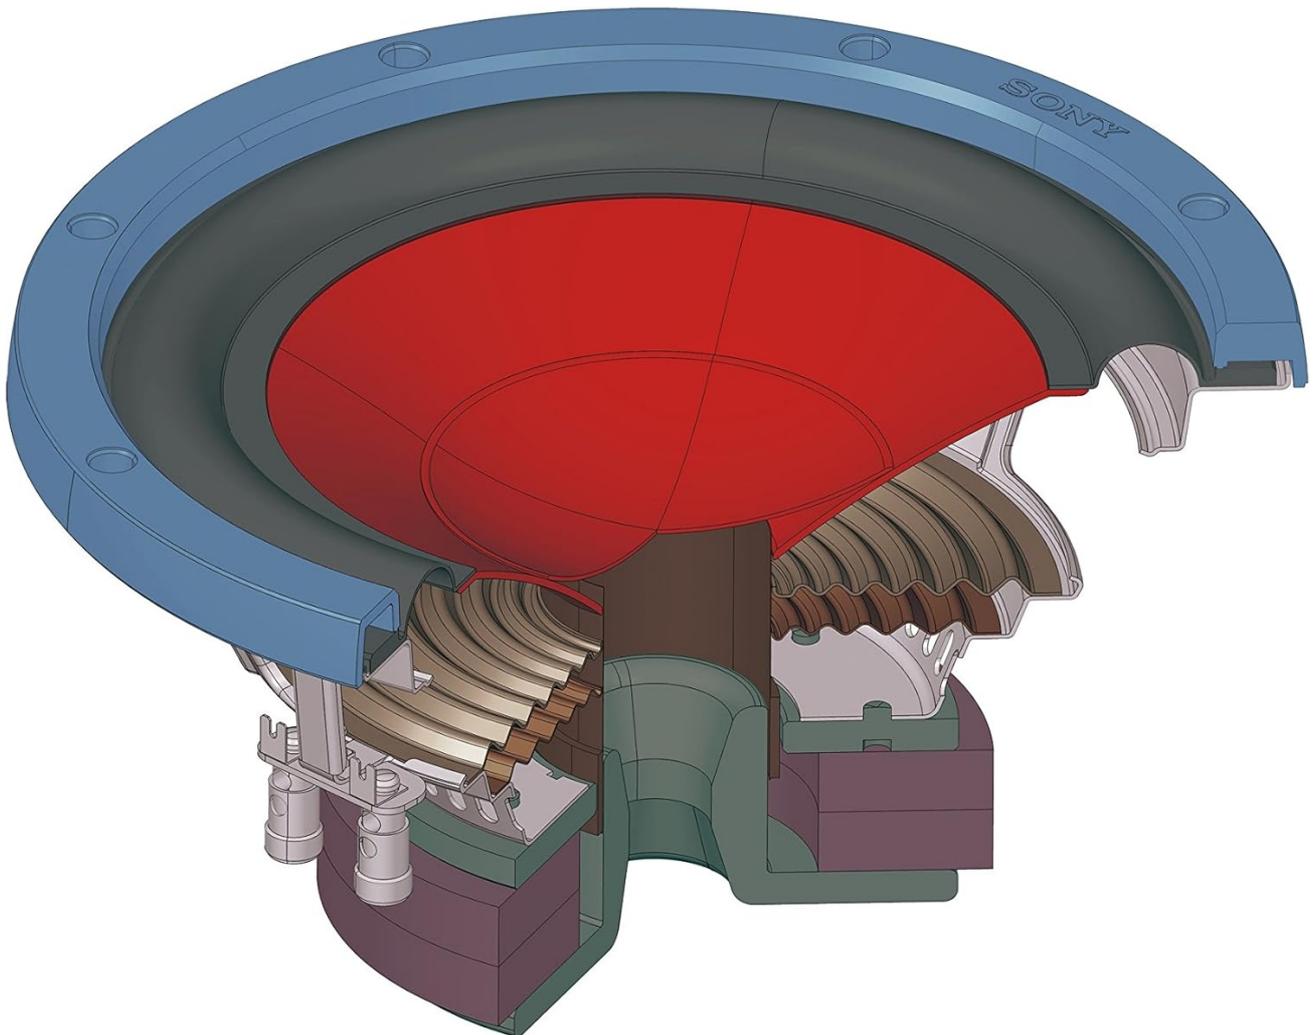


Image: A group of people dancing and enjoying music with the Sony SHAKEX10 system, demonstrating its party atmosphere capabilities.

5. DJ Effects and Karaoke

The system includes built-in DJ effects to customize your tracks. Additionally, a guitar input and karaoke features allow for interactive entertainment.

- Connect a microphone or guitar to the dedicated input jacks.
- Use the DJ effect controls on the main unit to add various sound effects.



Image: A person's hands interacting with the DJ effect controls on the main unit, demonstrating the system's creative audio manipulation features.



Image: A person singing into a microphone, utilizing the karaoke feature of the Sony SHAKEX10 system.

6. Using Sony Music Center & Fiestable Apps

Download the Sony Music Center and Fiestable apps to your compatible smartphone for enhanced control and additional features, including advanced sound settings and party functions.

MAINTENANCE

Cleaning the Unit

Wipe the exterior surfaces of the unit with a soft, dry cloth. For stubborn stains, use a cloth lightly dampened with a mild detergent solution, then wipe dry. Avoid using abrasive pads, scouring powder, or solvents such as alcohol or benzene, as these may damage the finish.

Speaker Care

Keep the speaker cones free from dust and debris. Do not press on the speaker cones as this can cause damage.



Image: A detailed view of a speaker cone, illustrating its construction and material.

TROUBLESHOOTING

If you experience issues with your SHAKEX10 system, please consult the following common solutions before contacting customer support:

- **No Power:** Ensure the power cord is securely connected to both the unit and the wall outlet.
- **No Sound:** Check speaker connections, volume level, and selected input source.
- **Bluetooth Pairing Issues:** Make sure the system is in Bluetooth pairing mode and your device's Bluetooth is enabled and discoverable. Try restarting both devices.
- **Poor Radio Reception:** Adjust the position of the FM antenna.

For more detailed troubleshooting, refer to the comprehensive guide available on the Sony support website or contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	42.25 x 15.44 x 21.81 inches

Item Weight	75 pounds
Model Number	SHAKEX10
Connectivity Technology	Bluetooth, NFC
Compatible Devices	Smartphone, Tablet
Bluetooth Profiles	LDAC, AAC, A2DP (SINK), AVRCP (Ver1.5), SPP
FM Tuning Range	87.5-108 MHz/100 kHz
Power Consumption	0.5 W (Standby)
Manufacturer	Sony
Date First Available	June 11, 2017

WARRANTY AND SUPPORT

For warranty information, product registration, or technical assistance, please visit the official Sony support website or contact Sony customer service. Details can typically be found in the separate warranty document included with your product.

Online support resources may include FAQs, software updates, and additional troubleshooting guides.