

[Manuals.plus](#) /

› [DIGIROOT](#) /

› DIGIROOT Universal 2-in-1 Disc and Fiber Tip Stylus Pen Instruction Manual

DIGIROOT 8541661914

DIGIROOT Universal 2-in-1 Disc and Fiber Tip Stylus Pen

Instruction Manual - Model: 8541661914

INTRODUCTION

Thank you for choosing the DIGIROOT Universal 2-in-1 Stylus Pen. This manual provides detailed instructions for the proper use, maintenance, and care of your stylus. This stylus is designed for precise interaction with various touchscreen devices, offering both a clear disc tip for accuracy and a fiber tip for smooth navigation.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x DIGIROOT Stylus Pen (Black)
- 4 x Replacement Disc Tips
- 2 x Replacement Fiber Tips
- 1 x Wiping Rag
- 1 x Product Manual (This document)



Image: The DIGIROOT stylus pen shown with its included replacement disc and fiber tips.

PRODUCT FEATURES

- **2-in-1 Design:** Features both a precision disc tip and a soft fiber tip for versatile use.
- **High Precision Clear Disc Tip:** Provides accurate pointing, allowing you to see the exact point of contact on the screen.
- **Soft Fiber Tip:** Offers smooth navigation and protects your screen from scratches.
- **Durable Construction:** Made from stainless steel and aluminum for a solid feel and comfortable grip.
- **Clip Design:** Integrated pen clip for easy portability and to prevent loss.
- **No Charging Required:** Operates without batteries or charging.

2-in-1 Design

Disc and Fiber
Tip 2-in-1 Design



- ✓ Wear resistant
- ✓ Replaceable tips
- ✓ Comfortable in hand
- ✓ Fluent writing

Portable Pen Cap

Soft Fiber Tip

Rubber Grip

High Precision Clear Disc



Image: An exploded view illustrating the stylus's components, including the portable pen cap, soft fiber tip, rubber grip, and high precision clear disc tip.

COMPATIBILITY

The DIGIROOT Universal Stylus Pen is compatible with most capacitive touchscreen devices. This includes, but is not limited to:

- iPad (various models)
- iPhone (various models)
- Android Tablets (e.g., Samsung Galaxy)
- Android Smartphones
- Other touchscreen laptops and PCs

Important Note: This stylus pen is NOT compatible with Chromebooks and Remarkable 2 devices.

Universal Compatibility

Phones / Tablets / Switch



NOTE: This stylus pen is not compatible with Chromebooks and remarkable 2.



Image: A user demonstrating the stylus's compatibility with various devices such as smartphones, tablets, and a portable gaming console, with a clear note about Chromebook and Remarkable 2 incompatibility.

USAGE INSTRUCTIONS

Using the Disc Tip

The clear disc tip is designed for precision tasks such as drawing, writing, and detailed navigation. The transparent disc allows you to see exactly where your input is registered on the screen.

- Ensure the clear disc is clean before use.
- Do not remove the clear disc from the tip; it is essential for the tip's functionality.
- Hold the stylus at a comfortable angle, similar to a regular pen.
- Apply light pressure to interact with your touchscreen.

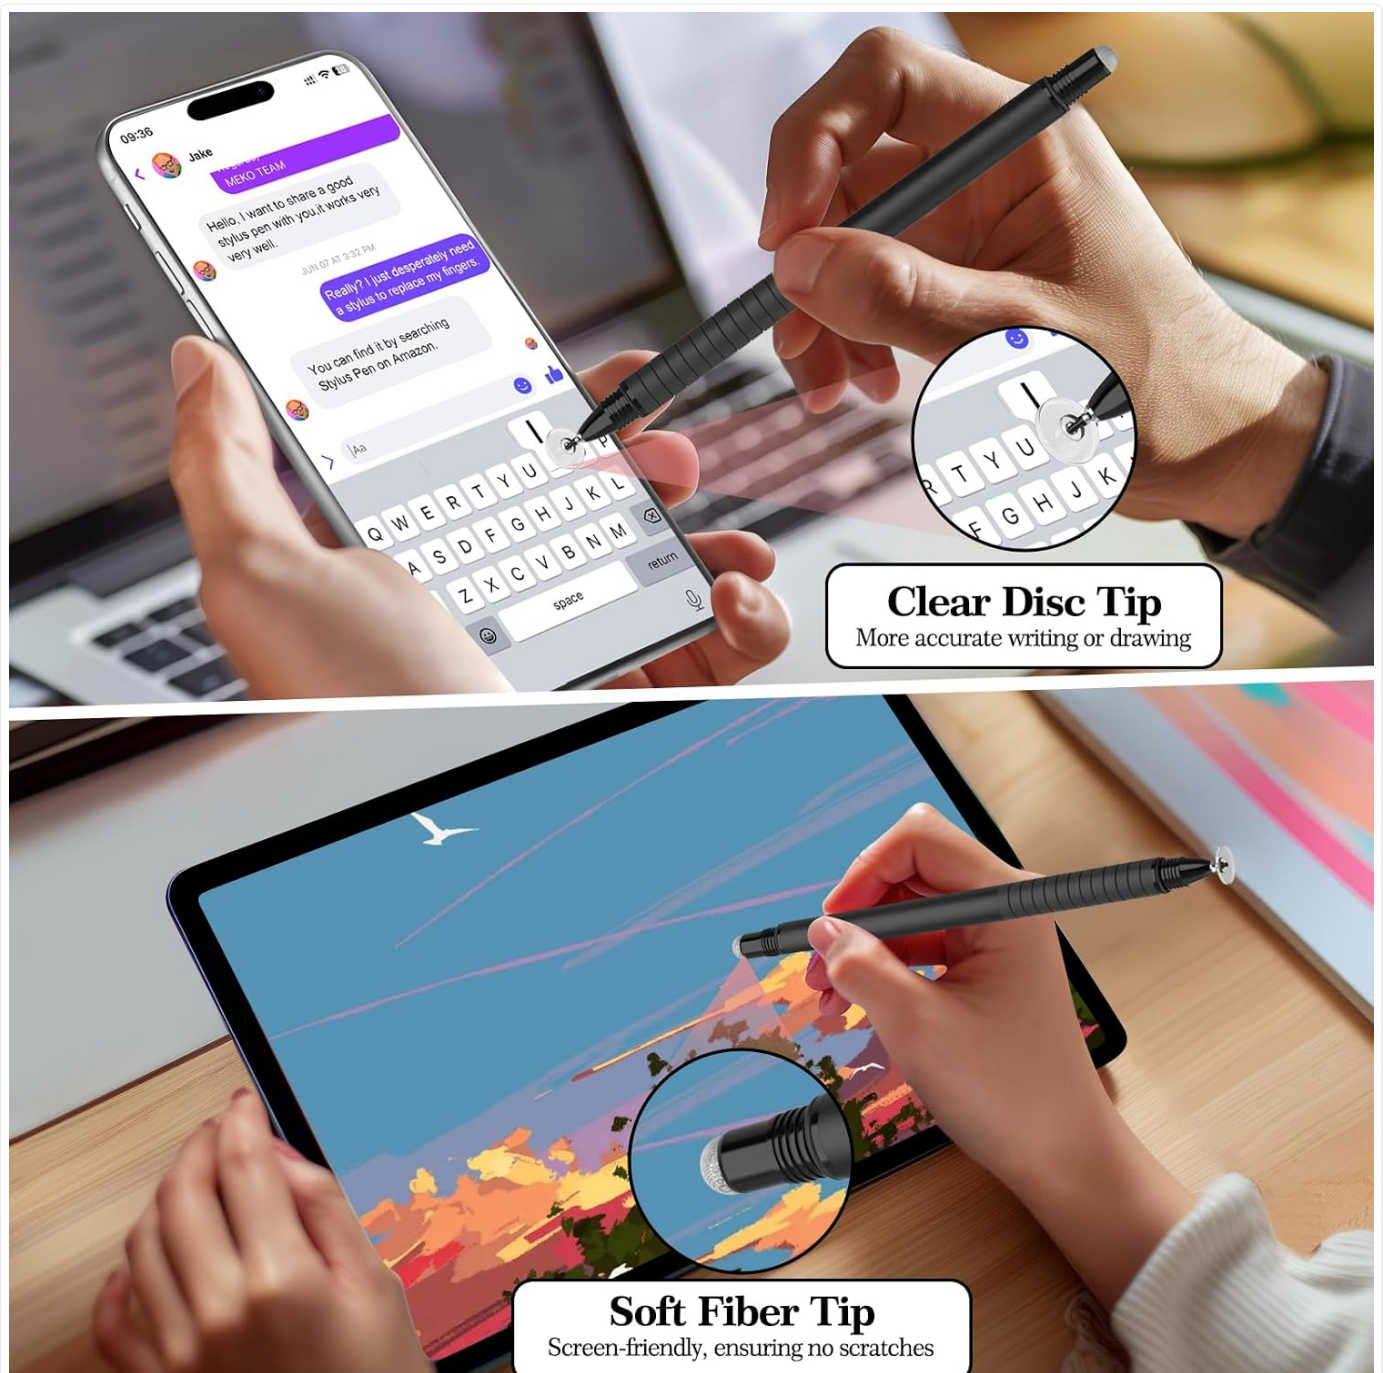


Image: A user demonstrating the precise application of the clear disc tip on a tablet screen for writing or drawing.

Using the Fiber Tip

The soft fiber tip is ideal for general navigation, scrolling, tapping, and protecting your screen from fingerprints and smudges.

- Simply use the fiber tip end for smooth interaction with your device.
- The fiber tip is wear-resistant and designed not to scratch your screen.

High Precision Tip

- ✓ Lag-free
- ✓ Precision
- ✓ No Ghosting
- ✓ No Jumper



Image: A user interacting with a smartphone using the soft fiber tip of the stylus for general touch input.

Pen Cap Functionality

The stylus features a portable pen cap that can be screwed onto either end of the stylus. This protects the tip when not in use and allows you to store the cap securely while using the stylus.

MAINTENANCE AND TIP REPLACEMENT

Cleaning

To ensure optimal performance and prevent potential screen scratches, keep both the stylus tips and your device's screen clean. Use the included wiping rag or a soft, lint-free cloth to gently clean the tips and screen.

Important: Dirt or debris on the disc tip or screen can reduce connection quality and may scratch your screen.

Replacing the Disc Tip

1. Gently pull the old disc tip straight out from the stylus body.
2. Take a new disc tip from the replacement pack.
3. Carefully insert the new disc tip into the stylus body until it is secure.



Image: A visual guide demonstrating how to remove and insert the disc tip for replacement.

Replacing the Fiber Tip

1. Unscrew the fiber tip section from the stylus body.
2. Unscrew the old fiber tip from its base.
3. Screw in a new fiber tip.
4. Reattach the fiber tip section to the stylus body.



Image: A visual guide demonstrating how to unscrew and replace the fiber tip.

TROUBLESHOOTING

- **Stylus not responding or inconsistent:**

- Ensure both the stylus tip (disc or fiber) and your device's screen are clean. Dust, dirt, or oil can interfere with

conductivity.

- For the disc tip, ensure the clear disc is securely attached and not damaged.
- Test the stylus on a different compatible device to rule out device-specific issues.

• **Stylus scratching the screen:**

- Always ensure the stylus tips are clean and free of debris.
- Do not remove the clear disc from the disc tip.
- Consider using a screen protector on your device for added protection.

• **Disc tip feels loose:**

- If the disc tip feels loose, it may need to be replaced. Refer to the "Replacing the Disc Tip" section.

SPECIFICATIONS

Product Dimensions	5.7 x 2.5 x 0.4 inches
Item Weight	0.023 ounces (0.64 Grams)
Item Model Number	8541661914
Brand	DIGIROOT
Material	Stainless Steel, Aluminum, Rubber
Compatible Devices	Tablets, Laptops, Smartphones (excluding Chromebooks and Remarkable 2)
Item Diameter (Disc Tip)	0.27 Inches
Fiber Tip Size	0.24 Inches
UPC	752454984374

WARRANTY AND SUPPORT

DIGIROOT offers lifetime product service for this stylus. For any questions, concerns, or support needs, please contact DIGIROOT customer service through the retailer where you purchased the product or visit the official DIGIROOT website for contact information.

Recommendation: While the stylus is designed to be screen-friendly, we recommend using a screen protector on your device to safeguard against any potential damage from accidental drops or debris.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question