

Wagner 2358766

Wagner 2358766 Home Decor HVLP Spray Gun Instruction Manual

Model: 2358766

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use, setup, operation, and maintenance of your Wagner 2358766 Home Decor HVLP Spray Gun. Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury or property damage.

- Pressurized liquids can cause injury if not handled properly.
- Avoid contact with skin and eyes. Always wear appropriate personal protective equipment, including safety glasses and gloves.
- Use in a well-ventilated area to prevent inhalation of fumes. If working indoors, ensure adequate airflow or use a respirator.
- Keep away from heat sources and open flames. Many painting materials are flammable.
- Dispose of contents and container in accordance with local, state, and federal regulations.
- Do not modify the spray gun. Use only genuine Wagner replacement parts.
- Keep children and pets away from the work area.

3. PRODUCT OVERVIEW

The Wagner 2358766 Home Decor HVLP Spray Gun is designed for applying various home decor paints and finishes. It features a lightweight design and a bottom-mounted container for paint material.



Figure 1: Wagner 2358766 Home Decor HVLP Spray Gun. This image shows the complete spray gun assembly, including the main body with trigger, the nozzle assembly, and the attached paint container at the bottom.

4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts are present. The package typically includes the spray gun body and one pump sprayer.
2. **Material Preparation:** Prepare your paint or coating material according to the manufacturer's instructions. Ensure it is properly thinned for HVLP application if required. Strain the material to remove any particles that could clog the nozzle.
3. **Filling the Container:** Unscrew the paint container from the spray gun body. Fill the container with the prepared material, ensuring not to overfill. Reattach the container securely to the spray gun body.
4. **Nozzle Adjustment:** Depending on your material and desired spray pattern, adjust the nozzle. Refer to the specific instructions for your paint type for optimal settings.

5. OPERATING INSTRUCTIONS

1. **Test Spray:** Before applying to your project, perform a test spray on a piece of scrap material. This allows you

to check the spray pattern and adjust the nozzle or material consistency as needed.

- 2. **Holding the Gun:** Hold the spray gun perpendicular to the surface, maintaining a consistent distance (typically 6-10 inches).
- 3. **Spraying Technique:** Begin moving the gun before pulling the trigger and release the trigger before stopping the movement. Use smooth, even strokes, overlapping each pass by approximately 50%. Avoid tilting the gun excessively, as this can affect the spray pattern and material flow.
- 4. **Applying Coats:** Apply thin, even coats rather than one thick coat. Allow adequate drying time between coats as recommended by your paint manufacturer.

6. MAINTENANCE

Proper cleaning and maintenance are crucial for the longevity and performance of your spray gun.

- 1. **Immediate Cleaning:** Immediately after each use, empty any remaining material from the container.
- 2. **Disassembly:** Disassemble the nozzle and container from the main gun body.
- 3. **Washing:** Wash all parts that came into contact with paint using the appropriate cleaning solution (water for latex paints, mineral spirits for oil-based paints). Use a brush to remove any dried paint from the nozzle and internal passages.
- 4. **Rinsing:** Rinse all components thoroughly with clean water.
- 5. **Drying and Storage:** Allow all parts to dry completely before reassembling or storing. Store the spray gun in a clean, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No spray or weak spray	Clogged nozzle; insufficient material; air leak	Clean nozzle; refill container; check connections for tightness
Inconsistent spray pattern	Improper material thinning; partially clogged nozzle; incorrect nozzle adjustment	Adjust material consistency; clean nozzle; adjust nozzle settings
Paint dripping	Over-thinning material; worn seals; excessive paint buildup	Thicken material; inspect and replace seals; clean gun thoroughly

8. SPECIFICATIONS

- **Brand:** Wagner
- **Model Number:** 2358766
- **UPC:** 024964233618
- **Material:** Plastic
- **Item Weight:** 0.75 Pounds
- **Power Source:** Manual
- **Included Components:** 1 x Pump Sprayer
- **Recommended Uses:** Painting

9. WARRANTY INFORMATION

This product is covered by Wagner's standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the warranty card included with your purchase or visit the official Wagner website. Keep your proof of purchase for warranty validation.

10. SUPPORT

For technical assistance, replacement parts, or further inquiries, please contact Wagner customer support. You can typically find contact information on the Wagner official website or on the product packaging.

Online Resources: www.wagnerspraytech.com

© 2023 Wagner. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question