

[manuals.plus](#) /

- › [Lenovo](#) /
- › [Lenovo 4X30M39469 Wireless RF Keyboard and Mouse Combo User Manual](#)

## Lenovo 4X30M39469

# Lenovo 4X30M39469 Wireless RF Keyboard and Mouse Combo User Manual

Model: 4X30M39469

Brand: Lenovo

## INTRODUCTION

The Lenovo Essential Wireless Keyboard and Mouse Combo (Model 4X30M39469) provides a reliable and efficient input solution for your computer. This combo includes a slim, 2.5-zone wireless keyboard with a responsive key feeling and a standard-size wireless mouse designed for comfort and functionality. It utilizes an advanced 2.4GHz wireless connection for consistent and reliable connectivity, and features a plug-and-play micro wireless receiver that easily connects both devices.



Image showing the Lenovo 4X30M39469 Wireless RF Keyboard and Mouse Combo, featuring the black keyboard with French AZERTY layout and the matching black wireless mouse.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- Lenovo Wireless Keyboard (French AZERTY layout)
- Lenovo Wireless Mouse
- USB Micro Wireless Receiver
- AA Batteries (for mouse)
- AAA Batteries (for keyboard)

## SETUP

1. **Insert Batteries:** Open the battery compartments on the underside of both the keyboard and the mouse. Insert the provided batteries, ensuring correct polarity (+/-).
2. **Connect USB Receiver:** Plug the micro USB wireless receiver into an available USB port on your computer.
3. **Power On:** Turn on the keyboard and mouse using their respective power switches (if available). The devices should automatically connect to your computer.
4. **Driver Installation:** Your operating system should automatically detect and install the necessary drivers. No manual driver installation is typically required.

## OPERATING INSTRUCTIONS

### Keyboard Usage

- **Key Layout:** The keyboard features a French AZERTY layout with low-profile, island-style keys for comfortable typing.
- **Adjustable Tilt Legs:** Extend the tilt legs on the underside of the keyboard to adjust the typing angle for ergonomic comfort.
- **Spill-Resistant Design:** The keyboard is designed to be spill-resistant, offering protection against minor liquid spills. In case of a spill, immediately disconnect the keyboard and allow it to dry completely before reuse.
- **LED Indicators:** LED indicators show battery life status and other functions like Caps Lock or Num Lock (if applicable).

### Mouse Usage

- **Optical Sensor:** The mouse uses an optical sensor for precise tracking on various surfaces.
- **Ambidextrous Design:** The three-button design is ambidextrous, suitable for both left and right-handed users.
- **Scrolling:** Use the scroll wheel for easy navigation through documents and web pages.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the devices.
- **Battery Replacement:** When the battery indicator LEDs show low power, replace the batteries in both the keyboard and mouse with new AA (mouse) and AAA (keyboard) batteries. Dispose of old batteries responsibly.

- **Storage:** When not in use for extended periods, store the keyboard and mouse in a dry, cool place. Consider removing batteries if storing for several months to prevent leakage.

## TROUBLESHOOTING

Problem	Solution
Keyboard/Mouse not responding	<ul style="list-style-type: none"><li>• Ensure batteries are correctly inserted and charged. Replace if necessary.</li><li>• Verify the USB receiver is securely plugged into a working USB port.</li><li>• Move the keyboard/mouse closer to the USB receiver.</li><li>• Try plugging the USB receiver into a different USB port.</li><li>• Restart your computer.</li></ul>
Lagging or intermittent input	<ul style="list-style-type: none"><li>• Check for potential interference from other wireless devices (e.g., Wi-Fi routers, cordless phones).</li><li>• Ensure the devices are within the effective range of the USB receiver.</li><li>• Replace batteries.</li></ul>
Mouse tracking issues	<ul style="list-style-type: none"><li>• Clean the optical sensor on the underside of the mouse.</li><li>• Use the mouse on a suitable surface (e.g., a mouse pad). Avoid highly reflective or transparent surfaces.</li></ul>

## SPECIFICATIONS

- **Brand:** Lenovo
- **Model Number:** S608QA2
- **Series:** 4X30M39469
- **Color:** Black
- **Connectivity:** Advanced 2.4GHz Wireless (RF)
- **Keyboard Layout:** French AZERTY
- **Keyboard Features:** Low-profile, island-style keys, adjustable tilt legs, spill-resistant design, LED indicators
- **Mouse Features:** Optical sensor, ambidextrous three-button design
- **Power Source:** Battery-powered (AA for mouse, AAA for keyboard)
- **Compatible Devices:** Laptop, PC
- **Operating System Compatibility:** Windows 10 (and likely other Windows versions, macOS, Linux)
- **Keyboard Dimensions (L x W x H):** Approximately 45 x 16.4 x 2 cm

## WARRANTY AND SUPPORT

Specific warranty details for the Lenovo 4X30M39469 Wireless RF Keyboard and Mouse Combo are not available in this document. For warranty information, technical support, or service inquiries, please refer to the documentation included with your product packaging or visit the official Lenovo support website.

You may also find additional support resources and contact information on the [Lenovo Brand Store on Amazon](#).