

[Manuals.plus](#) /

› [Briloner](#) /

› Briloner 7259-019 Round LED Recessed Ceiling Light User Manual

Briloner 7259-019

Briloner 7259-019 Round LED Recessed Ceiling Light User Manual

Model: 7259-019

1. INTRODUCTION

Thank you for choosing the Briloner 7259-019 Round LED Recessed Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.

This product is designed for indoor use and provides a warm white light output of 1000 lumens with a power consumption of 12 Watts.



Image 1: Front view of the Briloner 7259-019 Round LED Recessed Ceiling Light, showcasing its minimalist white circular design.

2. SAFETY INFORMATION

- Installation must be performed by a qualified electrician in accordance with local wiring regulations and standards.
- Ensure the power supply is disconnected at the main circuit breaker before commencing any installation, maintenance, or cleaning.
- This product is designed for indoor use only. Do not expose to moisture or extreme temperatures.
- Do not attempt to modify or repair the fixture. There are no user-serviceable parts inside.
- The LED light sources are built-in and cannot be replaced by the user.
- Ensure the mounting surface can safely support the weight of the fixture.

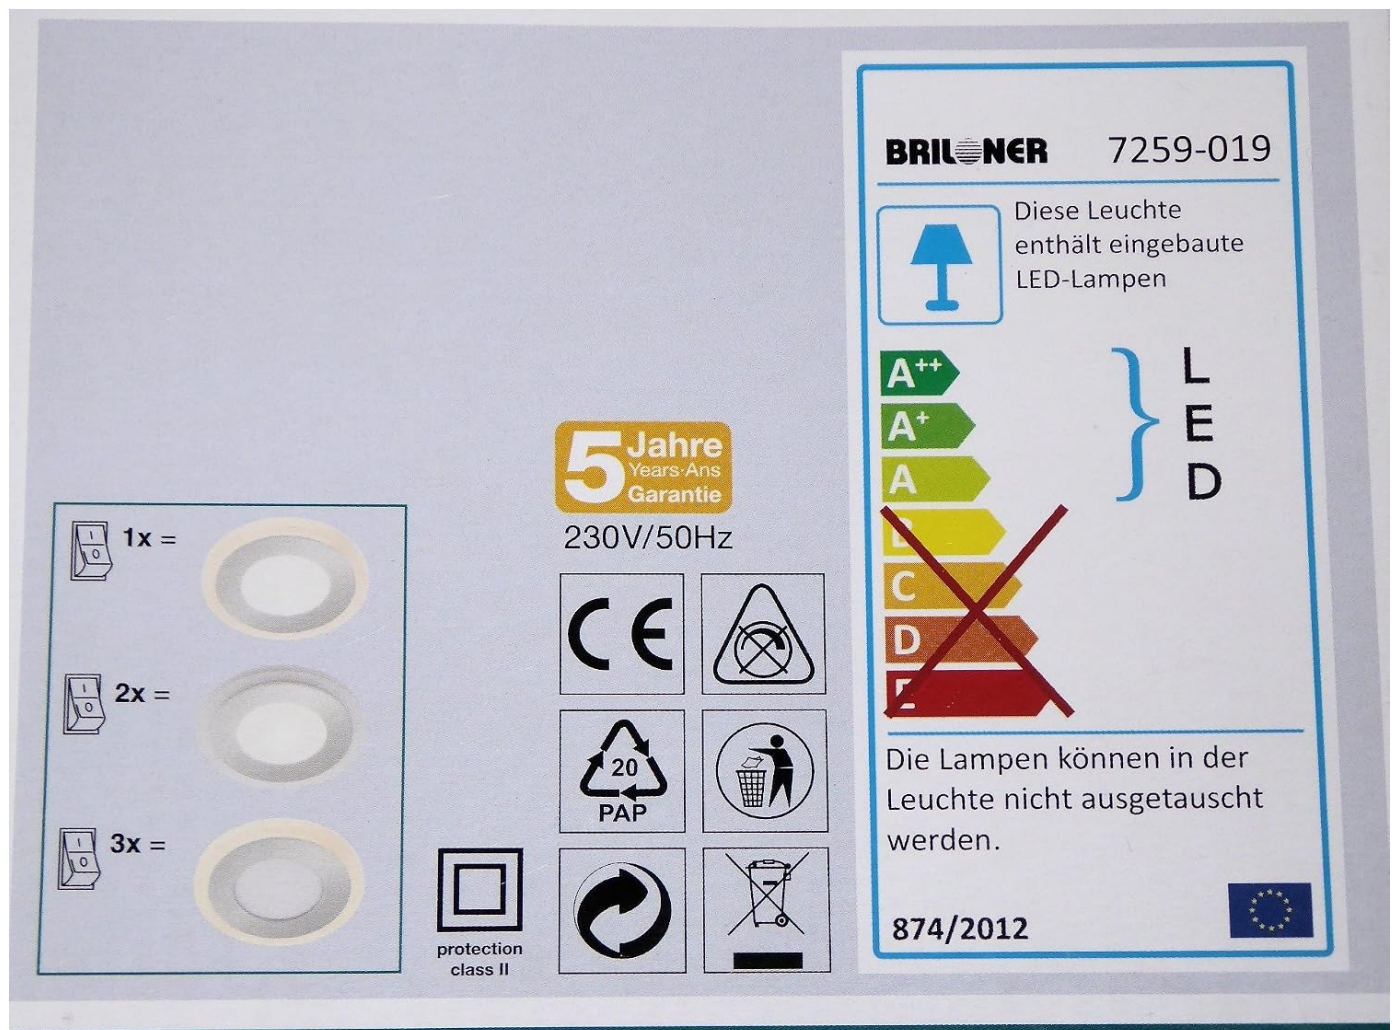


Image 2: Product packaging detail showing the energy efficiency label (LED, A++ to A), 5-year warranty, and various safety symbols including CE marking and disposal instructions.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- 1x Briloner 7259-019 LED Recessed Ceiling Light
- 1x Instruction Manual (this document)
- Mounting hardware (screws, clips, if applicable - typically integrated for recessed lights)

4. INSTALLATION INSTRUCTIONS

Follow these steps for safe and correct installation:

1. **Preparation:** Disconnect power at the main circuit breaker. Ensure the installation area is clear and dry.
2. **Cut-out:** Create a circular cut-out in the ceiling with a diameter of approximately 85 mm (Ø85). Refer to Image 3 for dimensions.
3. **Wiring:** Connect the fixture's electrical cable to your mains power supply (230V/50Hz). Ensure correct polarity (Live, Neutral, Earth if applicable). Use appropriate terminal blocks.
4. **Mounting:** Gently push the recessed light into the ceiling cut-out. The spring clips on the sides of the fixture will secure it in place. Ensure the fixture is flush with the ceiling surface. The minimum required ceiling depth is 30 mm.
5. **Final Check:** Once installed, restore power at the main circuit breaker.

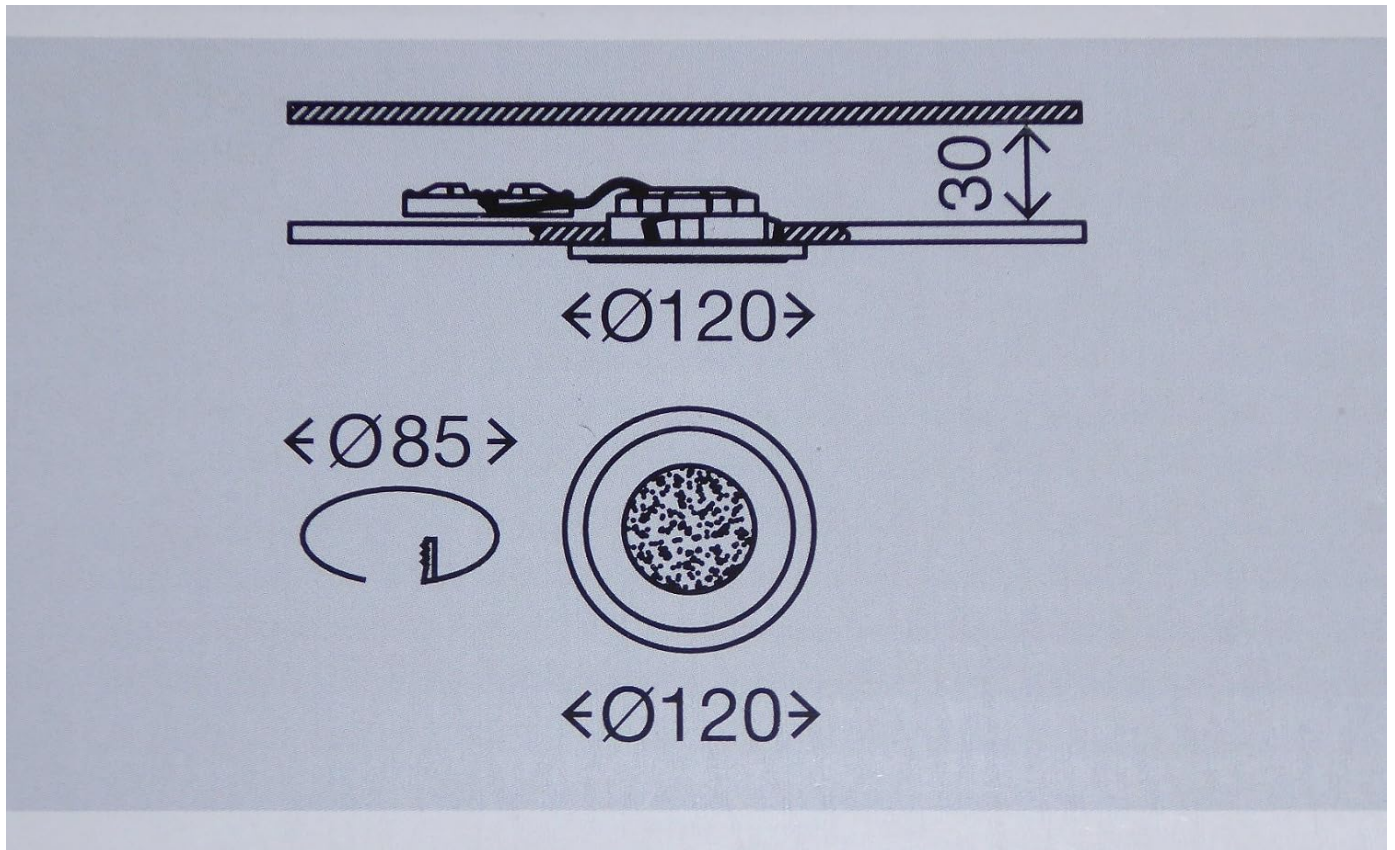


Image 3: Technical drawing illustrating the installation dimensions. The required ceiling cut-out diameter is approximately 85mm (Ø85), the fixture diameter is 120mm (Ø120), and the minimum installation depth is 30mm.

5. OPERATING INSTRUCTIONS

The Briloner 7259-019 LED Recessed Ceiling Light operates via a standard wall switch connected to its power supply. Simply toggle the switch to turn the light on or off.

- **Power On/Off:** Use the connected wall switch to control the light.
- **Light Output:** The fixture provides a consistent warm white light at 1000 lumens.

6. MAINTENANCE

To ensure the longevity and optimal performance of your LED ceiling light, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **Inspection:** Periodically check for any visible damage or loose connections. If any issues are found, disconnect power

and consult a qualified electrician.

- **No User Serviceable Parts:** The LED light source is integrated and cannot be replaced. Do not attempt to open the fixture.

7. TROUBLESHOOTING

If you encounter issues with your Briloner LED Recessed Ceiling Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose wiring; faulty switch.	Check circuit breaker. Ensure all wiring connections are secure. Test the wall switch.
Light flickers.	Unstable power supply; loose connection.	Check power supply stability. Verify wiring connections.
Light is dim.	Not applicable for this fixed-output LED fixture.	Ensure the fixture is receiving full power. If the issue persists, contact support.

If the problem persists after attempting these solutions, please contact Briloner customer support or a qualified electrician.

8. SPECIFICATIONS

Feature	Detail
Brand	Briloner
Model	7259-019
Type	LED Recessed Ceiling Light
Power Consumption	12 Watts
Luminous Flux	1000 Lumens
Light Color	Warm White
Material	Metal
Product Dimensions (L x W x H)	12 x 12 x 3 cm
Weight	200 Grams
Required Cut-out Diameter	Approx. 85 mm
Minimum Installation Depth	30 mm
Power Source	Electric Cable (230V/50Hz)
Light Source Type	Integrated LED

9. WARRANTY AND SUPPORT

This Briloner product comes with a **5-year warranty** from the date of purchase, as indicated on the product packaging (Image 2). This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or further assistance, please contact Briloner customer service. Keep your proof of purchase for warranty validation.

Disposal: This product should not be disposed of with household waste. Please recycle it at an appropriate collection point for electrical and electronic equipment, in accordance with local regulations (refer to the crossed-out wheeled bin symbol in Image 2).

© 2023 Briloner Leuchten. All rights reserved.

Please note: Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B071LQGZTS>

More documents and user manuals: <https://manuals.plus/>