

[Manuals.plus](#) /

› [Korona](#) /

› Korona 45060 Raclette XXL 10-Person Grill Instruction Manual

Korona 45060

Korona 45060 Raclette XXL 10-Person Grill Instruction Manual

Model: 45060

1. INTRODUCTION

Thank you for choosing the Korona 45060 Raclette XXL 10-Person Grill. This appliance is designed for preparing a variety of grilled foods and raclette dishes for up to 10 people. Please read this instruction manual carefully before first use to ensure safe and efficient operation. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Ensure the appliance is placed on a stable, heat-resistant surface.

3. PRODUCT OVERVIEW

The Korona 45060 Raclette XXL grill features a large non-stick grill plate and 10 individual raclette pans, designed for versatile cooking.



Figure 1: Korona 45060 Raclette XXL 10-Person Grill. This image shows the complete raclette grill with various foods being cooked on the top grill plate and in the individual pans below.

Components:

- **Base Unit:** Houses the heating element and electrical components.
- **Non-Stick Grill Plate:** Removable for easy cleaning, suitable for grilling meats, vegetables, and more.
- **10 Individual Raclette Pans:** Non-stick coated, designed for melting cheese or cooking small portions.
- **10 Wooden Spatulas:** For safely handling food in the raclette pans.
- **Temperature Control Knob:** Continuously adjustable for precise heat settings.
- **Indicator Light:** Illuminates when the appliance is heating.
- **Power Cord:** Extra-long (1.2m) for convenient placement.
- **Non-Slip Rubber Feet:** For stability during use.



Figure 2: Individual Raclette Pans and Spatulas. This image displays the ten non-stick raclette pans and the accompanying wooden spatulas.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Dispose of packaging responsibly.
2. **Initial Cleaning:** Before first use, wipe the grill plate and raclette pans with a damp cloth and mild detergent. Rinse thoroughly and dry completely. The base unit can be wiped with a damp cloth, but never immerse it in water.
3. **Placement:** Place the raclette grill on a stable, flat, and heat-resistant surface. Ensure there is sufficient space around the appliance for ventilation and to prevent heat damage to surrounding objects.
4. **Assembly:** Place the cleaned grill plate securely on top of the base unit. Ensure it is properly seated.
5. **Power Connection:** Ensure the temperature control knob is set to the 'MIN' position before plugging the appliance into a grounded 220V AC power outlet.

5. OPERATING INSTRUCTIONS

The Korona 45060 Raclette XXL is designed for easy and enjoyable cooking.

1. **Preheating:** Plug in the appliance. Turn the temperature control knob clockwise to the desired heat setting (e.g., 'MAX' for quick preheating). The indicator light will illuminate, signaling that the appliance is heating. Allow 5-10 minutes for the grill plate and pans to preheat.
2. **Using the Grill Plate:** Once preheated, place food items such as sliced meats, vegetables, or seafood directly onto the non-stick grill plate. Adjust the temperature as needed for optimal cooking.
3. **Using the Raclette Pans:** Prepare small portions of ingredients (e.g., cheese, diced vegetables, bacon) in the individual raclette pans. Slide the pans into the designated slots beneath the heating element. The heat from above will cook and melt the contents. Use the wooden spatulas to remove food from the pans.
4. **Temperature Control:** The continuously adjustable temperature control allows you to fine-tune the heat for different foods and preferences. Turn the knob towards 'MAX' for higher heat and 'MIN' for lower heat.
5. **Indicator Light:** The indicator light will cycle on and off during operation, indicating that the heating element is maintaining the set temperature.
6. **After Use:** Once cooking is complete, turn the temperature control knob to the 'MIN' position and unplug the appliance from the wall outlet. Allow the grill to cool down completely before cleaning.



Figure 3: Temperature Control Knob. This image shows a close-up of the rotary temperature control knob and the power indicator light on the side of the raclette grill.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your raclette grill.

1. **Cool Down:** Always ensure the appliance is unplugged and completely cool before attempting any cleaning.
2. **Grill Plate and Pans:** The non-stick grill plate and individual raclette pans are removable. Wash them by hand with warm, soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads, as these can damage the non-stick coating. Rinse thoroughly and dry completely.
3. **Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not use harsh chemicals or abrasive materials. Never immerse the base unit in water or any other liquid.
4. **Storage:** Once clean and dry, store the raclette grill in a cool, dry place. Ensure all components are properly assembled or stored together to prevent loss.

7. TROUBLESHOOTING

If you encounter issues with your Korona Raclette grill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; temperature knob set to 'MIN'.	Ensure the power cord is securely plugged into a working outlet. Turn the temperature knob to a higher setting.
Uneven heating.	Grill plate not properly seated; insufficient preheating time.	Ensure the grill plate is correctly positioned. Allow adequate preheating time (5-10 minutes).
Food sticks to the grill plate/pans.	Insufficient oil/fat; non-stick coating damaged; too high heat.	Apply a small amount of cooking oil or fat before placing food. Ensure non-stick coating is intact. Adjust temperature.

If the problem persists, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	45060
Power	1500 Watts
Voltage	220 Volts (AC)
Dimensions (L x W x H)	64.5 x 24.5 x 10.5 cm
Weight	3 Kilograms
Material	Metal
Cable Length	1.2 meters
Capacity	10 persons / 10 pans
Special Features	Non-stick removable grill plate, continuously adjustable temperature, indicator light, non-slip feet.

9. WARRANTY AND SUPPORT

This Korona appliance comes with a **1-year availability for spare parts**. For warranty claims, technical support, or inquiries regarding spare parts, please contact your retailer or the Korona customer service department.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B071LT7XKW>

More documents and user manuals: <https://manuals.plus/>