

Brother DCP-L8410CDW

Brother DCP-L8410CDW Color Laser Multifunction Printer

USER MANUAL

1. Introduction

This manual provides essential information for the safe and efficient use of your Brother DCP-L8410CDW Color Laser Multifunction Printer. This 3-in-1 device is designed for professional environments, offering printing, copying, and scanning functionalities. It features an intuitive touchscreen, Wi-Fi, and Ethernet connectivity, making it suitable for various work settings.

Key features include:

- Print, copy, and scan capabilities
- High-quality color laser printing (up to 2400 dpi)
- Automatic duplex printing
- Flexible paper handling with a maximum capacity of 300 sheets
- Integrated Wi-Fi and Gigabit Ethernet for versatile connectivity



Image 1.1: Front view of the Brother DCP-L8410CDW printer.

2. Setup

Follow these steps to set up your Brother DCP-L8410CDW printer:

- 1. Unpacking:** Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the device.
- 2. Install Toner Cartridges:** Open the front cover and install the toner cartridges into their respective slots. Refer to the labels for correct color placement.
- 3. Load Paper:** Open the paper tray and adjust the paper guides to fit your paper size (e.g., A4). Load paper into the tray and close it securely.

4. **Connect Power:** Connect the power cord to the printer and then to a grounded electrical outlet.

5. **Connect to Network/Computer:**

- **Wireless (Wi-Fi):** On the printer's touchscreen, navigate to Network settings and follow the prompts to connect to your Wi-Fi network.
- **Wired (Ethernet):** Connect an Ethernet cable from the printer's LAN port to your network router or switch.
- **USB:** Connect a USB 2.0 cable from the printer to your computer.

6. **Install Drivers:** Insert the installation CD (if provided) into your computer or download the latest drivers and software from the official Brother support website. Follow the on-screen instructions to complete the installation.



Image 2.1: Side view of the Brother DCP-L8410CDW, showing the paper tray.

3. Operating Instructions

The Brother DCP-L8410CDW features an intuitive touchscreen for easy operation.

3.1. Printing

1. Ensure the printer is powered on and connected to your network or computer.

2. Open the document or image you wish to print on your computer or mobile device.
3. Select the 'Print' option from your application.
4. Choose the Brother DCP-L8410CDW from the list of available printers.
5. Adjust print settings (e.g., number of copies, color/mono, duplex) as needed.
6. Click 'Print'.

3.2. Copying

1. Place your document face down on the scanner glass or face up in the Automatic Document Feeder (ADF).
2. On the printer's touchscreen, select the 'Copy' function.
3. Adjust settings such as number of copies, color/mono, and enlargement/reduction.
4. Press 'Start' to begin copying.

3.3. Scanning

1. Place your document face down on the scanner glass or face up in the ADF.
2. On the printer's touchscreen, select the 'Scan' function.
3. Choose your desired scan destination (e.g., Scan to PC, Scan to USB, Scan to Email).
4. Adjust scan settings (e.g., resolution, file type) if necessary.
5. Press 'Start' to begin scanning.



Image 3.1: The intuitive touchscreen control panel of the DCP-L8410CDW.



Image 3.2: Using the Automatic Document Feeder for scanning or copying, and the USB port for direct printing/scanning.

4. Maintenance

Regular maintenance ensures optimal performance and extends the life of your printer.

4.1. Replacing Toner Cartridges

1. When a 'Low Toner' or 'Replace Toner' message appears on the display, order new genuine Brother toner cartridges.
2. Open the front cover of the printer.
3. Remove the old toner cartridge and drum unit assembly.
4. Separate the toner cartridge from the drum unit.
5. Unpack the new toner cartridge and install it into the drum unit until it clicks into place.
6. Insert the new toner and drum unit assembly back into the printer.
7. Close the front cover.

4.2. Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, lint-free cloth. Do not use abrasive cleaners.
- **Scanner Glass:** Clean the scanner glass with a soft, dry cloth. For stubborn marks, use a small amount of glass cleaner applied to the cloth (not directly to the glass).
- **Corona Wire:** Periodically clean the corona wire inside the drum unit to prevent print quality issues. Refer to the printer's internal instructions or the full user guide for detailed steps.

5. Troubleshooting

This section addresses common issues you might encounter with your printer.

5.1. Paper Jams

If a 'Paper Jam' message appears:

1. Turn off the printer and unplug the power cord.
2. Open the rear cover or other access points as indicated on the display or in the full user guide.
3. Carefully pull out any jammed paper in the direction of the paper path. Avoid tearing the paper.
4. Check all paper trays and internal areas for small pieces of torn paper.
5. Close all covers, plug in the power cord, and turn on the printer.



Image 5.1: Clearing a paper jam from the rear of the printer.

5.2. Print Quality Issues

- **Faded Prints:** Toner cartridge may be low. Replace if necessary.
- **Streaks or Spots:** Clean the corona wire or check for foreign objects on the drum unit.
- **Incorrect Colors:** Ensure genuine Brother toner cartridges are used and perform a color calibration from the printer's menu.

5.3. Connectivity Problems

- **Wi-Fi Disconnected:** Check network settings on the printer and ensure your router is functioning correctly. Restart both devices if needed.
- **Cannot Print from PC:** Verify that the printer drivers are correctly installed and updated. Check cable connections for wired setups.

6. Specifications

Feature	Specification
Model Name	DCP-L8410CDW
Product Dimensions (DxWxH)	43.5P x 53.9W x 52.6H cm
Maximum Media Size	A4
Max Sheet Capacity	300 sheets
Max Copy Speed (Black & White)	31 Pages per minute
Max Color Print Resolution	61 dpcm
Max Black & White Print Resolution	2400 dpi
Duplex Printing	Yes
Connectivity Technology	Ethernet, USB 2.0, Wireless LAN (Wi-Fi)
Printing Technology	Laser
Printer Output	Color
Max Print Speed (Color)	31 Pages per minute
Item Weight	27.6 Kilograms
Power Consumption	500 Watts
Scanner Type	Flatbed

7. Warranty Information

This Brother DCP-L8410CDW printer comes with a **Limited Warranty**. For detailed information regarding the terms, conditions, and duration of your warranty, please refer to the warranty card included with your product or visit the official Brother website. Keep your proof of purchase for warranty claims.

8. Customer Support

For further assistance, including driver downloads, FAQs, and contact information for technical support, please visit the official Brother support website:

www.brother.com

You can also find additional resources and troubleshooting guides specific to your model on the support page.