



Manuals.plus /

› Cuisinart /

› Cuisinart DCC-2800WCRF Replacement Carafe Instruction Manual

Cuisinart DCC-2800WCRF

Cuisinart DCC-2800WCRF Replacement Carafe Instruction Manual

Model: DCC-2800WCRF

1. INTRODUCTION

This manual provides instructions for the Cuisinart DCC-2800WCRF White Replacement Carafe. This carafe is designed to replace the original carafe for specific Cuisinart 14-cup coffee makers. Please read these instructions carefully before use to ensure proper handling and maintenance.

2. COMPATIBILITY

The DCC-2800WCRF replacement carafe is specifically designed for Cuisinart 14-cup coffee makers. It is known to be compatible with the following models:

- Cuisinart DCC-2200
- Cuisinart DCC-2600
- Cuisinart DCC-2800
- Cuisinart DCC-3200

Always verify your coffee maker's model number to ensure proper fit and function. This carafe is an original equipment manufacturer (OEM) part.

3. INSTALLATION AND SETUP

Installing the replacement carafe is straightforward:

1. **Unpack:** Carefully remove the new carafe from its packaging. Inspect for any damage.
2. **Rinse:** Before first use, wash the carafe and its lid thoroughly with warm, soapy water. Rinse completely.
3. **Placement:** Place the clean carafe onto the warming plate of your compatible Cuisinart coffee maker. Ensure it sits securely and is properly aligned with the coffee maker's drip mechanism.



Image 1: The Cuisinart DCC-2800WCRF White Replacement Carafe. This image shows the complete carafe, including the glass pot, handle, and lid, ready for use with a compatible Cuisinart coffee maker.

4. OPERATING INSTRUCTIONS

The carafe functions as the coffee collection vessel for your Cuisinart coffee maker. Follow these guidelines for optimal use:

- **Brewing:** Ensure the carafe is correctly positioned on the warming plate before starting the brewing cycle.
- **Pouring:** Use the handle to safely lift and pour coffee from the carafe. The lid is designed for easy pouring while minimizing spills.
- **Warming Plate:** After brewing, leave the carafe on the warming plate to keep coffee hot. Refer to your coffee maker's manual for specific warming plate duration and safety instructions.
- **Handling:** Always handle the glass carafe with care. Avoid sudden temperature changes, such as placing a hot carafe on a cold surface or filling a cold carafe with very hot liquid, as this can cause thermal shock and breakage.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your carafe:

- **Daily Cleaning:** After each use, wash the carafe and lid with warm, soapy water. A soft sponge or cloth is recommended.
- **Stain Removal:** For coffee stains, fill the carafe with warm water and a small amount of white vinegar or a specialized coffee pot cleaner. Let it soak for 15-30 minutes, then scrub gently and rinse thoroughly.
- **Dishwasher Safety:** The carafe and lid are generally top-rack dishwasher safe. However, hand washing is recommended to preserve the finish and extend product life.
- **Storage:** Store the carafe in a safe place where it will not be easily knocked over or come into contact with other hard objects.

Caution: Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the glass and plastic components.

6. TROUBLESHOOTING

If you encounter issues with your replacement carafe, consider the following:

- **Carafe Does Not Fit:**
 - Verify your coffee maker's model number against the compatible models listed in Section 2.
 - Ensure the carafe is correctly aligned on the warming plate and under the drip spout.
- **Carafe Breaks Easily:**
 - Glass carafes are fragile. Avoid dropping, hitting against hard surfaces, or subjecting them to sudden temperature changes.
 - Do not leave the carafe in a sink where other dishes might impact it.
- **Leaking:**
 - Ensure the lid is properly seated on the carafe.
 - Check for any cracks in the glass that might have occurred from impact.

7. SPECIFICATIONS

Model Number	DCC-2800WCRF
Brand	Cuisinart
Color	White
Capacity	14-cup (for compatible coffee makers)
Material	Glass (carafe), Plastic (handle and lid)
Item Weight	8 ounces
Included Components	Carafe with Lid
UPC	086279075093

8. WARRANTY AND SUPPORT

As a replacement part, specific warranty details for the DCC-2800WCRF carafe may vary. Please refer to the original warranty information provided with your Cuisinart coffee maker for details regarding replacement parts.

For further assistance or inquiries, please contact Cuisinart Customer Service:

- **Website:** www.cuisinart.com
- **Customer Service:** Refer to the "Contact Us" section on the official Cuisinart website for phone numbers and email support.

Always provide your product model number (DCC-2800WCRF) when contacting support.

