

[Manuals.plus](#) /

> [motorola](#) /

> Motorola C601 Single DECT Phone User Manual

motorola C601

Motorola C601 Single DECT Phone User Manual

Model: C601



Image: Motorola C601 Single DECT Phone handset in its charging base, viewed from an angle.

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Motorola C601 Single DECT Phone. Please read this manual thoroughly to ensure proper use and to maximize the features of your new phone.

PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- 1 x Cordless Phone Handset
- 1 x Base Unit
- 1 x Power Adaptor
- 1 x Telephone Line Cord
- 2 x AAA Rechargeable Batteries
- 1 x User Manual (this document)



Image: The Motorola C601 DECT Phone base unit, power adaptor, and telephone line cord, illustrating the components included in the package.

PRODUCT OVERVIEW AND FEATURES

The Motorola C601 DECT Phone is designed for clear and convenient communication. Key features include:

- **50 Name and Number Phonebook:** Store frequently called contacts for quick access.
- **Speakerphone:** Engage in hands-free conversations.
- **Caller ID / Call Waiting:** Identify incoming callers and manage multiple calls.
- **40 Name and Number Caller ID List:** Review recent incoming calls.
- **Multi-Handset Support:** Register up to 5 handsets to a single base unit (additional handsets sold separately).
- **Redial Function:** Easily redial up to 10 of the last numbers called.
- **DECT Technology:** Provides a wide working range and clear, undisturbed signal.



Image: Front view of the Motorola C601 Single DECT Phone handset, showcasing the display, keypad, and function buttons.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards to remove it.
3. Insert the two AAA rechargeable batteries, observing the correct polarity (+ and -).
4. Replace the battery compartment cover.

2. Base Unit Connection

1. Connect the telephone line cord to the LINE port on the base unit and to your telephone wall socket.
2. Connect the power adaptor to the POWER port on the base unit and plug it into a mains power outlet.
3. Place the handset on the base unit to charge the batteries. Allow at least 15 hours for the initial charge.

3. Handset Registration (for additional handsets)

If you are using multiple handsets, they may need to be registered to the base unit. Refer to the specific instructions provided with your multi-handset package for detailed registration steps. The Motorola C601 base unit supports up to 5 registered handsets.

OPERATING INSTRUCTIONS

Making a Call

1. Lift the handset from the base or press the **Call** button.
2. Dial the desired phone number using the keypad.

3. Press the **Call** button again to initiate the call if not already connected.

Answering a Call

When the phone rings:

- Lift the handset from the base, or press the **Call** button.

Ending a Call

Place the handset back on the base unit, or press the **End Call** button.

Using the Speakerphone

During a call, press the **Speakerphone** button to activate or deactivate the speakerphone function.

Phonebook

To access and manage your phonebook entries:

1. Press the **MENU** button.
2. Navigate to "Phonebook" using the arrow keys and press **OK**.
3. Follow the on-screen prompts to add, edit, or delete entries.

Caller ID List

To view recent incoming calls:

1. Press the **MENU** button.
2. Navigate to "Caller ID" or "Call List" and press **OK**.
3. Use the arrow keys to scroll through the list of up to 40 entries.

Redial

To redial one of the last 10 numbers called:

- Press the **Redial** button (often represented by a curved arrow or a specific button).
- Use the arrow keys to select the desired number and press **Call**.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the phone's surfaces. Avoid abrasive cleaners or solvents.
- **Battery Care:** Use only the specified rechargeable AAA batteries. Do not expose batteries to extreme temperatures.
- **Placement:** Keep the base unit and handset away from heat sources, direct sunlight, and moisture. Ensure adequate ventilation.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
No dial tone	<p>Ensure the telephone line cord is securely connected to both the base unit and the wall socket.</p> <p>Check if the power adaptor is correctly plugged in and the base unit is powered on.</p>
Handset not charging	<p>Verify the handset is correctly seated in the base unit.</p> <p>Ensure the power adaptor is connected and the power outlet is active.</p> <p>Check if the batteries are inserted with correct polarity.</p>
Poor call quality / Static	<p>Move the handset closer to the base unit.</p> <p>Avoid placing the base unit near other electronic devices that may cause interference (e.g., Wi-Fi routers, microwaves).</p>
Cannot make/receive calls	<p>Confirm the telephone line is active.</p> <p>Ensure the handset is registered to the base unit.</p>

SPECIFICATIONS

Feature	Detail
Brand	Motorola
Model Number	C601
Telephone Type	Cordless DECT Phone
Colour	Black
Power Source	Corded Electric
Dialler Type	Keypad
Item Dimensions (L x W x H)	14 x 8.7 x 18 cm
Item Weight	0.47 Kilograms
Answering System Type	Digital
Compatible Devices	House and business phone systems
Conference Call Capability	1 way
Phonebook Capacity	50 names and numbers
Caller ID List Capacity	40 names and numbers
Handset Registration	Up to 5 handsets per base



Image: The Motorola C601 DECT Phone handset shown in a hand, indicating its approximate size (6.7 inches / 16 cm in height).

WARRANTY INFORMATION

This Motorola C601 Single DECT Phone comes with a **1 Year Local (Singapore) Warranty**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included in your package or contact Motorola customer support.

SUPPORT

For further assistance, technical support, or service inquiries, please visit the official Motorola support website or contact their customer service hotline in your region. Contact details can typically be found on the Motorola website or in the product packaging.