



[Manuals.plus](#) /

› [Garmin](#) /

› [Garmin Approach S60 Premium GPS Golf Watch User Manual](#)

Garmin 010-01702-01

Garmin Approach S60 Premium GPS Golf Watch User Manual

Model: 010-01702-01

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

The Garmin Approach S60 is a premium GPS golf watch designed to provide essential information for your golf game directly on your wrist. Featuring a large, sunlight-readable color touchscreen, it offers precise yardages, full-color course mapping, and convenient QuickFit bands for versatile styling. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your Approach S60.



Figure 1: Garmin Approach S60 Premium GPS Golf Watch. The watch features a round display showing a golf course layout with a green, a flag, and a distance of 162 yards. The watch has a white silicone band and metallic buttons on the side.

SETUP

1. Charging the Device

Before initial use, fully charge your Approach S60. Use the provided charging/data cable to connect the watch to a USB power source.

- Connect the small end of the charging cable to the charging port on the back of your watch.
- Connect the large end of the charging cable to a USB port on your computer or a USB wall adapter.

- Allow the device to charge until the battery indicator shows a full charge.

2. Powering On and Off

- **To Power On:** Press and hold the power button (usually the top right button) until the Garmin logo appears.
- **To Power Off:** Press and hold the power button until the power options menu appears, then select "Power Off".

3. Initial Setup and Pairing

Upon first power-on, the watch will guide you through initial setup steps, including language selection and basic settings. To unlock full features, pair your Approach S60 with the Garmin Connect mobile app via Bluetooth.

1. Download the [Garmin Connect app](#) from your smartphone's app store.
2. Open the Garmin Connect app and create an account or sign in.
3. Follow the on-screen instructions in the app to add a new device.
4. On your Approach S60, navigate to the settings menu and select "Pair Phone" or "Bluetooth".
5. Confirm the pairing code displayed on both your watch and smartphone.

4. Attaching QuickFit Bands

The Approach S60 features QuickFit bands for easy attachment and removal without tools.

- Align one side of the QuickFit band with the pin on the watch lug.
- Pull the spring bar on the opposite side of the band and align it with the other side of the watch lug.
- Release the spring bar to secure the band in place. Gently pull the band to ensure it is firmly attached.

OPERATION

1. Using the Touchscreen Display

The 1.2-inch sunlight-readable color touchscreen is the primary interface for the Approach S60.

- **Tap:** Select an item or confirm an action.
- **Swipe:** Navigate through menus, widgets, or course views.
- **Press and Hold:** Access additional options or settings for the current screen.

2. Golf Mode and GPS Functionality

The Approach S60 automatically detects your location and provides course information using its built-in GPS.

1. From the watch face, tap the golf icon or select "Play Golf".
2. The watch will acquire GPS satellites and display a list of nearby golf courses. Select your course.
3. Once a course is selected, the watch will display the current hole, yardages to the front, middle, and back of the green, and hazards.
4. **CourseView Mapping:** Swipe across the screen to view full-color course maps, allowing you to see doglegs, layups, and other course features. Tap on the map to get yardage to any point.
5. **Green View:** Tap the green icon to see a detailed view of the green, allowing you to manually move the pin position for more accurate yardages.

3. Scorekeeping and Stat Tracking

The watch allows you to keep score and track various golf statistics during your round.

- After each hole, the watch will prompt you to enter your score.

- You can also track putts, fairways hit, and greens in regulation.
- Review your round summary on the watch or sync with the Garmin Connect app for detailed analysis.

MAINTENANCE

1. Cleaning the Device

Regular cleaning helps maintain the appearance and functionality of your Approach S60.

- Wipe the watch and band with a soft, damp, lint-free cloth.
- For stubborn dirt, use a mild soap solution and rinse thoroughly with water.
- Ensure the device is completely dry before charging or prolonged storage.
- Avoid using harsh chemicals, abrasive cleaners, or solvents that could damage the watch's finish or components.

2. Battery Care

To maximize battery life and longevity:

- Charge the device fully before long periods of inactivity.
- Store the device in a cool, dry place away from direct sunlight.
- Avoid exposing the device to extreme temperatures.
- If the device will not be used for an extended period, charge it to about 50% before storing.

3. Software Updates

Garmin periodically releases software updates to improve performance and add new features. Ensure your device is updated regularly via the Garmin Connect app or Garmin Express on your computer.

TROUBLESHOOTING

Common Issues and Solutions

| Issue | Solution |
|-------------------------------------|--|
| Device will not power on. | Ensure the device is fully charged. Connect it to a power source for at least 30 minutes. If unresponsive, perform a soft reset by holding the power button for 15 seconds. |
| GPS signal not acquired. | Ensure you are in an open outdoor area with a clear view of the sky. Remain stationary for a few minutes. Sync the device with Garmin Connect to update satellite data. |
| Battery drains quickly. | Reduce screen brightness, disable unnecessary features like Wi-Fi or Bluetooth when not in use, and ensure the software is up to date. GPS usage consumes more battery. |
| Cannot pair with smartphone. | Ensure Bluetooth is enabled on both devices. Restart both the watch and the smartphone. Forget the device in your phone's Bluetooth settings and try pairing again through the Garmin Connect app. |
| Touchscreen is unresponsive. | Clean the screen to remove any dirt or moisture. Restart the device. If the issue persists, contact Garmin Support. |

SPECIFICATIONS

| Feature | Detail |
|---------------------------|--|
| Model Number | 010-01702-01 |
| Product Dimensions | 1.9 x 1.9 x 0.6 inches (48.3 x 48.3 x 15.2 mm) |
| Item Weight | 1.6 ounces (45.4 grams) |
| Screen Size | 1.2 inches (30.4 mm) diameter |
| Display Type | Sunlight-readable, color touchscreen LCD |
| Battery Type | Rechargeable Lithium Polymer |
| Battery Life (Golf Mode) | Up to 10 hours |
| Battery Life (Watch Mode) | Up to 10 days |
| Connectivity | Bluetooth |
| Preloaded Courses | More than 40,000 worldwide |
| Included Components | Approach S60 device, charging/data cable, manual |

WARRANTY & SUPPORT

Warranty Information

For detailed warranty information regarding your Garmin Approach S60, please refer to the official Garmin website or the warranty card included with your product. Garmin's standard limited warranty typically covers defects in materials and workmanship for a specified period from the date of purchase.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Garmin Customer Support. You can find support resources, FAQs, and contact information on the official Garmin website:

[Garmin Support Website](#)

You may also refer to the official User Manual PDF available online [Garmin Approach S60 User Manual \(PDF\)](#)