



[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Regency Multi Cook Kettle With Steamer - User Manual

AGARO 33874

AGARO Regency Multi Cook Kettle With Steamer - User Manual

Model: 33874

INTRODUCTION

The AGARO Regency Multi Cook Kettle with Steamer is a versatile kitchen appliance designed for efficient and convenient cooking. With its 1.2L inner pot and 0.92L steamer capacity, it allows for boiling water, preparing tea, coffee, noodles, and steaming vegetables quickly. Its double-layered body ensures safety and durability, while variable temperature settings provide precise control for various cooking needs.



Figure 1: AGARO Regency Multi Cook Kettle with Steamer, showcasing its compact design and sea green color.

IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please read and follow these instructions carefully:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse the cord, plugs, or the power base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the lid is securely closed during operation, especially when boiling.
- Do not overfill the kettle beyond the maximum fill line to prevent boiling water from overflowing.
- The appliance is equipped with dry heat protection to prevent damage when operating without water.

PRODUCT COMPONENTS

Your AGARO Regency Multi Cook Kettle comes with several components designed for versatile cooking:

- **Main Kettle Unit:** Features a 1.2L inner pot made of SS304 stainless steel and a double-layered plastic outer body for cool-touch handling.
- **360° Swivel Detachable Power Base:** Allows for cord-free serving and easy placement from any angle.
- **Transparent Glass Lid with Handle:** For monitoring cooking progress and safe handling.
- **Stainless Steel Steaming Pot:** With a 0.92L capacity, ideal for steaming vegetables, dumplings, and more.
- **Stainless Steel Grill Rack:** Used within the steaming pot for elevated steaming.
- **Egg Boiling Rack:** Specifically designed for boiling eggs efficiently.
- **Plastic Bowl:** A versatile accessory for various uses.

Know Your Multi-Tasking Kettle



**Stainless Steel
Steaming Pot**



Plastic Bowl



**Egg Boiling
Rack**



**Stainless Steel
Grill Rack**



Figure 2: Included accessories: Stainless steel steaming pot, plastic bowl, egg boiling rack, and stainless steel grill rack.

Make Every Meal Effortless



Figure 3: Key features including the transparent glass lid, wide mouth for easy cleaning, cool-touch outer body, and the 2-adjustable heat-setting knob.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the inner pot, steaming pot, grill rack, egg boiling rack, and plastic bowl with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main kettle unit with a damp cloth. Do not immerse the main kettle unit or power base in water.
3. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.
4. **Connect Power:** Place the main kettle unit onto the power base. Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

General Operation:

1. Fill the inner pot with the desired amount of water or ingredients. Do not exceed the maximum fill line.
2. Place the main kettle unit securely onto the 360° swivel detachable power base.
3. Place the transparent glass lid on top of the kettle.
4. Plug the power cord into a suitable electrical outlet.
5. Turn the variable temperature control knob to the desired setting:
 - **"I" Setting:** For lower heat, simmering, or keeping food warm.
 - **"II" Setting:** For rapid boiling or higher heat cooking.
6. The indicator light will illuminate, indicating the kettle is heating.
7. Once the desired temperature is reached or water boils, the kettle will automatically shut off (on "II" setting for boiling water).
8. To turn off manually, turn the knob to "OFF".

Specific Cooking Functions:

- **Boiling Water:** Fill the inner pot with water, place the lid, and turn the knob to "II". The kettle will boil rapidly and shut off automatically once boiling.
- **Preparing Tea/Coffee:** Boil water as above. Once boiled, add tea bags, coffee, or instant mixes directly to the hot water in the pot. Stir and serve.
- **Cooking Noodles:** Add water to the inner pot and bring to a boil on "II" setting. Once boiling, add noodles and any desired ingredients. Reduce heat to "I" if simmering is required until cooked.
- **Steaming Vegetables/Eggs:**
 - a. Pour water into the main kettle unit (ensure water level is below the steaming pot).
 - b. Place the stainless steel grill rack or egg boiling rack inside the stainless steel steaming pot.
 - c. Arrange vegetables or eggs on the rack.
 - d. Place the steaming pot onto the main kettle unit.
 - e. Cover with the transparent glass lid.
 - f. Turn the knob to "II" to generate steam. Steam until food is cooked to your preference.



Figure 4: The kettle in use, demonstrating its capability to cook noodles in the main pot while steaming momos in the upper steamer.

Enjoy Dual Cooking in One Appliance



Figure 5: Visual representation of the 1.2 Liter inner pot capacity and 0.92 Liter steamer capacity, highlighting dual cooking functionality.

Features that Simplify Cooking



600W Powerful Heating



360° Detachable Power Base



Light weight & Portable



Dry Heat Protected



Note: Since this machine has dry heat protection it prevents oil based cooking like sautéing or frying.

Figure 6: Overview of key features including 600W powerful heating, 360° detachable power base, lightweight and portable design, and dry heat protection.

MAINTENANCE AND CLEANING

Regular cleaning will prolong the life of your appliance and ensure optimal performance.

1. **Always unplug** the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the main kettle unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
3. **Interior Cleaning (Pot and Accessories):** The inner pot, stainless steel steaming pot, grill rack, egg boiling rack, and plastic bowl can be washed with warm, soapy water. Rinse thoroughly and dry completely before storing or next use.
4. **Power Base:** Never immerse the power base in water or any other liquid. Wipe with a dry cloth if necessary.
5. **Descaling:** Over time, mineral deposits (limescale) may build up inside the inner pot, especially in areas with hard water. To descale:
 - Fill the kettle with a mixture of 1 part white vinegar and 2 parts water.

- Bring the mixture to a boil (using setting "II") and let it stand for at least 30 minutes, or longer for heavy buildup.
- Empty the kettle and rinse thoroughly several times with fresh water.
- For stubborn stains, a non-abrasive scrubber can be used gently.

6. **Storage:** Ensure all parts are clean and dry before storing. Store the appliance in a cool, dry place.

Product Care Instructions: Keep Clean and dry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in correctly. Power outlet is not working. Kettle not properly seated on the power base. Dry heat protection activated.	Ensure the power cord is securely plugged into both the kettle base and the wall outlet. Test the outlet with another appliance. Lift the kettle and reseal it firmly on the power base. Add water to the kettle and allow it to cool down before attempting to use again.
Kettle stops heating prematurely.	Automatic shut-off activated. Insufficient water in the pot (dry heat protection).	This is a normal safety feature for boiling water. Ensure adequate water is added. If dry heat protection activated, add water and allow to cool before restarting.
Water has an unusual taste or odor.	New appliance odor. Mineral deposits (limescale) buildup.	Boil and discard water several times before first use. Descale the kettle as per the "Maintenance and Cleaning" section.

SPECIFICATIONS

Brand	AGARO
Model Name	Regency
Model Number	33874
Power	600W
Inner Pot Capacity	1.2 Liters
Steamer Capacity	0.92 Liters
Body Material	Double layered (Inner SS304 Stainless Steel, Outer Plastic)
Special Features	Variable Temperature Control, Automatic Shut-Off, Dry Heat Protected
Product Dimensions (L x W x H)	9.45" x 8.86" x 7.28"
Item Weight	1200 Grams (approx. 2.65 pounds)
Included Components	304 Stainless steel steaming pot, Stainless steel grill rack, Egg boiling rack, Plastic bowl

WARRANTY AND SUPPORT

Your AGARO Regency Multi Cook Kettle is covered by a **2 Years Warranty** from the date of purchase.

This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

For warranty claims, technical support, or any inquiries regarding your product, please contact the manufacturer or authorized seller directly. Please have your purchase receipt and product model number (33874) ready when contacting support.

© 2024 AGARO. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.