

BOMAZ RM-YD092

Instruction Manual

RM-YD092 REPLACEMENT REMOTE CONTROL

Brand: BOMAZ | Model: RM-YD092

Introduction

This manual provides instructions for the BOMAZ RM-YD092 Replacement Remote Control, designed for use with various Sony LED HDTV TV models, including KDL-40R450A and KDL-50R450A. This remote offers a slim and sleek design for comfortable handling and stable performance.

It is a direct replacement for your original remote and requires no programming. Simply insert batteries, and it is ready for use.





Image: Front view of the RM-YD092 remote control, showing all buttons including power, input, number pad, navigation, volume, channel, and media controls.

Setup

The RM-YD092 replacement remote control is designed for immediate use without any complex setup or programming. Follow these simple steps to begin using your remote:

1. **Battery Installation:** Locate the battery compartment on the back of the remote control.
2. **Insert Batteries:** Insert two (2) AAA batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. **Close Compartment:** Securely close the battery compartment cover.

Once batteries are installed, the remote is ready to operate your compatible Sony LED HDTV TV.







Image: Back view of the RM-YD092 remote control, highlighting the battery compartment cover.

Operating Instructions

This section outlines the primary functions of the RM-YD092 remote control buttons.





Image: Angled front view of the RM-YD092 remote control, providing a clear view of the button layout.

- **POWER:** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **SYNC MENU:** Accesses the BRAVIA Sync menu for connected devices.
- **PIC OFF:** Turns off the picture while keeping audio on.
- **WIDE:** Changes the screen aspect ratio.
- **Number Buttons (0-9):** Directly select channels or input numbers.
- **SUBTITLE CC:** Toggles closed captions or subtitles.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application.
- **SLEEP:** Sets a sleep timer for the TV.
- **DISPLAY:** Shows on-screen information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **RETURN:** Goes back to the previous screen or menu.
- **OPTIONS:** Displays context-sensitive options for the current screen.
- **HOME:** Accesses the TV's main menu or smart TV interface.
- **JUMP:** Switches between the current and previously viewed channel.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV audio.
- **Media Control Buttons (PREV, PLAY, PAUSE, STOP, NEXT):** Controls playback of media content (e.g., from a connected USB drive or streaming app).

Maintenance

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Damage:** Do not expose the remote to extreme temperatures, direct sunlight, high humidity, or liquids. Avoid dropping the remote or subjecting it to strong impacts.

Troubleshooting

If you experience issues with your RM-YD092 remote control, try the following solutions:

- **Remote Not Responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if there are any obstructions between the remote and the TV.
 - Replace the batteries with fresh AAA batteries.
 - Verify that the TV is powered on and not in standby mode.
- **Short Operating Distance:**
 - This remote has an operable distance of more than 8 meters. If the range is significantly shorter, replace the batteries.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.
- **Specific Buttons Not Working:**
 - Clean the remote's surface, especially around the problematic buttons, to remove any dirt or debris that might be obstructing them.
 - If only certain buttons fail, it might indicate internal damage.

If the problem persists after trying these steps, please refer to the Support section.

Specifications

Model Number	RM-YD092
Brand	BOMAZ
Compatible Devices	Sony LED HDTV TVs (e.g., KDL-40R450A, KDL-50R450A, and other listed models)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Operable Distance	More than 8 meters
Material	ABS Material
Item Weight	2.53 ounces

Package Dimensions	7.56 x 4.84 x 1.18 inches
Special Feature	No Programming Required

Warranty Information

This BOMAZ RM-YD092 Replacement Remote Control comes with a **120-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described.

Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any issues with your remote control or have questions not covered in this manual, please do not hesitate to contact us.

We test every remote before shipment to ensure quality. If the remote you receive has a problem, please contact the seller directly for assistance.

For support, please refer to the contact information provided by your retailer or on the product packaging.

© 2025 BOMAZ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B071P998V5>

More documents and user manuals: **<https://manuals.plus/>**