

[Manuals.plus](#) /

› [Avidsen](#) /

› Avidsen 103615 Automatic LED Cabinet Light User Manual

Avidsen 103615

Avidsen 103615 Automatic LED Cabinet Light User Manual

Model: 103615

1. INTRODUCTION

The Avidsen 103615 is an automatic LED light designed for use in cabinets, small rooms, cellars, or as a general courtesy light. It features both a motion sensor and a dusk sensor, allowing it to activate automatically when movement is detected in low-light conditions. This battery-powered unit offers convenient, wire-free illumination.



Figure 1: Avidsen 103615 Automatic LED Cabinet Light. A white, compact LED light designed for cabinets, featuring a motion sensor.

2. SAFETY INFORMATION

Please read all instructions carefully before using the product. Retain this manual for future reference.

- Keep the device away from water and high humidity.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- This product is intended for indoor use only.
- Keep out of reach of children.

Battery Safety

- Use only 3 AAA Alkaline batteries.
- Ensure batteries are inserted with correct polarity (+ and -). Incorrect insertion can cause damage.
- Do not mix old and new batteries, or different types of batteries.

- Remove batteries if the device will not be used for an extended period.
- Dispose of used batteries responsibly according to local regulations. Do not dispose of batteries in fire.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Avidsen 103615 Automatic LED Cabinet Light
- 1 x Instruction Manual (Note: Original instructions may be in Italian)

Batteries are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back or side of the unit.
2. Open the battery compartment cover. This may involve sliding, twisting, or gently prying it open.
3. Insert 3 new AAA Alkaline batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Close the battery compartment cover securely.

4.2 Mounting

The Avidsen 103615 is designed for easy installation in various locations. While specific mounting hardware is not detailed, typical methods for cabinet lights include:

- **Adhesive Mounting:** Use double-sided adhesive tape (not included) to attach the light to a clean, dry, flat surface.
- **Screw Mounting:** If the unit has mounting holes, use appropriate screws (not included) to secure it to a surface.

Choose a location where the motion sensor has an unobstructed view of the area you wish to illuminate. Avoid placing it near heat sources or direct sunlight, which can interfere with sensor operation.

5. OPERATING INSTRUCTIONS

The Avidsen 103615 operates automatically based on its integrated sensors.

- **Motion Sensor:** Detects movement within its range.
- **Dusk Sensor:** Detects ambient light levels.

The light will automatically turn on when the following two conditions are met simultaneously:

1. The ambient light level is low (dusk sensor activated).
2. Motion is detected within the sensor's range.

The light will remain on as long as motion is continuously detected and the ambient light remains low. After a period of no detected motion (typically 15-30 seconds, though not specified for this model), the light will automatically turn off to conserve battery power.

6. MAINTENANCE

6.1 Cleaning

To clean the light, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the unit in water.

6.2 Battery Replacement

When the light begins to dim, flicker, or stops functioning, it is time to replace the batteries. Follow the battery installation steps in Section 4.1 to replace the 3 AAA Alkaline batteries.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none">Batteries are dead or incorrectly installed.Ambient light is too bright.No motion detected.	<ul style="list-style-type: none">Replace batteries, ensuring correct polarity.Move to a darker location or wait for lower light conditions.Ensure motion is within sensor range.
Light stays on continuously.	<ul style="list-style-type: none">Continuous motion detected.Sensor malfunction.	<ul style="list-style-type: none">Ensure no constant movement near the sensor.Remove batteries for a few minutes, then reinsert. If problem persists, contact support.
Light is dim or flickers.	<ul style="list-style-type: none">Low battery power.	<ul style="list-style-type: none">Replace all 3 AAA batteries with new ones.

8. SPECIFICATIONS

Manufacturer:	Avidsen
Model Number:	103615
Dimensions:	3 x 6 x 6 cm
Weight:	60 g
Color:	White
Material:	Plastic
Power Source:	Battery-powered
Battery Type:	3 x AAA Alkaline (not included)
Light Source Type:	LED
Special Features:	Motion Sensor, Dusk Sensor

9. WARRANTY AND SUPPORT

This product comes with a warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact your local Avidsen distributor or retailer. Warranty details may vary by region. For technical support or further assistance, please visit the official Avidsen website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B071RD66HJ>

More documents and user manuals: <https://manuals.plus/>