

CHI Steam 13101

CHI Steam Iron 13101 User Manual

Model: 13101

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this appliance.

- The ceramic soleplate becomes hot during use. Exercise caution to prevent burns.
- Always unplug the iron when filling with water, cleaning, or when not in use.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Keep the iron and its cord out of reach of children.
- Never immerse the iron in water or other liquids.
- Use the iron only for its intended household use.

2. PRODUCT OVERVIEW

The CHI Steam Iron 13101 is designed for efficient and effective garment care, featuring advanced technology for optimal performance.

- **Titanium-Infused Ceramic Soleplate:** Provides exceptional glide and durability, resisting scratches.
- **Powerful Steam:** Over 300 steam holes deliver strong steam for wrinkle removal.
- **Temperature Guide Dial:** Simplifies fabric selection by automatically setting the correct temperature.
- **Adjustable Steam Control:** A unique lever allows precise control from no steam to full power.
- **3-Way Auto Shutoff:** Enhances safety by automatically turning off the iron when left unattended.
- **Anti-Drip Technology:** Prevents water leaks and stains on garments.
- **XL 10-foot Cord:** Offers extended reach and convenience.



Figure 1: CHI Steam Iron 13101, showcasing its sleek design and titanium ceramic soleplate.

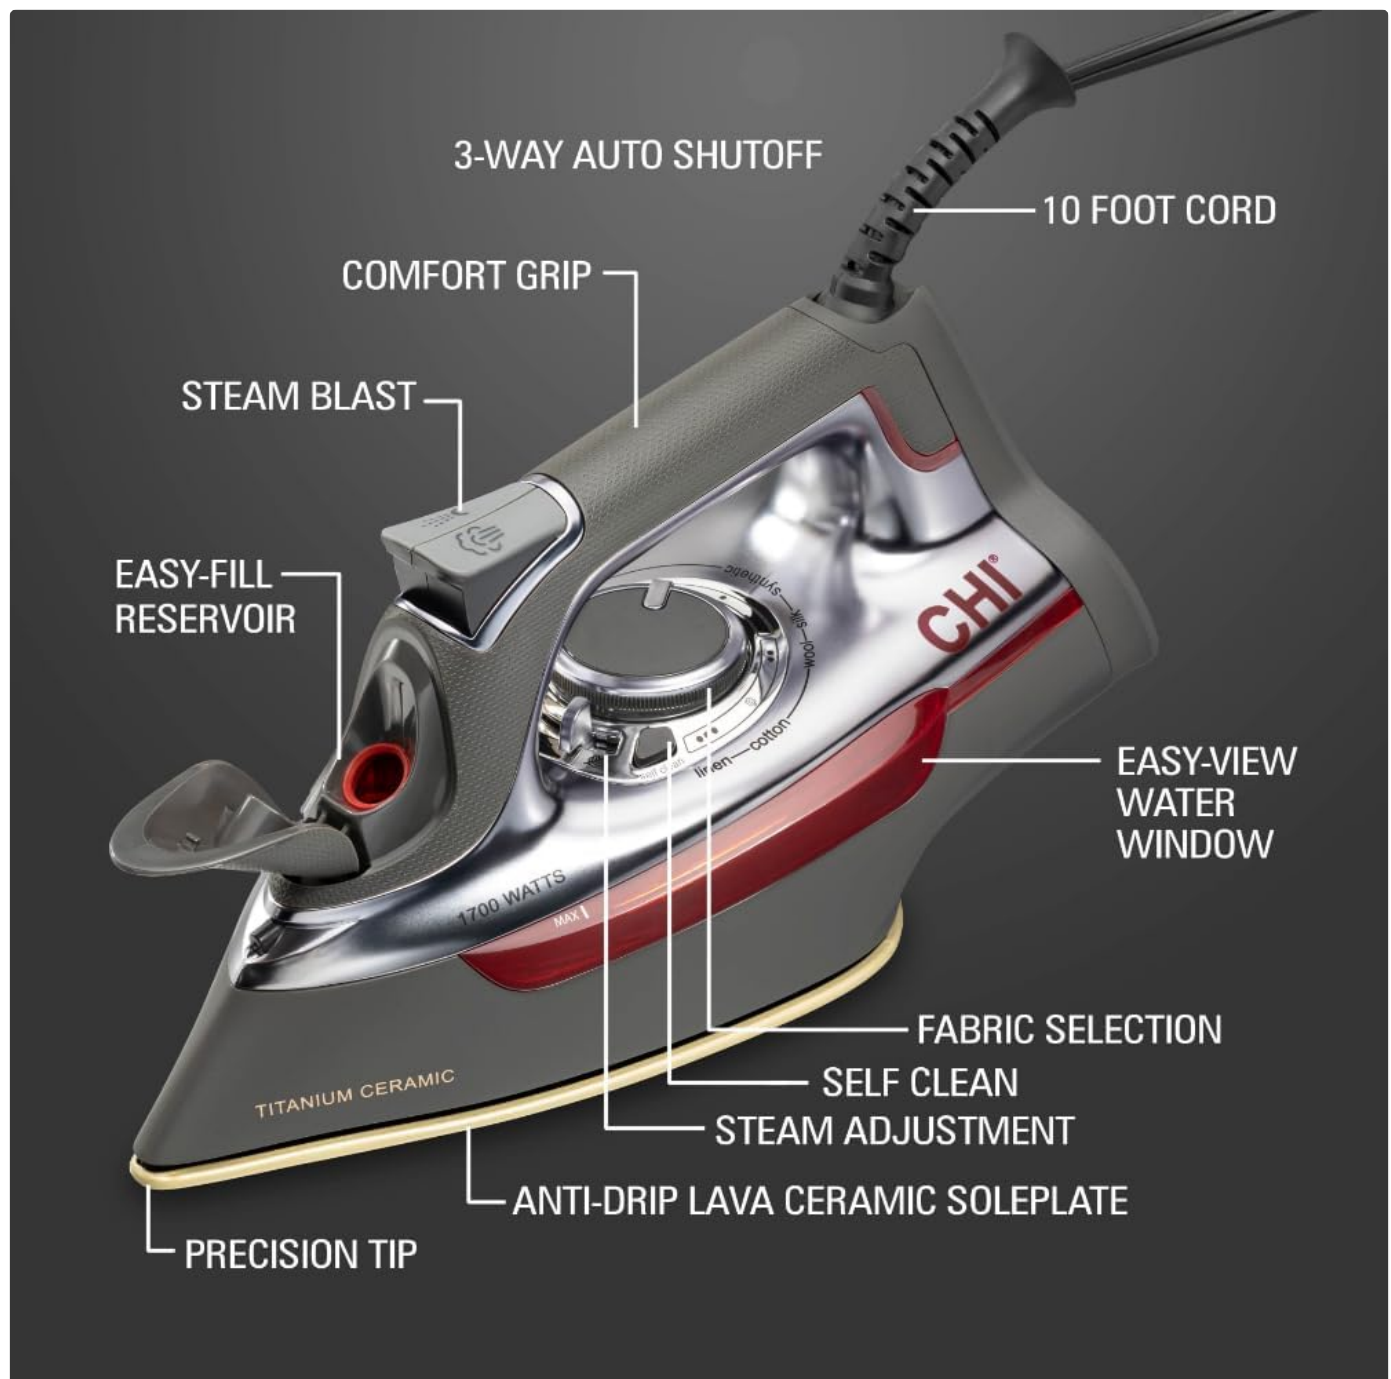


Figure 2: Detailed view of the iron's components, including the easy-fill reservoir, steam blast buttons, fabric selection dial, and anti-drip soleplate.

Product Videos

Video 1: Product Overview of the CHI Steam Iron, demonstrating its features and design.

Video 2: Demonstration of the iron's quick heating and wrinkle removal capabilities.

3. SETUP

Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.

2. Open the easy-fill reservoir cap located on the top of the iron.
3. Using a measuring cup (preferably with a narrow spout), carefully pour distilled or purified water into the reservoir. Do not exceed the 'MAX' fill line.
4. Close the reservoir cap securely.

Initial Power-Up

1. Place the iron in an upright position on a stable, heat-resistant surface.
2. Plug the iron's 10-foot cord into a standard electrical outlet.
3. Turn the temperature guide dial to the desired fabric setting. The iron will begin to heat up.

4. OPERATING INSTRUCTIONS

Temperature Selection

Use the temperature guide dial to select the appropriate fabric type. The iron will automatically adjust to the correct temperature for optimal results and to prevent damage to your garments.



Easy fabric selection

With adjustable steam

Figure 3: The temperature guide dial, allowing selection for various fabric types like linen, cotton, wool, silk, and synthetics.

Steam Control

The iron features an adjustable steam lever. Slide the lever to control the amount of steam, from no steam for dry ironing to full power for stubborn wrinkles.



Figure 4: The soleplate with over 300 steam holes, designed for powerful and even steam distribution across various fabrics.

Steam Burst and Spray Mist

- Press the steam blast button for an extra surge of steam to tackle deep creases.
- Use the spray mist button to lightly dampen fabrics for easier ironing.

Vertical Steaming

The iron can be used in a vertical position to steam hanging garments, drapes, or upholstery. Hold the iron upright and press the steam blast button as needed.

3-Way Auto Shutoff

For safety, the iron will automatically shut off if left motionless:

- After 30 seconds if left horizontally or tipped over.

- After 8 minutes if left vertically on its heel rest.

Added peace of mind

With 3-way auto shutoff and anti-drip technology



Figure 5: The iron positioned on its heel rest, highlighting the auto shutoff feature for added safety.

5. MAINTENANCE

Self-Cleaning Function

To maintain optimal performance and prevent mineral buildup, regularly use the self-cleaning function. Fill the water tank, set the iron to its highest temperature, and once hot, hold it over a sink. Press and hold the self-clean button to flush out mineral deposits.

Water Usage

Always use distilled or purified water in your iron to prevent mineral buildup and ensure longevity. Tap water, especially hard water, can lead to calcification and affect steam performance.

6. TROUBLESHOOTING

- **Iron not heating:** Ensure the iron is securely plugged into a working outlet and the temperature dial is set to a fabric type (not 'OFF'). Check the auto shutoff status.
- **No steam or low steam:** Check if the water tank is filled and the steam lever is set to the desired steam level. Ensure the iron has reached the correct temperature. Mineral buildup can also reduce steam output; perform a self-cleaning cycle.
- **Water leaking/dripping:** Ensure the water tank is not overfilled and the steam lever is not set to maximum when the iron is not hot enough. Anti-drip technology minimizes this, but extreme conditions can cause minor drips.
- **Stains on fabric:** Ensure the soleplate is clean. If using tap water, mineral deposits can cause stains; switch to distilled water and perform a self-cleaning cycle.

7. SPECIFICATIONS

Feature	Detail
Brand	CHI Steam
Model Name	CHI Steam Iron for Clothes with 300+ Holes for Powerful
Item Model Number	13101
Power	1700 Watts
Soleplate Material	Titanium Infused Ceramic
Color	Silver
Product Dimensions	11.5"L x 4.6"W
Item Weight	2.9 pounds
Cable Length	10 Feet
Special Features	Auto Shutoff, Spray & Steam Burst Setting, Temperature Control, Variable Steam Function, Vertical Steaming
UPC	040094131013

8. WARRANTY AND SUPPORT

The product's warranty information is generally provided at the time of purchase or within the product packaging. For specific details regarding your warranty, please refer to the documentation included with your CHI Steam Iron 13101.

For customer support, please visit the official CHI Steam website or contact their customer service department. Keep your purchase receipt and model number handy for faster service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question