

Rowenta RO3985EA

Rowenta Compact Power RO3985EA Vacuum Cleaner User Manual

Model: RO3985EA

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Rowenta Compact Power RO3985EA vacuum cleaner. Please read these instructions carefully before using the appliance and keep them for future reference.

Important Safety Instructions

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not use the appliance if the power cord or plug is damaged.
- Keep the appliance away from water and do not immerse it in any liquid.
- Do not vacuum liquids, hot ashes, sharp objects, or flammable/explosive substances.
- Supervise children to ensure they do not play with the appliance.
- Unplug the appliance before cleaning or performing any maintenance.

2. PRODUCT OVERVIEW

The Rowenta Compact Power RO3985EA is a powerful and efficient bagged cylinder vacuum cleaner designed for effective cleaning of both hard floors and carpets. It features a 750W motor, a 3-liter dust bag capacity, and a high-efficiency filter system.



Figure 1: Front view of the Rowenta Compact Power RO3985EA vacuum cleaner, showing the main body, hose connection, and control panel.



Figure 2: Top-side view of the Rowenta Compact Power RO3985EA vacuum cleaner, highlighting the compact design and handle.

Main Components:

- Main unit with motor and dust bag compartment
- Flexible hose
- Telescopic metal tube
- Universal combination brush (for carpets and hard floors)
- Crevice nozzle

- Upholstery brush
- Mini turbo brush (specifically for pet hair)
- Power cord with automatic rewind

3. SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Attaching the Hose:** Insert the flexible hose into the air inlet on the main unit until it clicks securely into place.
3. **Assembling the Tube and Nozzle:**
 - Connect the telescopic metal tube to the handle of the flexible hose.
 - Attach the desired cleaning nozzle (e.g., universal combination brush) to the end of the telescopic tube.
4. **Power Connection:** Extend the power cord and plug it into a suitable mains socket. Ensure the cord is fully extended to avoid overheating.

4. OPERATING INSTRUCTIONS

1. **Starting the Vacuum Cleaner:** Press the On/Off button located on the main unit.
2. **Adjusting Suction Power:** Use the power control dial on the main unit to adjust the suction power according to the surface being cleaned. Lower power for delicate fabrics, higher power for carpets and heavily soiled areas.
3. **Using the Universal Combination Brush:**
 - For hard floors: Ensure the brush bristles are extended (usually by pressing a foot pedal on the brush head).
 - For carpets: Retract the brush bristles.
4. **Using Specialized Nozzles:**
 - **Crevice Nozzle:** Ideal for narrow gaps, corners, and edges.
 - **Upholstery Brush:** Suitable for cleaning sofas, chairs, and other fabric surfaces.
 - **Mini Turbo Brush:** Specifically designed for efficient removal of pet hair from carpets and upholstery.
5. **Stopping the Vacuum Cleaner:** Press the On/Off button again.
6. **Cord Rewind:** Press the cord rewind button to automatically retract the power cord. Guide the cord to prevent it from whipping.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1. Changing the Dust Bag

- The dust bag full indicator will illuminate when the bag needs changing.
- Unplug the vacuum cleaner from the power outlet.
- Open the dust bag compartment cover.

- Carefully remove the full dust bag, ensuring the opening is sealed to prevent dust leakage.
- Insert a new 3-liter hygiene dust bag, ensuring it is correctly seated in the holder.
- Close the dust bag compartment cover securely.

5.2. Cleaning the Filters

The appliance is equipped with a permanent hygienic filter. While permanent, periodic inspection and cleaning are recommended.

- Unplug the vacuum cleaner.
- Locate the filter compartment (refer to your appliance diagram if unsure).
- Remove the filter. Gently tap it to dislodge dust or rinse it under cold water if washable (ensure it is completely dry before reinserting).
- Reinsert the clean, dry filter.

5.3. Cleaning Nozzles and Hoses

- Regularly check nozzles and the hose for blockages. Remove any hair, threads, or debris.
- The mini turbo brush may require frequent cleaning of tangled hair from its rotating brush.

5.4. Storage

Store the vacuum cleaner in a dry place. The appliance features a parking position for convenient storage of the tube and nozzle.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Loss of suction power	Dust bag full or incorrectly installed. Blockage in hose, tube, or nozzle. Filter is dirty.	Change or correctly install the dust bag. Check and clear any blockages. Clean or replace the filter.
Vacuum cleaner does not start	Not plugged in. No power from the outlet. On/Off button not pressed.	Check power cord connection. Test the outlet with another appliance. Press the On/Off button firmly.
Unusual noise	Blockage in the hose or nozzle. Motor overheating.	Check and clear blockages. Turn off the appliance and let it cool down for at least 30 minutes. Ensure filters are clean.
Dust escaping from the appliance	Dust bag incorrectly installed or damaged. Filter incorrectly installed or damaged.	Check and correctly install or replace the dust bag. Check and correctly install or replace the filter.

7. SPECIFICATIONS

Technical specifications for the Rowenta Compact Power RO3985EA vacuum cleaner:

Model Number	RO3985EA
---------------------	----------

Brand	Rowenta
Power Consumption	750 Watts
Dust Bag Capacity	3 Litres
Noise Level	75 dB
Energy Class	A
Annual Energy Consumption	28 kWh/annum
Operating Radius	8.8 meters
Cord Length	6.2 meters
Weight	5.38 Kilograms
Dimensions (L x W x H)	28.09 x 41.4 x 23.29 cm
Filter Type	Fabric (Permanent Hygienic Filter)
Included Components	Vacuum cleaner, Brushes, User manual
Surface Recommendation	Hard floor, Carpet



Figure 3: Energy label for the Rowenta Compact Power RO3985EA, showing energy class A and noise level 75dB.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact Rowenta customer service. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in the troubleshooting section, or require further assistance, please contact Rowenta customer support through their official website or the contact details provided in your product packaging.