

manuals.plus /

› [Schellenberg](#) /

› [Schellenberg ROLLO Drive 75 Premium Electric Wireless Strap Winder User Manual](#)

Schellenberg 22576

Schellenberg ROLLO Drive 75 Premium Electric Wireless Strap Winder User Manual

Model: 22576

INTRODUCTION

Thank you for choosing the Schellenberg ROLLO Drive 75 Premium Electric Wireless Strap Winder. This product is designed to motorize your roller shutters, offering enhanced convenience and integration into smart home systems. This manual provides essential information for safe installation, operation, and maintenance of your device. Please read these instructions carefully before use and retain them for future reference.

PRODUCT OVERVIEW

The ROLLO Drive 75 Premium is a surface-mounted electric strap winder that allows for wireless control of your roller shutters. It features manual button operation and an automatic timer for optimal comfort. This device is compatible with the Schellenberg Smart Home system and the 'Ready for Smart Friends' system, enabling control via a dedicated app.



Front view of the Schellenberg ROLLO Drive 75 Premium electric wireless strap winder.



Side view of the device, showing its compact design.

KEY FEATURES

- **Electric Wireless Strap Winder:** Designed for surface mounting, offering a 180° swivel capability for flexible installation.
- **Optimal Comfort:** Features wireless control, manual button operation, and a convenient automatic timer function.
- **Versatile Compatibility:** Suitable for mini straps 14 to 15 mm wide. Supports plastic roller shutters up to 5.0 m² and aluminum or wooden roller shutters up to 2.5 m².
- **Easy Power Supply:** Powered via a standard plug, ensuring simple and quick installation.
- **Smart Home Integration:** Seamlessly integrates with the Schellenberg Smart Home system, allowing control of roller shutters, sockets, radiators, lights, garage door motors, awnings, and window handles with alarm function via a dedicated app. Also compatible with the 'Ready for Smart Friends' system.



The device offers 180-degree rotation for flexible positioning.



Wireless control provides convenient operation of your roller shutters.

SETUP AND INSTALLATION

The Schellenberg ROLLO Drive 75 Premium is designed for straightforward surface mounting. Ensure you have the necessary tools and follow these general steps. Refer to the detailed installation guide included in your product packaging for specific instructions and safety warnings.

Package Contents:



The product package includes the strap winder, power cable, mounting bracket, screws, and the instruction manual.

General Installation Steps:

1. **Preparation:** Ensure the power supply to the roller shutter area is disconnected. Clear the installation area.
2. **Mounting the Device:** Secure the mounting bracket to the wall next to your roller shutter strap using the provided screws. The device is designed for surface mounting and can swivel 180 degrees for optimal positioning.
3. **Strap Integration:** Carefully feed the roller shutter strap into the device according to the instructions in the detailed manual. Ensure the strap is correctly tensioned.
4. **Power Connection:** Connect the power cable to the device and plug it into a suitable 230 Volt power outlet.
5. **Initial Setup:** Follow the manual's instructions for setting the upper and lower end positions of your roller shutter. This typically involves pressing and holding specific buttons on the device.

For detailed visual instructions, please refer to the diagrams and step-by-step guide in the physical manual.

OPERATING INSTRUCTIONS

The ROLLO Drive 75 Premium offers multiple ways to control your roller shutters.

Manual Operation:

Use the buttons on the device for direct control:

- **Up Button:** Press to raise the roller shutter.
- **Down Button:** Press to lower the roller shutter.
- **Stop Button:** Press to stop the roller shutter at any desired position.

Wireless Control (Remote Control):

If you have a compatible Schellenberg remote control, you can operate the roller shutter wirelessly. Refer to your remote control's manual for pairing instructions.

Automatic Timer Function:

The device includes a programmable timer. Consult the full manual for detailed instructions on how to set specific opening and closing times for your roller shutters.

Smart Home Integration (App Control):


For advanced control and integration into your Schellenberg Smart Home system or 'Ready for Smart Friends' system:

1. Download the Schellenberg Smart Home app (or compatible Smart Friends app) from your device's app store.
2. Follow the in-app instructions to add your ROLLO Drive 75 Premium to your smart home system. This typically involves a pairing process.
3. Once connected, you can control your roller shutters, set schedules, and integrate them with other smart devices via the app.



Control your roller shutters conveniently via a smartphone app when integrated into a smart home system.

Per Funk und smart bedienen.

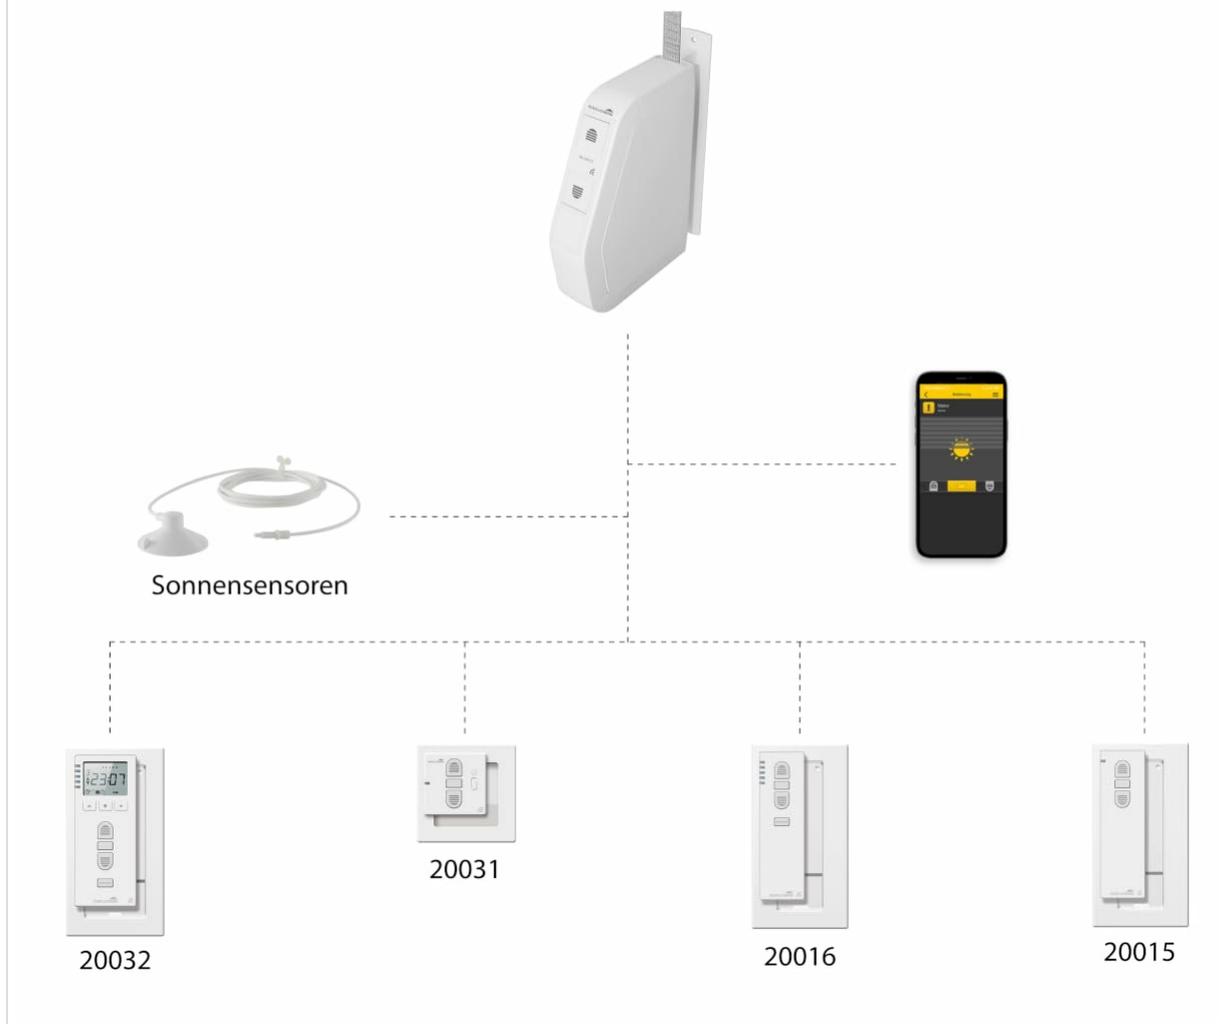

The ROLLO Drive 75 Premium can be integrated into a smart home system for centralized control.

MAINTENANCE

The Schellenberg ROLLO Drive 75 Premium requires minimal maintenance to ensure long-lasting performance.

- **Cleaning:** Clean the exterior of the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Strap Inspection:** Periodically check the roller shutter strap for any signs of wear, fraying, or damage. Replace damaged straps immediately to prevent malfunction.
- **No Internal Servicing:** The device contains no user-serviceable parts. Do not attempt to open or repair the unit yourself. Contact qualified service personnel if repairs are needed.

Always disconnect the power supply before performing any cleaning or inspection.


TROUBLESHOOTING

If you encounter issues with your ROLLO Drive 75 Premium, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not respond.	No power supply; device not plugged in; power outage.	Check power connection. Ensure the plug is fully inserted and the power outlet is functional. Check your home's circuit breaker.
Roller shutter does not move or stops unexpectedly.	Obstruction in the roller shutter path; strap is jammed or damaged; end positions not set correctly.	Inspect the roller shutter path for obstructions. Check the strap for damage or entanglement. Re-set the upper and lower end positions as per the installation manual.
Wireless control (remote/app) not working.	Remote control batteries low; device not paired with remote/app; signal interference.	Replace remote control batteries. Re-pair the device with the remote control or smart home app. Ensure no strong signal interference sources are nearby.
Automatic timer not functioning.	Timer settings incorrect; device not in automatic mode.	Verify the timer settings in the device or app. Ensure the device is set to automatic mode if applicable.

If the problem persists after attempting these solutions, please contact Schellenberg customer support.

SPECIFICATIONS

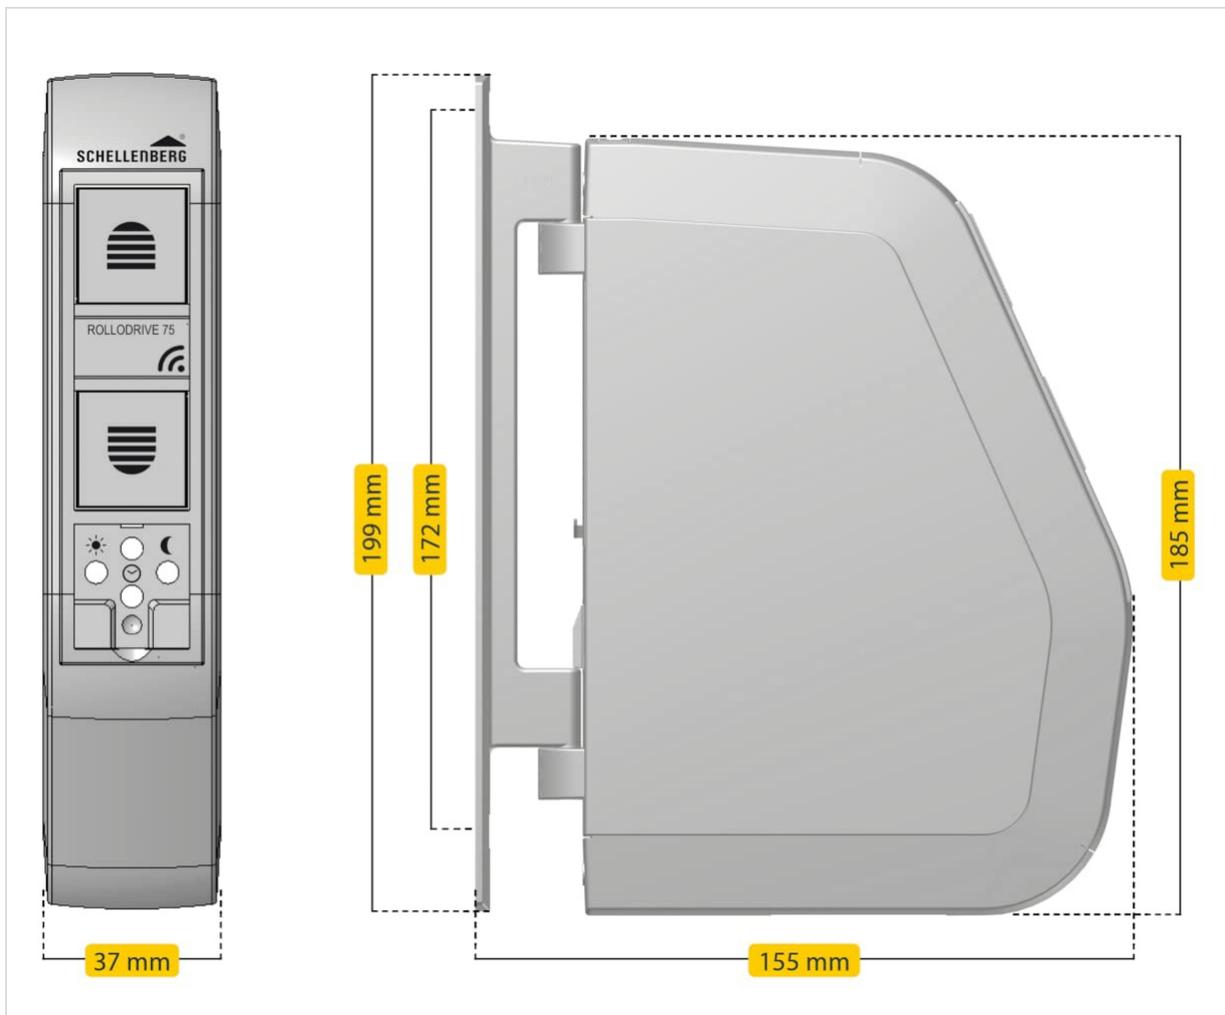

Dimensions of the ROLLO Drive 75 Premium.

Feature	Detail
Model Number	22576
Brand	Schellenberg
Product Dimensions (L x W x H)	28.7 x 18.7 x 8 cm
Item Weight	1.06 Kilograms
Operating Voltage	230 Volts
Power	70 Watts
Mounting Type	Surface Mount
Strap Width Compatibility	14 - 15 mm (Mini strap)
Max. Roller Shutter Area (Plastic)	5.0 m ²
Max. Roller Shutter Area (Aluminum/Wood)	2.5 m ²
Control Method	Remote Control, Push Button, App (via Smart Home system)
Connectivity Protocol	868 MHz
International Protection Rating	IP20

Feature	Detail
Material	Plastic, Aluminum (contact material)
Color	White
Manufacturer	Alfred Schellenberg GmbH
Compliant Specification	TÜV

SUPPORT AND WARRANTY

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Schellenberg customer support. Details can typically be found on the manufacturer's website or in the product packaging.

Manufacturer: Alfred Schellenberg GmbH

Warranty Information: Please refer to the warranty card included with your product or visit the official Schellenberg website for the most up-to-date warranty terms and conditions. Standard return policy is 30 days (as per Amazon data), but manufacturer warranty details should be consulted for product defects.

Spare Parts: Information regarding spare parts availability is not provided in the product specifications. Please contact customer support for inquiries.

© 2023 Schellenberg. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.