

Thermometer World IN-065

Digital Refrigerator Thermometer

Model: IN-065

Brand: Thermometer World

INTRODUCTION

Thank you for purchasing the Thermometer World Digital Refrigerator Thermometer. This device is designed to accurately monitor temperatures inside your refrigerator or freezer, as well as the ambient room temperature. It features a clear digital display, easy-to-use controls, and an integrated alarm to alert you to significant temperature drops, helping you maintain optimal conditions for food storage.

Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your thermometer.

SAFETY INFORMATION

- Keep the device away from extreme temperatures, direct sunlight, and moisture.
- Do not immerse the main unit in water. The sensor probe is water-resistant but the main unit is not.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Dispose of batteries properly according to local regulations.
- Keep out of reach of children.

PACKAGE CONTENTS

- 1 x Digital Refrigerator Thermometer (Model IN-065)
- 1 x AAA Battery

PRODUCT OVERVIEW



Figure 1: Front view of the Digital Refrigerator Thermometer, showing the display and control buttons.




Figure 2: Detailed view of the four navigation buttons and the magnetic fixtures on the back for easy mounting.

Key Features:

- **Digital Display:** Clear LCD screen showing current temperature.
- **Dual Temperature Monitoring:** Displays both refrigerator/freezer temperature (via probe) and ambient room temperature.
- **Min/Max Function:** Records and displays the minimum and maximum temperatures reached.
- **Temperature Alarm:** Alerts you if the temperature drops below a set threshold.
- **Switchable Units:** Easily switch between Celsius (°C) and Fahrenheit (°F).
- **Magnetic Fixtures:** Allows for convenient attachment to metallic surfaces like refrigerator doors.

- **Compact Design:** Measures approximately 11 x 8.99 x 2.49 cm.

Perfect Size

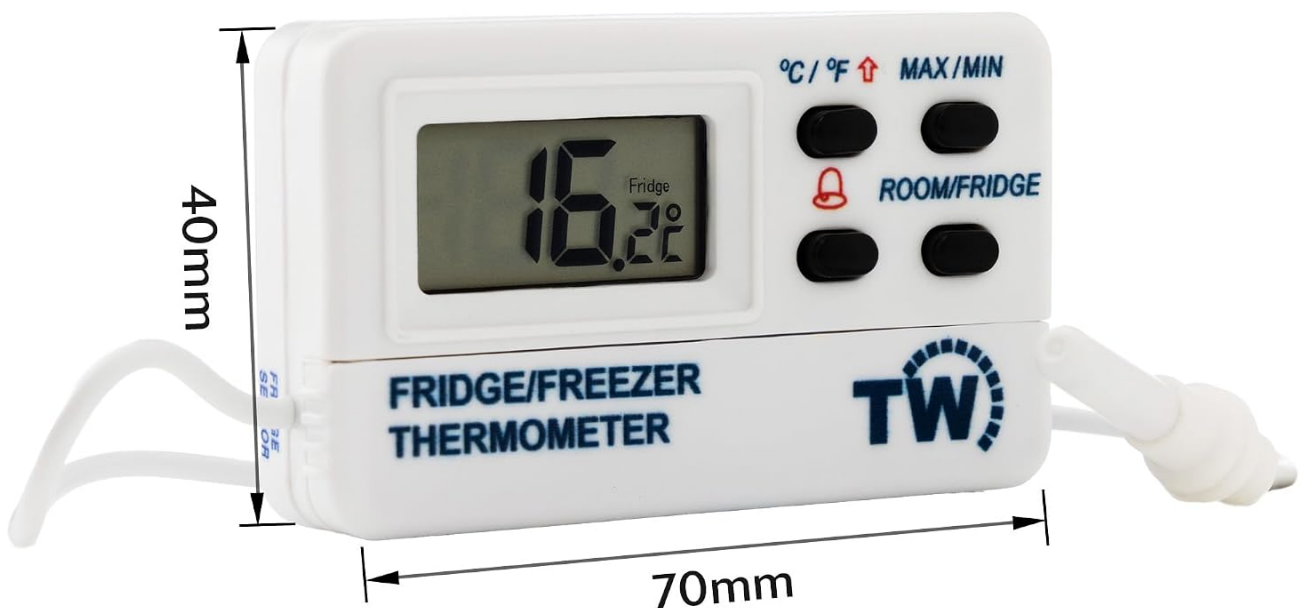

Cable - 1.2m

Figure 3: Dimensions of the thermometer unit and the 1.2-meter sensor cable.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the thermometer unit.
2. Open the battery compartment cover.
3. Insert the included 1 AAA battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely. The display should now turn on.

2. Placement

1. **Main Unit:** Place the main thermometer unit outside the refrigerator or freezer. You can use the magnetic fixtures on the back to attach it to the appliance door or any metallic surface. Alternatively, it can be placed on a flat surface.
2. **Sensor Probe:** Carefully route the sensor cable into the refrigerator or freezer. Ensure the cable is not pinched by the door seal, which could damage the cable or compromise the seal. Position the probe inside the appliance where you want to monitor the temperature.

Effortlessly Monitor

Our compact refrigerator thermometer enables you to easily monitor the temperature within your fridge while also measuring the ambient room temperature.



Figure 4: Example of thermometer placement on a refrigerator door, allowing effortless temperature monitoring.

OPERATING INSTRUCTIONS

Button Functions:

- **°C / °F Button:** Press to switch between Celsius and Fahrenheit temperature units.
- **MAX / MIN Button:** Press to view the maximum and minimum temperatures recorded since the last reset. Press again to cycle through MAX, MIN, and current temperature. Hold to reset the recorded MAX/MIN values.

- **ROOM / FRIDGE Button:** Press to switch the main display between the ambient room temperature and the refrigerator/freezer temperature (measured by the probe).
- **Alarm Button (Bell Icon):** Used for setting and activating the temperature alarm. (Specific alarm setting instructions are not provided in the product description, but the feature is mentioned. Assume basic functionality.)

Basic Operation:

1. Once the battery is installed, the thermometer will automatically display the current temperature.
2. Use the **ROOM / FRIDGE** button to select which temperature you wish to view on the main display. The display will indicate "Room" or "Fridge" accordingly.
3. Press the **°C / °F** button to change the temperature unit to your preference.
4. To check the highest and lowest temperatures recorded, press the **MAX / MIN** button. To clear these records, press and hold the **MAX / MIN** button until the values reset.

Temperature Alarm (if applicable):

The thermometer features an alarm that activates if the temperature drops below a certain threshold. While specific setting instructions are not detailed, typically you would:

1. Press the **Alarm Button** (Bell Icon) to activate or deactivate the alarm.
2. If the alarm sounds, check the temperature inside your refrigerator/freezer immediately.

Keep food Fresh



Figure 5: The thermometer helps ensure food remains fresh by monitoring optimal storage temperatures.

MAINTENANCE

Cleaning:

To clean the thermometer, simply wipe it with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water. Ensure the unit is dry before storing or continued use.

Battery Replacement:

When the display becomes dim or the unit stops functioning, it's time to replace the battery. Follow the battery installation steps in the "Setup" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No display or dim display.	Battery is dead or incorrectly installed.	Replace the AAA battery, ensuring correct polarity.
Inaccurate temperature readings.	Sensor probe is misplaced or damaged.	Ensure the sensor probe is correctly positioned and not obstructed. If readings remain inaccurate, the probe may be damaged.
Alarm sounds unexpectedly.	Temperature has dropped below the alarm threshold.	Check the temperature inside your refrigerator/freezer. Adjust settings if necessary or investigate the appliance's cooling.

SPECIFICATIONS

Feature	Detail
Model Number	IN-065
Dimensions (L x W x H)	11 x 8.99 x 2.49 cm
Weight	75 grams
Power Source	1 x AAA Battery (included)
Display Type	Digital
Connectivity Technology	Wired (for sensor probe)
Exterior Material	Plastic
Special Feature	Alarm function
Color	White
Care Instructions	Wipe clean

WARRANTY AND SUPPORT

Thermometer World products are manufactured to high standards and undergo strict quality control. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact Thermometer World customer service through the retailer where you purchased the product or visit the official Thermometer World website for contact information.

We are committed to providing exceptional customer service and are here to assist you with any questions you may have.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B071WKGTJL>

More documents and user manuals: <https://manuals.plus/>