

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KECHAODA](#) /

› [Kechaoda K116 Basic Mobile Phone User Manual](#)

KECHAODA K116

Kechaoda K116 Basic Mobile Phone User Manual

Model: K116

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Kechaoda K116 basic mobile phone. Please read this manual thoroughly before operating your device to ensure proper functionality and to understand its features.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all items listed below are present and in good condition:

- Kechaoda K116 Handset
- USB Cable

If any item is missing or damaged, please contact your retailer immediately.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your Kechaoda K116 mobile phone.

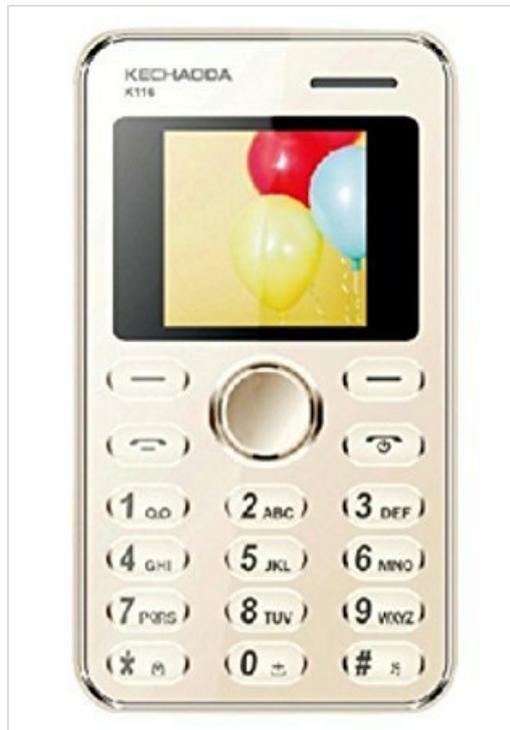


Figure 3.1: Front view of the Kechaoda K116, displaying the screen and numeric keypad.



Figure 3.2: Front, side, and rear views of the Kechaoda K116, highlighting its compact design and rear panel.

Key Components:

- **Display Screen:** 1.44-inch LED display for viewing information.
- **Numeric Keypad:** For dialing numbers and text input.
- **Navigation Key:** Central button for menu navigation.
- **Call/End Keys:** For initiating and ending calls.

- **Rear Camera:** 0.3MP camera located on the back.
 - **Charging Port:** Located at the bottom for connecting the USB cable.
-

4. SETUP

4.1. Installing the SIM Card

1. Ensure the phone is powered off.
2. Gently remove the back cover of the phone.
3. Remove the battery if it is already inserted.
4. Locate the SIM card slot. Insert your SIM card with the gold contacts facing down and the cut corner aligned with the slot's orientation.
5. Press the SIM card gently until it clicks into place.

4.2. Installing the Battery

1. After installing the SIM card, align the battery's gold contacts with the terminals in the battery compartment.
2. Gently press the battery down until it is securely seated.
3. Replace the back cover, ensuring it snaps firmly into place.

4.3. Charging the Battery

1. Connect the small end of the USB cable to the charging port on your phone.
 2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
 3. The battery indicator on the screen will show the charging status.
 4. Disconnect the charger once the battery is fully charged.
-

5. OPERATING INSTRUCTIONS

5.1. Powering On/Off

- **To Power On:** Press and hold the End/Power key (red button) until the screen lights up.
- **To Power Off:** Press and hold the End/Power key until the power off options appear, then select 'Power Off'.

5.2. Making a Call

1. From the home screen, use the numeric keypad to enter the phone number.
2. Press the Call key (green button) to initiate the call.
3. To end the call, press the End/Power key.

5.3. Receiving a Call

- When an incoming call rings, press the Call key (green button) to answer.
- To reject a call, press the End/Power key.

5.4. Sending and Receiving SMS

- **To Send SMS:** Navigate to 'Menu' > 'Messages' > 'Write Message'. Enter your text and the recipient's number, then send.
 - **To Receive SMS:** New messages will typically display a notification. Navigate to 'Menu' > 'Messages' > 'Inbox' to read.
-

6. CAMERA USAGE

The Kechaoda K116 features a 0.3MP rear camera for basic photography.

1. From the main menu, select 'Camera'.
 2. Frame your subject using the display screen.
 3. Press the central navigation key or the designated camera button (if available) to capture the photo.
 4. Photos are saved to the phone's internal memory.
-

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
 - **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
 - **Battery Care:** Do not expose the battery to high temperatures or puncture it. Use only approved chargers.
 - **Water Exposure:** This phone is not waterproof. Avoid contact with liquids.
-

8. TROUBLESHOOTING

If you encounter issues with your Kechaoda K116, refer to the following common problems and solutions:

- **Phone does not power on:**
 - Ensure the battery is correctly inserted and charged.
 - Press and hold the power key for several seconds.
 - **No network signal:**
 - Check if the SIM card is properly inserted.
 - Move to an area with better network coverage.
 - Restart the phone.
 - **Battery not charging:**
 - Verify the USB cable and charger are securely connected.
 - Ensure the power outlet is functional.
 - Try a different USB cable or charger if available.
 - **Cannot make or receive calls:**
 - Check your network signal strength.
 - Ensure your SIM card is active and has sufficient balance/plan.
 - Verify that call barring or flight mode is not enabled.
-

9. SPECIFICATIONS

Feature	Description
Model	K116
Display	1.44-inch LED, 128 x 160 pixels resolution
Camera	0.3MP Rear Camera
Internal Memory	32MB
SIM Support	Single SIM
Battery	800mAH Lithium-ion
Connectivity	GSM (900/1800 MHz), Bluetooth
Form Factor	Bar
Dimensions	27.9 x 12.7 x 15.2 cm
Weight	150 g
Manufacturer	Prema Sai Electronics

10. WARRANTY AND SUPPORT

Your Kechaoda K116 mobile phone comes with a manufacturer's warranty:

- **Device Warranty:** 1 year from the date of purchase.
- **In-box Accessories Warranty:** 6 months for accessories, including batteries, from the date of purchase.

Please retain your purchase receipt as proof of purchase for warranty claims. For technical support or warranty service, please contact your retailer or the manufacturer's authorized service center.