



Manuals.plus /

› Home Decorators Collection /

› Home Decorators Collection Mercer 52 in. LED Indoor Brushed Nickel Ceiling Fan Instruction Manual

Home Decorators Collection 54725

Home Decorators Collection Mercer 52 in. LED Indoor Brushed Nickel Ceiling Fan Instruction Manual

Model: 54725

PRODUCT OVERVIEW

The Home Decorators Collection Mercer 52 in. LED Indoor Brushed Nickel Ceiling Fan combines contemporary design with efficient functionality. This 3-speed fan features 4 blades designed for optimal air movement and quiet operation. It includes an integrated LED light with an etched opal glass cover, providing energy-efficient illumination for rooms up to 20 ft. x 20 ft.

Key features include a powerful 172 mm x 20 mm motor delivering 5784 CFM airflow, a threaded 4.5 in. downrod for safety and stability, and a convenient remote control for easy operation of fan speeds and lighting. The fan supports tri-mount installation options (angled, flush, standard) to suit various ceiling types.

SAFETY INFORMATION

- Always turn off power at the circuit breaker before installation or maintenance.
- Ensure all electrical connections comply with local codes and ordinances.
- Consult a qualified electrician if you are unsure about wiring or installation.
- Mount the fan to a ceiling joist or a securely mounted outlet box capable of supporting the fan's weight.
- Do not operate the fan if any part is damaged.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Motor Housing with Integrated LED Light
- 4 Silver Blades
- 4.5 inch Downrod

- Mounting Hardware
- Remote Control
- Etched Opal Glass Light Cover

SETUP AND INSTALLATION

This ceiling fan offers tri-mount installation: angled, flush, or standard. A threaded 4.5-inch downrod and coupler are included for secure mounting. Professional installation is recommended for optimal safety and performance.

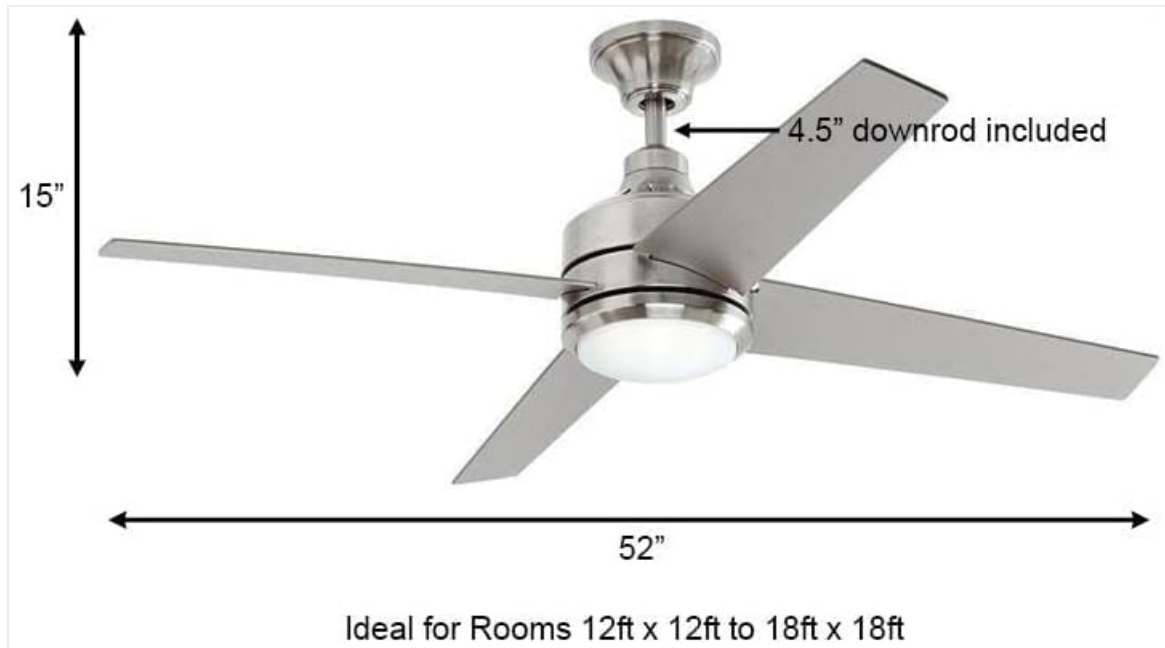


Figure 1: Fan Dimensions and Downrod. This image illustrates the overall dimensions of the Mercer 52-inch ceiling fan, including the 4.5-inch downrod, and indicates its suitability for rooms between 12 ft. x 12 ft. to 18 ft. x 18 ft.

The fan is designed for quick installation with a slide-on bracket. Ensure the mounting location can support the fan's weight (approximately 19 lbs).

OPERATING INSTRUCTIONS

The Mercer ceiling fan is operated using the included remote control. This remote allows you to control both the fan speeds and the integrated LED light.



Figure 2: Remote Control. This image displays the remote control unit, highlighting buttons for light control (on/off/dimming), fan speed selection (High, Medium, Low), and fan off.

Fan Speed Control:

- Press **HI** for high speed.
- Press **MED** for medium speed.
- Press **LOW** for low speed.
- Press **OFF** to turn the fan off.

Light Control:

- Press the **Light Bulb** button to turn the light on or off.
- Hold the **Light Bulb** button to dim or brighten the LED light.

The fan also features a reversible motor for year-round use. A switch on the motor housing allows you to change the direction of the blades to circulate cool air in summer or distribute warm air in winter.

Your browser does not support the video tag.

Video 1: Demonstration of Fan Speeds and Light Dimming. This video illustrates the remote control functionality, showing how to adjust the fan's three speeds (low, medium, high) and how to dim the integrated LED light.

MAINTENANCE

- **Cleaning:** To avoid damage to the finish, clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Care:** Periodically check the blade screws for tightness. Loose blades can cause wobbling and noise.
- **Light Source:** The integrated LED light is designed for long-lasting performance and does not require bulb replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start.	No power to the fan; loose wire connections; remote control not paired.	Check circuit breaker; ensure all connections are secure; re-pair remote control according to installation guide.
Fan wobbles.	Loose blade screws; unbalanced blades; improper mounting.	Tighten all blade screws; ensure blades are balanced (use balancing kit if necessary); verify secure mounting to ceiling.
Light does not work.	No power to the light; faulty wiring; integrated LED failure.	Check power supply; verify light wiring connections; contact customer support if integrated LED is faulty.
Noisy operation.	Loose screws; motor issues; blades hitting an obstruction.	Check and tighten all screws; ensure no obstructions are in the fan's path; contact customer support if motor noise persists.

SPECIFICATIONS

Feature	Detail
Brand	Home Decorators Collection
Model Number	54725
Assembled Depth	52.00 in.
Assembled Height	17.00 in.
Assembled Width	52.00 in.
Fan Blade Length	22.68 in.
Fan Blade Width	5.71 in.
Downrod Length	4.5 in.
Airflow (CFM)	5784
Number of Blades	4
Number of Speeds	3
Light Type	Integrated LED (14-Watt)
Fixture Color/Finish	Brushed Nickel
Glass Style	Etched Opal
Indoor/Outdoor	Indoor
Mounting Options	Angled, Flush, Standard (Tri-mount)
Control Method	Remote Control
Product Weight	19 lbs
Voltage	120 Volts
Certifications	UL Listed

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Home Decorators Collection customer service.

Keep your purchase receipt and model number (54725) for reference.

For additional assistance, visit the manufacturer's website or contact their support line.