

Oster FPSTHB2615BLA

Oster Versatile Turbo Function Stick Mixer Hand Blender User Manual

Model: FPSTHB2615BLA

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and care of your Oster Versatile Turbo Function Stick Mixer Hand Blender, Model FPSTHB2615BLA. This 250-watt appliance is designed for various kitchen tasks including blending, grinding, and whisking, featuring a stainless steel shaft and blade, a turbo function, and includes a whisk attachment and a measuring cup.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, clothing, and other utensils away from moving blades during operation to prevent injury.
- Blades are sharp. Handle with care when cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use the appliance for more than one minute continuously to prevent overheating. Allow a cooling period between uses.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments and accessories recommended by the manufacturer.

3. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Oster Hand Blender:



Figure 3.1: Overview of the Oster Hand Blender and its included accessories, including the motor unit, blending shaft, whisk attachment, chopper attachment, and measuring cup.



Figure 3.2: The main hand blender unit, consisting of the motor housing with control buttons and the detachable stainless steel blending shaft with its blade guard.



Figure 3.3: The chopper attachment, featuring a clear bowl, a blade assembly, and a lid for processing ingredients like vegetables.



Figure 3.4: The whisk attachment, designed for aerating and mixing lighter ingredients.

4. SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and components are clean.

1. **Attaching the Blending Shaft:** Align the blending shaft with the motor unit and twist until it locks securely into place.
2. **Attaching the Whisk:** Insert the whisk into the whisk adapter, then attach the adapter to the motor unit by aligning and twisting until secure.
3. **Attaching the Chopper:** Place the chopper blade onto the center pin in the chopper bowl. Add

ingredients. Place the chopper lid onto the bowl, ensuring it is properly seated. Attach the motor unit to the chopper lid by aligning and twisting until secure.

5. OPERATING INSTRUCTIONS

The Oster Hand Blender features two speed settings and a Turbo function for enhanced performance.

General Operation:

1. Ensure the desired attachment is securely assembled to the motor unit.
2. Plug the appliance into a standard electrical outlet.
3. Immerse the blending or whisking attachment into the ingredients, or ensure the chopper lid is properly closed.
4. Press and hold the desired speed button (Speed 1 or Speed 2) to operate. For maximum power, press the Turbo button.
5. Release the button to stop operation.
6. **Important:** Do not operate the hand blender continuously for more than one minute. Allow the appliance to cool down for several minutes after each minute of use to prevent motor damage.

Specific Uses:

- **Blending:** Use the blending shaft for pureeing soups, sauces, and baby food directly in pots or bowls. It is also suitable for preparing souffles and mousses.
- **Whisking:** Attach the whisk for aerating egg whites, whipping cream, or mixing light batters like those for pancakes or crepes.
- **Chopping:** Utilize the chopper attachment for finely dicing vegetables, nuts, or herbs. Ensure ingredients are cut into small pieces before placing them in the chopper bowl.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and performance of your appliance.

1. **Before Cleaning:** Always unplug the hand blender from the power outlet.
2. **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
3. **Blending Shaft and Whisk Attachment:** The stainless steel blending shaft and whisk attachment are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water. Rinse thoroughly and dry.
4. **Chopper Bowl and Blades:** Wash the chopper bowl and blades with warm, soapy water. Blades are sharp; handle with extreme care.
5. **Chopper Lid:** The chopper lid should be washed by hand. Be aware that water may seep into the lid's internal mechanism during washing, and it may be difficult to drain completely. Ensure it is thoroughly air-

dried to prevent moisture retention.

- 6. **Measuring Cup:** The measuring cup with its double-function lid can be washed by hand or in the dishwasher.
- 7. **Storage:** Store the appliance and its accessories in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your hand blender, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; motor unit not properly attached to accessory.	Ensure the appliance is securely plugged into a working outlet. Check if the motor unit is correctly locked onto the blending shaft or chopper lid.
Poor blending/chopping performance.	Too much food; ingredients too large or hard; blades dull.	Reduce the amount of food. Cut ingredients into smaller pieces. Ensure ingredients are suitable for the appliance (e.g., avoid very hard items like raw carrots or beets).
Appliance stops during operation.	Overheating due to continuous use; motor overload.	Unplug the appliance and allow it to cool down for at least 10-15 minutes. Reduce the load or processing time. Remember not to operate for more than one minute continuously.
Water trapped in chopper lid after washing.	Design of the chopper lid.	Shake the lid vigorously to dislodge water. Allow it to air dry completely for an extended period, potentially upside down, to ensure all moisture evaporates.

8. SPECIFICATIONS

Feature	Detail
Brand	Oster
Model Number	FPSTHB2615BLA
Power	250 Watt
Voltage	120 Volts
Number of Speeds	2 (with Turbo function)
Controls Type	Push Button
Material Type Free	BPA Free

Feature	Detail
Included Components	Whisk Attachment, Chopper Attachment, Measuring Cup
Product Dimensions	4.37"D x 8.49"W x 5.18"H
Item Weight	3.83 pounds
UPC	034264478794

9. WARRANTY AND SUPPORT

This Oster appliance comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your product packaging or visit the official Oster website. Please have your model number (FPSTHB2615BLA) and proof of purchase available when contacting support.