

[Manuals.plus](#) /

› [Kärcher](#) /

› Kärcher Full Control Plus Handle Instruction Manual for K5 and K7 Pressure Washers

Kärcher 2.643-992.0

Kärcher Full Control Plus Handle Instruction Manual

For K5 and K7 Pressure Washers (Model: 2.643-992.0)

INTRODUCTION

This manual provides essential information for the safe and effective use of your Kärcher Full Control Plus Handle. This replacement handle is designed for K5 and K7 series premium full control plus high-pressure washers. It features an LED display for pressure indication, buttons for adjusting pressure and detergent dosing, child safety, and a bayonet connection for accessories.

PRODUCT OVERVIEW AND FEATURES

The Kärcher Full Control Plus Handle enhances your pressure washing experience with integrated controls and clear feedback.

- **Integrated Controls:** Features a button for adjusting pressure and dosage of detergent, along with an LED screen for visual feedback.
- **Compatibility:** Designed as an accessory for K5 Premium Full Control Plus and K7 Premium Full Control Plus pressure washers.
- **Easy Connection:** Equipped with a bayonet connection for simple and secure attachment to all compatible Kärcher accessories.
- **Safety Feature:** Includes a child safety lock to prevent accidental operation.
- **Detergent Application:** Supports low-pressure detergent application for effective cleaning.



Image 1: The Kärcher Full Control Plus Handle, showcasing its ergonomic design and integrated LED display for pressure settings.

KÄRCHER

ORIGINAL ACCESSORY



Image 2: A user operating a Kärcher pressure washer with the Full Control Plus Handle, demonstrating its application for vehicle cleaning.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the Full Control Plus Handle from its packaging. Inspect for any damage.
2. **Connecting to Pressure Washer:** Ensure your Kärcher K5 or K7 pressure washer is turned off and disconnected from the power supply. Align the bayonet connection of the handle with the corresponding port on your pressure washer. Push firmly and twist clockwise until it clicks securely into place.
3. **Attaching Accessories:** To attach a spray lance or other compatible Kärcher accessory, align its bayonet connection with the front of the Full Control Plus Handle. Push and twist clockwise until it locks. To remove, twist counter-clockwise and pull.
4. **Power Connection:** Once the handle and accessories are securely attached, connect your pressure washer to the appropriate power and water supply as per your pressure washer's manual.

OPERATING INSTRUCTIONS

The Full Control Plus Handle provides intuitive control over your pressure washing tasks.

- Powering On:** Turn on your Kärcher pressure washer. The LED display on the handle should illuminate, indicating the current pressure setting.
- Adjusting Pressure:** Use the +/- buttons located on the handle to cycle through the available pressure settings (e.g., SOFT, MEDIUM, HARD). The selected pressure level will be displayed on the LED screen. Choose the appropriate pressure for the surface you are cleaning.
- Detergent Application:** To apply detergent, ensure your pressure washer is equipped with a detergent tank or suction hose. Select the "MIX" or detergent setting using the +/- buttons. The handle will then operate at low pressure, allowing for effective detergent application. Refer to your pressure washer's manual for specific detergent usage instructions.
- Child Safety Lock:** Before storing or when not in use, engage the child safety lock (if present and accessible on the handle) to prevent accidental activation.
- Trigger Operation:** Squeeze the trigger to begin spraying. Release the trigger to stop the water flow.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Full Control Plus Handle.

- Cleaning:** After each use, wipe down the handle with a damp cloth to remove dirt, detergent residue, and debris. Avoid using harsh chemicals or abrasive cleaners.
- Storage:** Store the handle in a clean, dry place, protected from frost and direct sunlight. Disconnect it from the pressure washer if storing for extended periods.
- Inspection:** Periodically inspect the bayonet connection and the handle body for any signs of wear, cracks, or damage. If damage is found, discontinue use and contact Kärcher support for replacement parts or service.

TROUBLESHOOTING

If you encounter issues with your Full Control Plus Handle, refer to the following common solutions:

Problem	Possible Cause	Solution
LED display not illuminating.	Pressure washer not powered on or connected correctly.	Ensure the pressure washer is fully powered on and the handle is securely connected. Check the pressure washer's power supply.
Pressure setting not changing.	Buttons not functioning or internal issue.	Press the +/- buttons firmly. If the issue persists, ensure the handle is clean and free of debris. If still unresponsive, contact Kärcher support.
Handle not securely attaching to pressure washer/accessories.	Bayonet connection misaligned or damaged.	Ensure proper alignment before pushing and twisting. Check for any obstructions or damage to the bayonet connection on both the handle and the pressure washer/accessory.
Detergent not dispensing.	Incorrect setting or pressure washer detergent system issue.	Ensure the handle is set to the detergent (MIX) mode. Verify that your pressure washer's detergent system is functioning correctly and has detergent.

For issues not listed here, or if solutions do not resolve the problem, please refer to your Kärcher pressure washer's main instruction manual or contact Kärcher customer support.

SPECIFICATIONS

Brand	Kärcher
Model Number	2.643-992.0
Part Number	26439920
Item Weight	1.31 pounds (approx. 594 grams)
Product Dimensions	1.93 x 10.04 x 22.52 inches
Color	Black
Power Source	Manual (powered by pressure washer)
Item Package Quantity	1
Certification	CE, CSA
Compatibility	Kärcher K5 Premium Full Control Plus, K7 Premium Full Control Plus Pressure Washers

WARRANTY AND SUPPORT

For information regarding the warranty of your Kärcher Full Control Plus Handle, please refer to the warranty documentation provided with your original Kärcher pressure washer or visit the official Kärcher website. Warranty terms and conditions may vary by region.

For technical support, spare parts, or service inquiries, please contact Kärcher customer service directly. You can find contact information on the official Kärcher website or in your pressure washer's main instruction manual.

Official Kärcher Website: www.kaercher.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B071X9F124>

More documents and user manuals: <https://manuals.plus/>