

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen BZ1021-54L Eco-Drive Proximity Pryzm Chronograph Mens Watch User Manual

Citizen BZ1021-54L

Citizen BZ1021-54L Eco-Drive Proximity Pryzm Chronograph Mens Watch User Manual

Model: BZ1021-54L

INTRODUCTION

This manual provides detailed instructions for the Citizen BZ1021-54L Eco-Drive Proximity Pryzm Chronograph Mens Watch. This timepiece combines Citizen's Eco-Drive technology, which powers the watch using any light source, with Bluetooth Proximity features for smartphone connectivity. It also includes chronograph, date display, and perpetual calendar functions. Please read this manual thoroughly to ensure proper use and maintenance of your watch.

SETUP

Initial Charging (Eco-Drive)

Your Citizen Eco-Drive watch is powered by light. Before initial use, expose the watch dial to bright light (natural or artificial) for several hours to ensure it is fully charged. Avoid prolonged storage in darkness to prevent the watch from stopping.

- Place the watch where the dial is exposed to light.
- Ensure the watch does not overheat during charging; avoid direct sunlight for extended periods in hot environments.
- A fully charged watch can operate for several months in darkness.

Time and Date Setting

The watch features a perpetual calendar and can synchronize time via Bluetooth. For manual setting or initial setup:

1. **Crown Operation:** Pull the crown out to the first or second click position as indicated in the detailed manual for specific adjustments.
2. **Hand Adjustment:** Rotate the crown to set the time and date.
3. **Pushers:** Use the pushers (buttons) on the side of the case for fine adjustments or mode selection.



Image: Side view of the Citizen BZ1021-54L watch, highlighting the crown and pushers for time and function adjustments.

Bluetooth Pairing (Proximity Feature)

The Proximity feature allows your watch to connect with a smartphone via Bluetooth for time synchronization and notification alerts.

1. Download the official Citizen Eco-Drive Bluetooth app from your smartphone's app store.
2. Enable Bluetooth on your smartphone.
3. Follow the in-app instructions to pair your watch. This typically involves pressing a specific pusher on the watch to activate pairing mode.
4. Once paired, the watch will automatically synchronize time and receive notifications (e.g., call, message alerts).

OPERATING INSTRUCTIONS

Chronograph Function

The watch features a chronograph for measuring elapsed time.

- **Start/Stop:** Press the upper pusher to start and stop the chronograph.
- **Reset:** Press the lower pusher while the chronograph is stopped to reset it to zero.

Date Display and Perpetual Calendar

The watch displays the date and features a perpetual calendar, which automatically adjusts for different month lengths and leap years.

- The date is typically displayed in a sub-dial or aperture on the main dial.
- Ensure the watch is correctly set to the current year and month for the perpetual calendar to function accurately.

Alarm Function

Refer to the detailed manual for specific instructions on setting and using the alarm function, as it typically involves a combination of crown and pusher operations to select and set the alarm time.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and bracelet with a soft, dry cloth regularly.
- For stubborn dirt, use a soft cloth dampened with mild soap and water, then wipe dry.
- Avoid using harsh chemicals or abrasive materials.

Water Resistance

This watch is water resistant up to 100 meters (330 feet).

- Suitable for showering, swimming, and snorkeling.
- Not suitable for scuba diving.
- Do not operate the crown or pushers while the watch is wet or submerged.
- Ensure the crown is pushed in completely after any adjustments to maintain water resistance.

Problem	Possible Cause	Solution
Time is incorrect.	Not synchronized, or manual setting error.	Pair with smartphone via Bluetooth for automatic time sync, or manually set the time using the crown.
Bluetooth connection issues.	Watch or phone Bluetooth off, out of range, or app issue.	Ensure Bluetooth is enabled on both devices. Restart the app or phone. Re-pair the watch if necessary.
Date is incorrect.	Perpetual calendar not set correctly or manual adjustment needed.	Ensure the watch is set to the correct year. Manually adjust if needed, referring to the full manual.

For issues not listed here, please consult the comprehensive user manual provided with your watch or contact Citizen customer support.

SPECIFICATIONS

- **Model Number:** BZ1021-54L
- **Movement:** Eco-Drive Quartz
- **Case Material:** Stainless Steel
- **Band Material:** Stainless Steel
- **Dial Color:** Blue
- **Band Color:** Silver-tone
- **Crystal:** Sapphire Glass
- **Case Diameter:** 48 mm
- **Case Thickness:** 16 mm
- **Band Width:** 22 mm
- **Water Resistance:** 100 meters (330 feet)
- **Special Features:** Chronograph, Date Display, Perpetual Calendar, Bluetooth Proximity
- **Clasp Type:** Push Button Deployment Clasp (Integrated to Bracelet)
- **Weight:** 176 grams

WARRANTY AND SUPPORT

Your Citizen watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or further inquiries, please visit the official Citizen website or contact their authorized service centers.

[Official Citizen Website](#)

