

## MEDION MD16698

# Medion MD 16698 Tabletop Dishwasher User Manual

Model: MD16698

## 1. PRODUCT OVERVIEW

The Medion MD 16698 is a compact and efficient tabletop dishwasher, perfect for smaller living spaces or single-person households. It offers a variety of washing programs to suit different needs, ensuring clean dishes while minimizing energy and water consumption.

Key features include:

- Compact and freestanding design.
- Capacity for 6 place settings.
- 6 cleaning programs: Intensive, Normal, Eco, Glass, 90 min, and Quick.
- Energy efficiency class A+.
- Low noise level of 51 dB.
- Flexible start delay (1-24 hours).



Figure 1: Front view of the Medion MD 16698 Tabletop Dishwasher.

## 2. SETUP AND INSTALLATION

Before operating your new dishwasher, ensure it is properly set up according to these instructions.

### 2.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage that may have occurred during transit. Keep packaging materials for future transport if needed.

### 2.2 Placement

Place the dishwasher on a stable, level surface near a water supply, drain, and electrical outlet. Ensure there is adequate ventilation around the unit.

### 2.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. Connect the drain hose to a suitable drain pipe or sink. The drain hose should not be kinked or obstructed.

### 2.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency of your power supply match the specifications on the dishwasher's rating label.



Figure 2: Angled view of the dishwasher, showing its compact size for placement.

### 3. OPERATING INSTRUCTIONS

---

Follow these steps to operate your Medion MD 16698 dishwasher.

#### 3.1 Loading the Dishwasher

Scrape off large food particles from dishes. Load dishes into the basket, ensuring they do not block the spray arms. Place cutlery in the designated cutlery basket.



Figure 3: Interior view showing the basket for loading dishes.

### 3.2 Adding Detergent and Rinse Aid

Open the detergent dispenser and add the recommended amount of dishwasher detergent. If applicable, fill the rinse aid dispenser to the indicated level.

### 3.3 Selecting a Program

Close the dishwasher door. Press the Power button to turn on the appliance. Use the program selection button (P) to cycle through the available programs:

- **Intensive:** For heavily soiled dishes and pots.
- **Normal:** For normally soiled dishes.
- **Eco:** Energy-saving program for normally soiled dishes.
- **Glass:** For delicate glassware.
- **90 min:** For lightly soiled dishes requiring a quicker wash.
- **Quick:** The shortest program for very lightly soiled dishes.

### 3.4 Start Delay Function

To set a delayed start, press the delay button (clock icon) repeatedly to select a delay time between 1 and 24 hours. The selected time will be displayed.

### 3.5 Starting the Wash Cycle

Once the program is selected (and delay, if desired), press the Start/Pause button to begin the cycle. The display will show the remaining time.



Figure 4: Front view highlighting the control panel for program selection and start delay.

## 4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

### 4.1 Cleaning Filters

The filter system should be checked and cleaned regularly (e.g., weekly). Remove the coarse filter, fine filter, and main filter. Rinse them under running water to remove any food particles. Reassemble and place them back correctly.

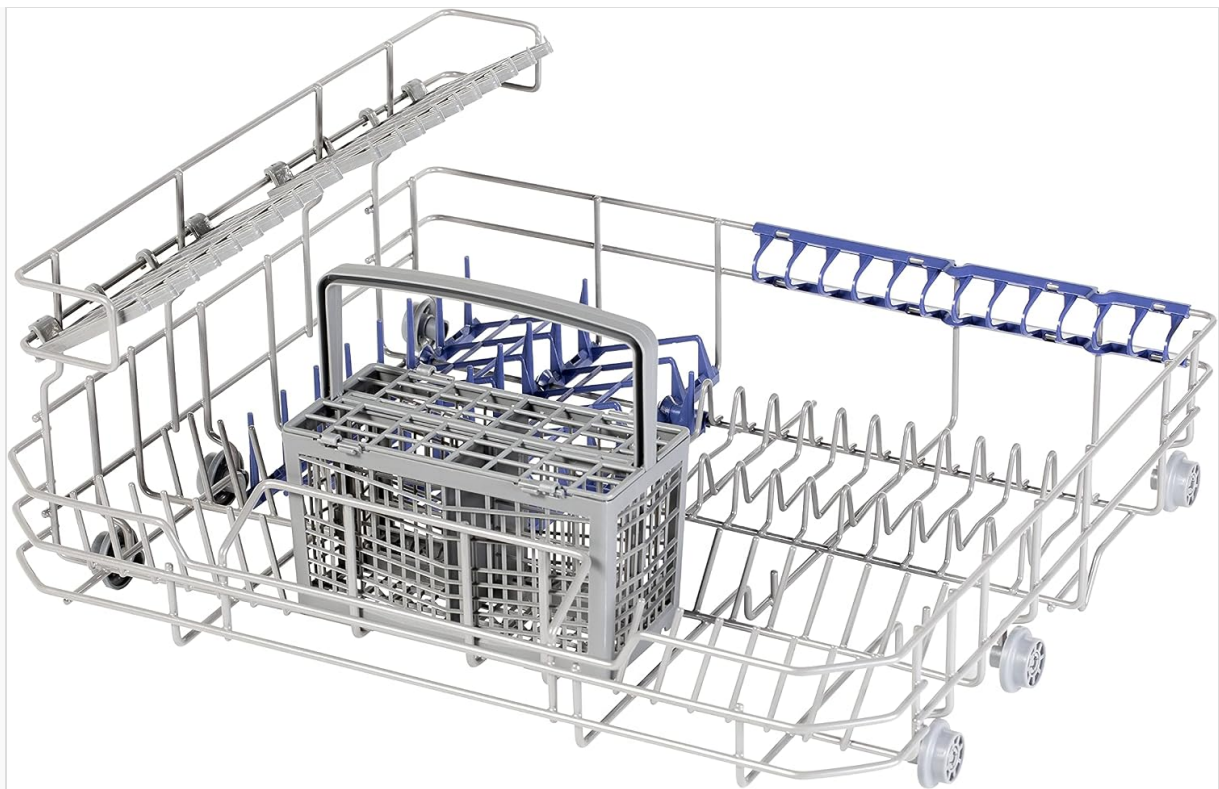


Figure 5: The dishwasher basket, which can be removed for cleaning the filter system underneath.

## 4.2 Cleaning Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the nozzles with a thin wire or needle.

## 4.3 Adding Dishwasher Salt (if applicable)

If your water is hard, the dishwasher may have a salt dispenser. Check the salt indicator light and refill with dishwasher salt as needed to prevent limescale buildup.

## 4.4 Exterior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners or solvents.

# 5. TROUBLESHOOTING


Before calling for service, check the following common issues and their solutions.

- **Dishwasher does not start:** Ensure the power cord is plugged in, the door is fully closed, and the circuit breaker has not tripped.
- **Dishes are not clean:** Check if spray arms are blocked, filters are clean, and enough detergent is used. Ensure dishes are loaded correctly.
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the filter system.
- **Excessive foam:** Ensure you are using only dishwasher detergent, not hand dish soap.
- **White spots on dishes:** This may indicate a need for more rinse aid or dishwasher salt (if applicable).

# 6. SPECIFICATIONS

| Specification | Value |
|---------------|-------|
|---------------|-------|

| Specification             | Value            |
|---------------------------|------------------|
| Model Number              | MD16698          |
| Dimensions (W x D x H)    | 55 x 50 x 44 cm  |
| Weight                    | 23 kg            |
| Energy Efficiency Class   | A+               |
| Annual Energy Consumption | 174 kWh          |
| Noise Level               | 51 dB            |
| Capacity                  | 6 Place Settings |
| Water Capacity            | 6.5 Liters       |
| Control Type              | Push Button      |
| Color                     | White            |

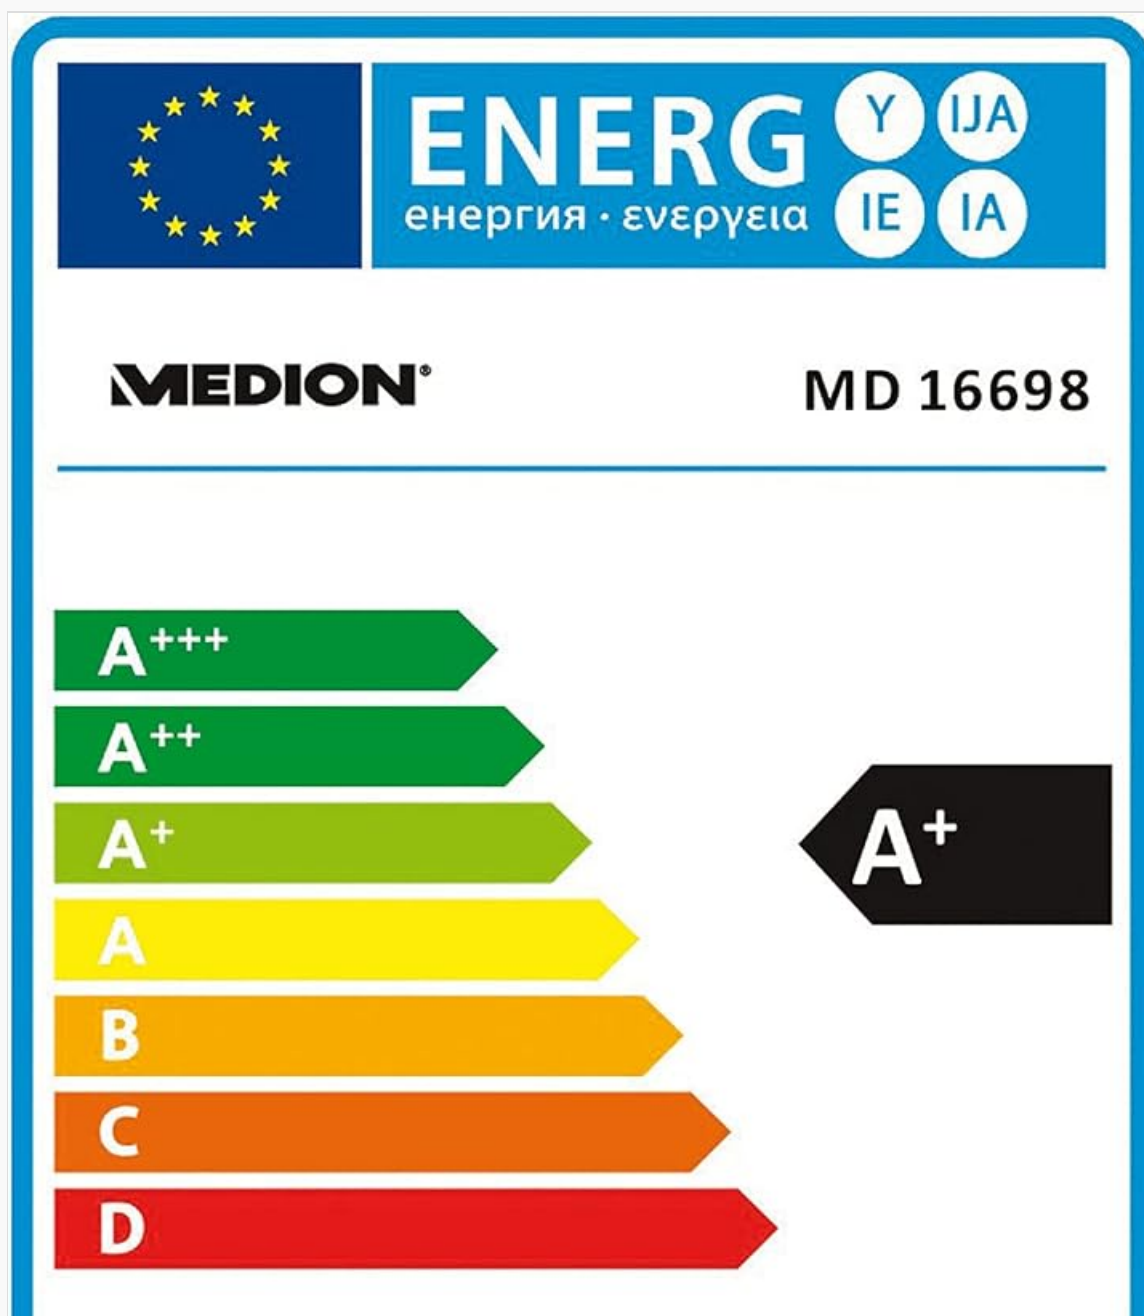

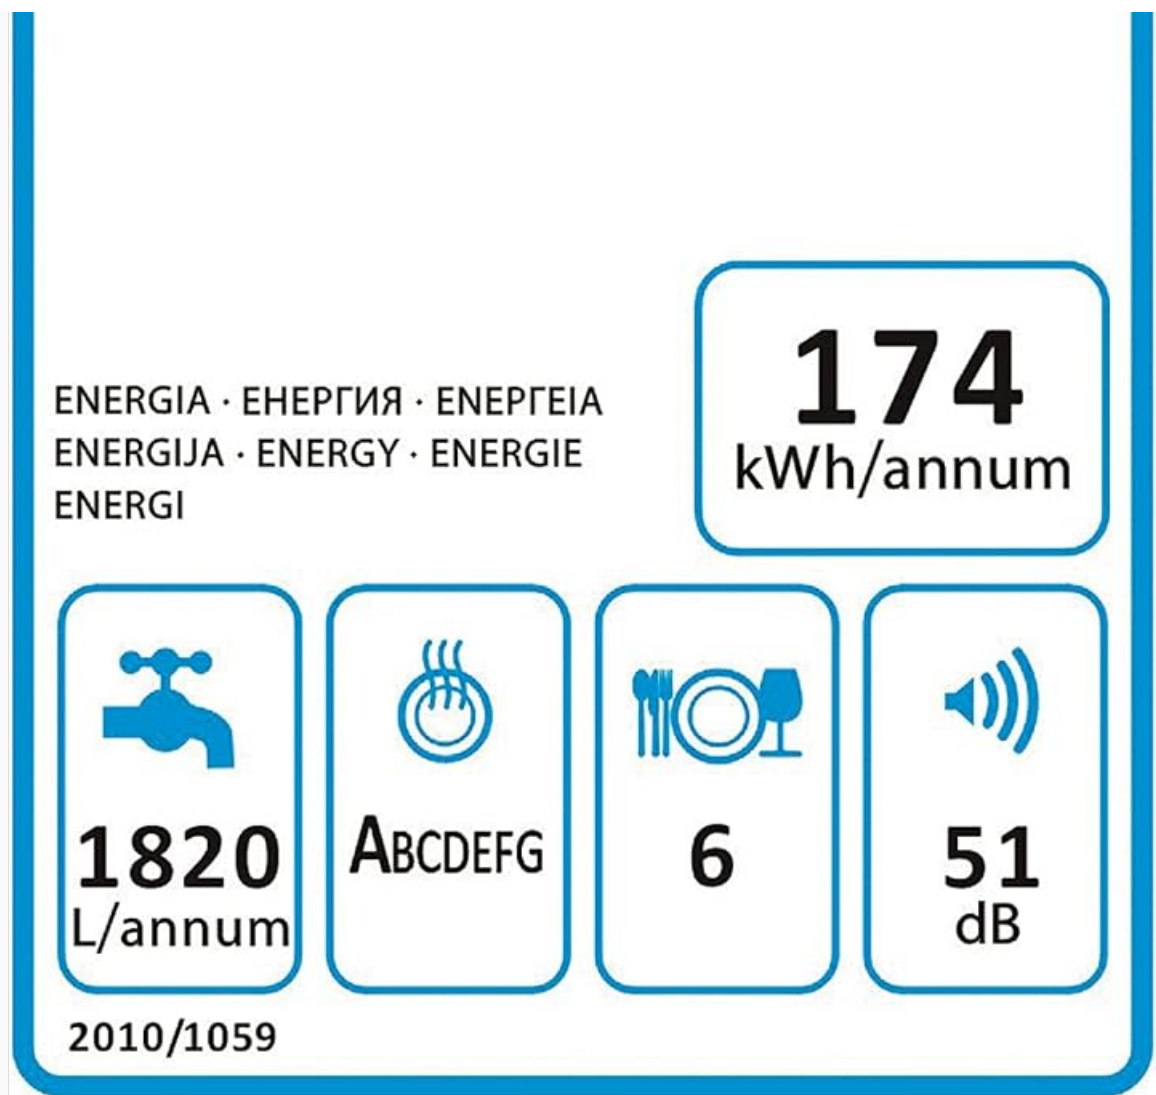 


Figure 6: Energy label for the Medion MD 16698, indicating its efficiency ratings.

## 7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official MEDION website. Keep your proof of purchase for warranty claims.

**Manufacturer:** MEDION

**First Available Date:** January 15, 2020