

## Canto HL50

# Canto Music Electronic Keyboard HL50 with Microphone User Manual

Model: HL50

## INTRODUCTION

---

Thank you for purchasing the Canto Music Electronic Keyboard HL50 with Microphone. This manual provides essential information for the safe and effective use of your new instrument. Please read it thoroughly before operation and retain it for future reference.

## PRODUCT OVERVIEW

---

The Canto Music Electronic Keyboard HL50 is a portable musical instrument designed for beginners and children. It features 37 mini-size keys, various tones and rhythms, and comes with a microphone for vocal accompaniment.

## Package Contents

- Canto Music Electronic Keyboard HL50
- Microphone
- Power Adapter (DC 9V)
- User Manual (this document)



Figure 1: Canto Music Electronic Keyboard HL50, showing the keyboard, microphone, and power adapter.

## SETUP

### 1. Unpacking

1. Carefully remove all components from the packaging.
2. Inspect the keyboard and accessories for any signs of damage. If any damage is found, do not use the product and contact customer support.

### 2. Power Connection

The keyboard can be powered using the included AC power adapter or batteries (not included).

- **Using the Power Adapter:** Insert the DC plug of the power adapter into the DC 9V input jack located on the back of the keyboard. Plug the AC adapter into a standard wall outlet.
- **Using Batteries:** Open the battery compartment on the back of the keyboard. Insert 6 'AA' size batteries (not included), ensuring correct polarity (+/-). Close the battery compartment securely.



Figure 2: Back view of the Canto Music Electronic Keyboard HL50, illustrating the battery compartment area.

### 3. Microphone Connection

Plug the microphone's 3.5mm jack into the 'MIC IN' port on the keyboard. Ensure it is fully inserted for proper function.

### 4. Headphones Connection (Optional)

To practice privately, plug standard 3.5mm headphones into the 'PHONES' jack on the keyboard. This will mute the internal speakers.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Locate the 'ON/OFF' switch on the keyboard. Slide it to the 'ON' position to power on the instrument. Slide it to 'OFF' to power off.

### 2. Volume Control

Adjust the master volume using the 'VOLUME' knob or buttons (if present) to your desired level. Start with a low volume and increase gradually.

### 3. Tone Selection

The keyboard offers various instrument tones. Press the 'TONE SEL' button repeatedly or use dedicated tone buttons (e.g., PIANO, ORGAN, TRUMPET) to cycle through available tones. The selected tone may be indicated on the display.

### 4. Rhythm Selection

Select from a variety of built-in rhythms (e.g., ROCK, DISCO, WALTZ). Press the 'RHYTHM SEL' button or dedicated rhythm buttons to choose a rhythm. Press 'START/STOP' to begin or end the rhythm playback.

### 5. Tempo Adjustment

When a rhythm is playing, use the 'TEMPO' buttons (usually '+' and '-') to increase or decrease the speed of the rhythm.

### 6. Drum/Animal Sounds

The keyboard features dedicated pads or buttons for drum sounds (DRUM1, DRUM2, etc.) or animal sounds. Press these buttons to play individual sound effects.

### 7. Microphone Usage

Once the microphone is connected, speak or sing into it. Your voice will be amplified through the keyboard's speakers. Adjust the microphone volume if a dedicated control is available.

### 8. Record and Playback (If Available)

Some models may include a record function. If present, press the 'RECORD' button to start recording your performance. Press 'PLAY' to listen to your recorded melody. Consult the keyboard's panel for specific record/playback controls.

## MAINTENANCE

---

### 1. Cleaning

- Wipe the keyboard surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

### 2. Storage

- Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the batteries to prevent leakage.
- Keep the keyboard away from dust and moisture.

## TROUBLESHOOTING

---

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                | Possible Cause                                                                            | Solution                                                                                                                    |
|------------------------|-------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| No power               | Power adapter not connected; Batteries drained or incorrectly inserted; Power switch off. | Ensure power adapter is securely connected and plugged in. Replace batteries or check polarity. Slide power switch to 'ON'. |
| No sound               | Volume too low; Headphones connected; Speaker malfunction.                                | Increase volume. Disconnect headphones. If problem persists, contact support.                                               |
| Microphone not working | Microphone not connected properly; Microphone faulty.                                     | Ensure microphone is fully inserted into the 'MIC IN' jack. Test with another microphone if available.                      |
| Distorted sound        | Volume too high; Low batteries.                                                           | Reduce volume. Replace batteries.                                                                                           |

## SPECIFICATIONS

| Feature                 | Detail                                                             |
|-------------------------|--------------------------------------------------------------------|
| Model                   | HL50                                                               |
| Instrument Type         | Electronic Keyboard                                                |
| Keys                    | 37 Mini-size keys                                                  |
| Finish Type             | Black                                                              |
| Material                | Plastic                                                            |
| Connectivity Technology | Auxiliary                                                          |
| Connector Type          | 3.5mm Jack (for Microphone, Headphones)                            |
| Special Features        | Portable                                                           |
| Skill Level             | Beginner                                                           |
| Age Range               | Kid                                                                |
| Power Source            | DC 9V Power Adapter (included) or 6x 'AA' Batteries (not included) |

## WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or service inquiries, please reach out to the Canto customer service department or the authorized dealer from whom you purchased the product.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**