

[Manuals.plus](#) /

› [Lighting EVER](#) /

› Lighting EVER LED Camping Lantern and Flashlight User Manual - Model 3300019

Lighting EVER 3300019

Lighting EVER LED Camping Lantern and Flashlight User Manual

Model: 3300019

1. INTRODUCTION

Thank you for choosing the Lighting EVER LED Camping Lantern and Flashlight. This versatile device is designed to provide reliable illumination for various indoor and outdoor activities, including camping, hiking, emergencies, and home use. It features a powerful LED spotlight, a 360°/180° area light, multiple lighting modes, a built-in power bank, and IPX4 water resistance.



Figure 1.1: The lantern in various usage scenarios, highlighting its versatility.

402 g / 14.18 oz

Compact and Lightweight



Figure 1.2: The lantern attached to a backpack, demonstrating its portability.

2. SAFETY INSTRUCTIONS

- Do not look directly into the LED light when it is on, as it can cause temporary vision impairment.
- Keep the device away from extreme temperatures, direct sunlight, and open flames.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage or injury.
- Ensure the USB port cover is securely closed when not in use to maintain water resistance.
- Keep out of reach of children.
- Use only the provided USB cable or a certified equivalent for charging.

3. PACKAGE CONTENTS

- 1 x Lighting EVER LED Camping Lantern and Flashlight (Model 3300019)

- 1 x USB Charging Cable
- 1 x User Manual (This document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your LED Camping Lantern and Flashlight.



Figure 4.1: Front view of the Lighting EVER LED Camping Lantern and Flashlight, showing both lantern and flashlight functions, alongside the included USB charging cable.



Figure 4.2: Dimensions of the lantern, illustrating its compact size and integrated USB cable.



Figure 4.3: The lantern demonstrating its carrying handle and hanging hook features.

- **Spotlight (Front LED):** Provides a focused beam for long-distance illumination.
- **Lantern (Side LEDs):** Offers wide-angle illumination for area lighting.
- **Spotlight Power Button:** Controls the spotlight function.
- **Lantern Power Button:** Controls the lantern and red light functions.
- **Integrated USB Charging Cable:** For convenient recharging of the lantern.
- **USB Output Port:** Functions as a power bank to charge external devices.
- **Battery Indicator Lights:** Shows the current battery level.
- **Carrying Handle:** For easy portability.
- **Hanging Hooks:** Located on the top for suspending the lantern.

5. SETUP AND INITIAL CHARGE

Before first use, it is recommended to fully charge the lantern.

1. Locate the integrated USB charging cable on the side of the lantern.
2. Plug the USB-A end of the cable into a standard USB power adapter (not included), a computer USB port, or a power bank.
3. The battery indicator lights will illuminate to show charging progress. When all indicator lights are solid, the lantern is fully charged.
4. Charging typically takes approximately 4 hours.
5. Once charging is complete, disconnect the cable and secure it back into its storage slot on the lantern.



Figure 5.1: The lantern connected for charging and demonstrating its power bank functionality by charging a smartphone.

6. OPERATING INSTRUCTIONS

6.1. Powering On/Off and Light Modes

The lantern features two separate buttons for controlling the spotlight and the area light (lantern/red light).



Figure 6.1: Visual representation of the various light modes and dimming capability.

Spotlight Operation:

1. Press the **Spotlight Power Button** once for High brightness (500LM, 350m range).
2. Press again for Low brightness (250LM, 200m range).
3. Press a third time to turn the spotlight off.

Lantern (Area Light) Operation:

1. Press the **Lantern Power Button** once for 360° white light.
2. Press again for 180° white light (half-side illumination).
3. Press a third time for Red light (continuous).
4. Press a fourth time for Red Flashing light (emergency signal).
5. Press a fifth time to turn the lantern off.

6.2. Dimming Function

To adjust the brightness of the white lantern light:

- While the 360° or 180° white lantern light is on, press and hold the **Lantern Power Button**.
- The brightness will gradually increase or decrease. Release the button when the desired brightness is reached.
- The red light modes are not dimmable.

6.3. Power Bank Function

The lantern can be used to charge other USB-powered devices.

1. Open the protective cover of the USB output port.
2. Connect your device's charging cable to the USB output port on the lantern.
3. The lantern will begin charging your device. The battery indicator lights will show the remaining power.
4. Close the protective cover when not in use to maintain water resistance.

7. MAINTENANCE

- **Cleaning:** Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the lantern in a cool, dry place when not in use. For prolonged storage, charge the battery every 3-6 months to maintain battery health.
- **Battery:** The built-in lithium-ion battery is not user-replaceable.

8. TROUBLESHOOTING

Problem	Possible Cause / Solution
Lantern does not turn on.	Battery is depleted. Solution: Charge the lantern fully using the integrated USB cable.
Light output is dim.	Low battery level or dimming function activated. Solution: Recharge the battery. If using lantern mode, press and hold the lantern button to increase brightness.
Device not charging from power bank function.	Lantern battery is too low or cable is faulty. Solution: Ensure the lantern is sufficiently charged. Try a different USB cable for your device.
Water ingress after exposure to water.	USB port cover was not securely closed. Solution: Ensure all port covers are tightly sealed before exposing to water. The IPX4 rating protects against splashing water, not submersion.

9. SPECIFICATIONS

Feature	Detail
Model Number	3300019

Feature	Detail
Brightness	Up to 500 Lumens (Spotlight)
Light Modes	Spotlight (High/Low), Lantern (360°/180° White, Red, Red Flashing)
Battery Capacity	2600mAh Rechargeable Lithium-Ion
Power Bank Output	5V DC
Water Resistance	IPX4 (Splash-proof)
Light Source	LED (CREE XPG2 R5 for spotlight)
Color Temperature	6000K (Daylight White)
Dimensions	6.77"L x 3.78"W x 3.78"H (approx. 17.2cm L x 9.6cm W x 9.6cm H)
Weight	155 Grams (approx. 5.5 ounces)
Material	Plastic
Included Components	Lantern, USB Cable, User Manual

10. WARRANTY AND SUPPORT

Lighting EVER products are manufactured to high quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official Lighting EVER website.

Website: [Lighting EVER Official Store](#)

© 2024 Lighting EVER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question