

[Manuals.plus](#) /

› [CLEANmaxx](#) /

› CLEANmaxx PRO Automatic Shirt Ironer User Manual

CLEANmaxx Hemdenbügler PRO

CLEANmaxx PRO Automatic Shirt Ironer User Manual

Model: Hemdenbügler PRO

Brand: CLEANmaxx

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your CLEANmaxx PRO Automatic Shirt Ironer. This innovative appliance is designed to automatically dry and iron shirts, blouses, and t-shirts, offering a convenient alternative to traditional ironing methods.

Key features include:

- Fully automatic drying and ironing, saving time.
- Replaces traditional irons, ironing boards, steam irons, and steamers.
- Intelligent drying function for damp garments.
- Achieves wrinkle-free results in approximately 10 minutes.
- Powerful 1800-watt hot air technology for gentle drying up to 45°C.
- Suitable for various textiles including silk, polyester, viscose, linen, and cotton (ensure dryer-safe).
- Adjustable for garment sizes S to XXL with an extendable zipper and telescopic rod for longer items.



The CLEANmaxx PRO Automatic Shirt Ironer with a blue shirt on the mannequin, highlighting its design.

¡ADIÓS A LA PLANCHA!

Más tiempo para mí



2 en 1



Illustration of the CLEANmaxx PRO's 2-in-1 function, combining drying and ironing for damp clothes.

Viscosa

Poliéster

Seda

Lino

Algodón

Vaqueros y mucho más

PARA MUCHOS TEXTILES

La ropa debe ser apta para secadora, ¡tenga en cuenta la etiqueta de la ropa!

The CLEANmaxx PRO presented as an all-in-one solution, eliminating the need for a traditional iron, ironing board, or steam iron.

IMPORTANT SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, level surface.
- Do not operate the appliance with a damaged cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not immerse the appliance in water or other liquids.
- Unplug the appliance when not in use and before cleaning.
- Ensure garments are suitable for tumble drying before using the ironer.
- Do not cover the air vents during operation.
- Use only as intended for drying and ironing textiles.

PACKAGE CONTENTS

Verify that all components are present:

- CLEANmaxx PRO Automatic Shirt Ironer base unit
- Inflatable mannequin attachment
- 5 weight clips for garment tension
- Instruction Manual

SETUP GUIDE

Follow these steps to set up your CLEANmaxx PRO Automatic Shirt Ironer:

1. Unpack all components and place the base unit on a firm, flat surface.
2. Attach the inflatable mannequin to the base unit securely.
3. Ensure the power cord is easily accessible but not obstructing the appliance.

OPERATING INSTRUCTIONS

Preparing Your Garment

1. Wash the garment as usual. For best results, use the ironer with damp, freshly washed clothes.
2. Button up the garment (e.g., shirt buttons) before placing it on the mannequin.
3. Carefully place the damp shirt or blouse onto the inflatable mannequin. Ensure it fits smoothly without excessive wrinkles.
4. For longer garments, adjust the telescopic rod to the appropriate length.
5. Use the extendable zipper on the mannequin for larger sizes (S to XXL).
6. Attach the 5 weight clips evenly to the hem of the garment to keep it taut during the drying and ironing process.

PARA CAMISAS, BLUSAS, CAMISETAS, JERSEYS Y CO.



Barra telescópica
para camisas largas,
etc.



Cremallera
extensible para
tallas grandes

The CLEANmaxx PRO features an extendable zipper and telescopic bar to accommodate various garment sizes from S to XXL.

Starting the Ironing Cycle

1. Plug the appliance into a suitable power outlet.
2. Turn on the appliance using the main power switch.
3. Set the desired operating time using the timer function (typically 5-30 minutes). The appliance uses hot air technology to dry and smooth the garment.
4. The appliance will automatically shut off once the set time has elapsed.
5. Carefully remove the garment from the mannequin. It should be dry and wrinkle-free.

SIN ARRUGAS EN APROX. 10 MIN.



antes

después ✓



- 1 Ponte la ropa
- 2 Encender
- 3 Activar temporizador

Achieve wrinkle-free results in approximately 10 minutes by following three simple steps: place garment, turn on, and activate timer.

BUEN RENDIMIENTO



incl.
**5 clips de
peso**



The CLEANmaxx PRO offers powerful performance with 1800 watts, gentle hot air drying up to 45°C, a 5-30 minute timer, and includes 5 weight clips for optimal results.

Fabric Compatibility

The CLEANmaxx PRO is suitable for various dryer-safe textiles. Always check the care label of your garment before use.

- Viscose
- Polyester
- Silk
- Linen
- Cotton
- Other dryer-safe blends



COMPACTO Y OCUPA POCO ESPACIO

An illustration showing various fabric types suitable for the CLEANmaxx PRO Automatic Shirt Ironer, including viscose, polyester, silk, linen, and cotton. Always check garment labels for dryer compatibility.

CARE AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

- Before cleaning, always unplug the appliance and allow it to cool completely.
- Wipe the exterior of the base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- The inflatable mannequin can be wiped clean with a damp cloth. Ensure it is completely dry before storage.
- Check air vents regularly for dust or lint accumulation and clean if necessary to ensure proper airflow.
- Store the appliance in a dry, cool place when not in use.

TROUBLESHOOTING

If you encounter issues with your CLEANmaxx PRO Automatic Shirt Ironer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outage, faulty outlet.	Check power connection, try a different outlet, ensure power supply.
Garment is not dry or wrinkle-free.	Insufficient drying time, garment too wet, improper placement, fabric not suitable.	Increase drying time, ensure garment is damp (not soaking wet), reposition garment, check care label.
Appliance is noisy.	Normal operation (fan noise), obstruction in air vents.	Fan noise is normal. Check air vents for obstructions and clean if necessary.
Garment has new wrinkles.	Garment not properly stretched with clips, mannequin not fully inflated, fabric unsuitable.	Ensure all 5 weight clips are used and evenly distributed. Check mannequin inflation. Verify fabric suitability.

TECHNICAL SPECIFICATIONS

- **Brand:** CLEANmaxx
- **Model Name:** Hemdenbügler PRO
- **Product Dimensions:** 100 cm (length) x 58.5 cm (width) x 0.1 cm (height, mannequin material) / Base unit approx. 42 cm (width) x 25 cm (height)
- **Weight:** 2 kg
- **Power:** Max. 1800 watts
- **Drying Temperature:** Up to 45°C
- **Timer:** 5-30 minutes
- **Material (Base):** Stainless Steel
- **UPC:** 756832291481

SOLUCIÓN TODO EN UNO



Plancha



Tabla de planchar



Plancha de vapor

The CLEANmaxx PRO Automatic Shirt Ironer is compact, with approximate dimensions of 42 cm width and 25 cm height for the base unit, making it easy to store.

WARRANTY AND SUPPORT

CLEANmaxx products are designed for quality and reliability. For specific warranty information, please refer to the documentation included with your purchase or contact CLEANmaxx customer support.

For technical assistance or spare parts, please visit the official CLEANmaxx website or contact your retailer.

Manufacturer: DS Produkte GmbH

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question