

Moulinex SS-188290

Moulinex Drive Belt SS-188290 for Uno Nutri Bread Makers

Instruction Manual

1. PRODUCT OVERVIEW

This document provides essential information for the Moulinex original replacement drive belt, model SS-188290. This toothed rubber belt (part number 80S3M582) is designed to transmit power from the motor to the kneading paddle mechanism in compatible Moulinex Uno Nutri bread makers, ensuring proper operation during the bread-making process.

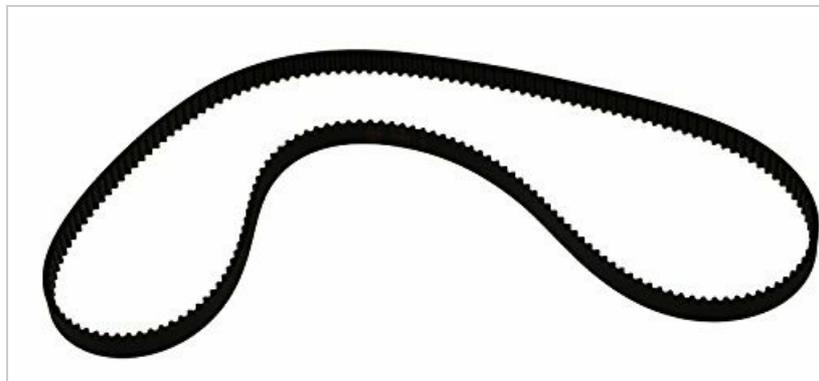


Image 1: Moulinex replacement drive belt. This black toothed rubber belt is a crucial component for the bread maker's kneading function.

2. INSTALLATION (SETUP)

Replacing the drive belt requires careful handling and basic mechanical aptitude. Always ensure the bread maker is unplugged from the power outlet before beginning any installation or maintenance procedures.

1. **Safety First:** Unplug the bread maker from the electrical outlet.
2. **Access the Mechanism:** Depending on your specific bread maker model, you may need to remove the bottom panel or other housing components to access the drive mechanism. Refer to your bread maker's specific service manual for detailed disassembly instructions.
3. **Remove Old Belt:** Carefully remove the worn or broken drive belt from the motor pulley and the main drive shaft. Note its orientation if possible.

- 4. Install New Belt:** Position the new Moulinex drive belt (SS-188290) onto the smaller motor pulley first, then stretch it over the larger drive shaft pulley. Ensure the teeth of the belt align correctly with the grooves on both pulleys.
- 5. Verify Tension:** The belt should be taut but not excessively tight. It should allow for smooth rotation of the pulleys without slipping.
- 6. Reassemble:** Reattach any removed panels or housing components. Ensure all screws are securely fastened.
- 7. Test:** Plug in the bread maker and run a short cycle (e.g., kneading only) to confirm the new belt is functioning correctly and the kneading paddle rotates smoothly.

3. OPERATING PRINCIPLE

The drive belt is an integral part of your bread maker's mechanical system. Its primary function is to transfer rotational power from the electric motor to the kneading paddle shaft. This continuous motion is essential for mixing ingredients thoroughly and developing the dough, leading to properly baked bread. A properly installed and functioning drive belt ensures consistent and efficient kneading throughout the bread-making cycle.

4. MAINTENANCE

Regular inspection of the drive belt can help prevent unexpected failures and prolong the life of your bread maker.

- Visual Inspection:** Periodically, when the bread maker is unplugged and cool, inspect the drive belt for signs of wear, such as cracks, fraying, stretching, or missing teeth.
- Cleanliness:** Ensure the belt and pulleys are free from dough residue, flour, or other debris that could cause slippage or premature wear. Use a dry cloth or soft brush for cleaning.
- Replacement:** Replace the drive belt immediately if any signs of significant wear or damage are observed. A worn belt can lead to inconsistent kneading, grinding noises, or complete failure of the kneading function.

5. TROUBLESHOOTING

If your bread maker is experiencing issues related to the kneading mechanism, the drive belt may be a contributing factor.

| Symptom | Possible Cause | Solution |
|--|---|---|
| Kneading paddle not turning | Broken or slipped drive belt | Inspect and replace the drive belt if broken or dislodged. |
| Grinding or squealing noise during kneading | Worn, stretched, or misaligned drive belt | Inspect the belt for wear; replace if necessary. Ensure proper alignment. |
| Inconsistent kneading or dough not mixing properly | Slipping drive belt due to wear or debris | Clean the belt and pulleys. Replace the belt if it shows signs of wear or stretching. |

6. SPECIFICATIONS

- Brand:** Moulinex

- **Model Number:** SS-188290
- **Part Type:** Toothed Rubber Belt (80S3M582)
- **Item Weight:** Approximately 80 grams
- **Package Dimensions:** 22.2 x 16.4 x 0.8 cm
- **ASIN:** B071ZXKCQ2

7. COMPATIBLE MODELS

This Moulinex drive belt (SS-188290) is compatible with the following Moulinex Uno Nutri bread maker models:

- OW3101 series (e.g., OW310130, OW310131, OW310132, OW3101AR)
- OW3106 series (e.g., OW310631)
- OW310E series (e.g., OW310E30, OW310E31, OW310E32)
- OW311E series
- OW3501 series
- OW350 series

If your specific bread maker model is not listed, or if you are unsure about compatibility, please contact Moulinex customer support with your appliance's full model number and the spare part number (SS-188290 or 80S3M582) before purchase.

8. WARRANTY AND SUPPORT

This product is an original Moulinex spare part, ensuring high quality and compatibility with specified models. For specific warranty terms and conditions related to spare parts, please refer to the documentation provided with your original Moulinex bread maker or contact Moulinex customer service directly.

For technical assistance, compatibility inquiries, or to report any issues, please visit the official Moulinex website or contact their authorized service centers. Always provide the model number of your bread maker and the spare part number (SS-188290) when seeking support.

Moulinex Store: [Visit Moulinex Store on Amazon.it](#)