

Manuals.plus /

› Ontel /

› Ontel Turbo Scrub PRO 360 Cordless Rechargeable Floor and Tile Cleaning Machine Instruction Manual

Ontel TVP

Ontel Turbo Scrub PRO 360 Cordless Rechargeable Floor and Tile Cleaning Machine

INSTRUCTION MANUAL

Introduction

The Ontel Turbo Scrub PRO 360 is a cordless, rechargeable power scrubber designed for effective cleaning of floors, tiles, and various surfaces. This lightweight device features a powerful rotating head, an extendable wand, and multiple brush attachments to tackle tough dirt and grime in hard-to-reach areas. It offers two speed settings for precise cleaning and is waterproof for use in wet environments.

Package Contents

Please ensure all items are present before beginning assembly and operation:

- Turbo Scrub PRO 360 Main Unit
- 4-foot Extension Wand
- All-Purpose Brush
- Dome Brush
- Corner Brush
- Large Flat Brush
- AC Adapter for Charging



Image: All components included with the Turbo Scrub PRO 360.

Setup

1. **Initial Charge:** Before first use, fully charge the Turbo Scrub PRO 360 using the provided AC adapter. The device is designed to run for up to 75 minutes on a single charge.
2. **Attaching a Brush:** Select the appropriate brush for your cleaning task. Align the brush with the rotating head of the main unit and push firmly until it clicks into place.
3. **Attaching the Extension Wand (Optional):** For extended reach, connect the extension wand between the main unit and the brush head. Ensure both connections are secure. The wand extends the reach to nearly 4 feet.

**Extends To
Nearly 4Ft!**



Image: The Turbo Scrub PRO 360 with its extension wand for extended reach.

Operating Instructions

1. **Power On/Off:** Press the power button to turn the device on or off.
2. **Select Speed:** The Turbo Scrub PRO 360 features two speed settings: low (300 RPM) and high (430 RPM). Select the desired speed based on the cleaning intensity required.
3. **Application:** Apply your preferred cleaning solution to the surface to be cleaned or directly to the brush head.
4. **Cleaning:** Gently guide the rotating brush over the surface. Allow the scrubber to do the work; excessive pressure is not required. The waterproof head allows for use in wet conditions, such as showers and bathtubs.
5. **Brush Usage:**
 - **All-Purpose Brush:** Suitable for general cleaning tasks.
 - **Dome Brush:** Ideal for curved surfaces and corners, such as bathtubs and sinks.
 - **Corner Brush:** Specifically designed to reach into tight corners and grout lines.
 - **Large Flat Brush:** Best for flat surfaces like floors and large tiled areas.



Image: The rotating waterproof head in action on a tiled surface.



Image: Using the scrubber to clean a bathtub edge.

Maintenance

- **Cleaning Brushes:** After each use, remove the brush head and rinse it thoroughly under running water to remove any cleaning solution residue or debris. Allow brushes to air dry completely before storing.
- **Cleaning Main Unit:** Wipe the main unit and extension wand with a damp cloth. Do not submerge the main unit in water. Ensure the charging port cover is securely closed when not charging to maintain its waterproof integrity.
- **Storage:** Store the Turbo Scrub PRO 360 and its accessories in a dry, cool place, away from direct sunlight and extreme temperatures.

Troubleshooting

- **Device Not Turning On:** Ensure the device is fully charged. Connect the AC adapter and allow sufficient charging time.
- **Reduced Power/Performance:** A low battery charge can affect performance. Recharge the device. Also, ensure the brush head is clean and free of obstructions.

- **Brush Head Not Rotating Properly:** Check that the brush head is securely attached to the main unit or extension wand. Remove and reattach if necessary.
- **Difficulty Detaching Brush Head:** When detaching brushes, apply firm but gentle pressure to avoid damaging the attachment mechanism.

Specifications

Feature	Detail
Model Number	TVP
Product Dimensions	3.94"L x 22.9"W x 7.99"H
Weight	3.52 Pounds
Power Source	Rechargeable Battery (1 included)
Speed Settings	Low (300 RPM), High (430 RPM)
Run Time	Up to 75 minutes per charge
Handle Material	Plastic
Color	White
Manufacturer	Ontel

Warranty and Support

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or visit the official Ontel website. Keep your purchase receipt as proof of purchase.