

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Presto](#) /
- › [Presto Nomad Traveling Slow Cooker \(Red, 6-Quart\) Instruction Manual](#)

Presto 06011

Presto Nomad Traveling Slow Cooker (Red, 6-Quart) Instruction Manual

Model: 06011

INTRODUCTION

The Presto Nomad Traveling Slow Cooker is designed for slow-cooking foods and convenient transportation. Its robust 6-quart capacity is suitable for a variety of dishes, including pulled pork, chicken wings, sloppy joes, hot beef, soups, stews, and casseroles. The unit features a cool-touch exterior, a secure locking lid, and integrated storage solutions for portability.



Figure 1: Presto Nomad Traveling Slow Cooker, Red, 6-Quart.

SAFETY INFORMATION

- Always ensure the unit is placed on a stable, heat-resistant surface.
- Do not immerse the main housing in water. The removable pot and hinged cover are washable.
- Exercise caution as the glass viewing window and interior surfaces will be hot during and after operation.
- Keep out of reach of children.
- Ensure the lid is securely locked when transporting food to prevent spills.

COMPONENTS OVERVIEW

- **Removable Porcelain Enameled Cooking Pot:** PFAS-free, for direct cooking.
- **Hinged, Removable Cover:** Features a large glass window and a seal-tight gasket.
- **Swing-Up Handle:** Locks the lid for spill-proof transportation.

- **Control Knob:** Settings for OFF, WARM, LOW, and HIGH.
- **Dry Erase Board and Marker:** For labeling contents.
- **Detachable Utensil Holder:** Secures a utensil during transit and doubles as a spoon rest.
- **Silicone Cord:** Secures the utensil holder.
- **Condensation Cup:** Collects moisture from the lid.
- **Built-in Cord Storage:** For convenient storage and transport.



Figure 2: Key features of the Presto Nomad Traveling Slow Cooker.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the slow cooker for any damage.
2. **Initial Cleaning:** Before first use, wash the removable porcelain enameled cooking pot and the hinged cover in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the slow cooker with a damp cloth.
3. **Assemble:** Place the clean cooking pot into the main housing. Ensure it sits securely.
4. **Attach Utensil Holder:** If desired, attach the detachable utensil holder to the side of the unit. Use the silicone cord to secure a serving utensil (not included) for transport.
5. **Power Cord:** Unwind the power cord from its built-in storage compartment at the rear of the unit.



● **Removable Pot and Cover**

Figure 3: Placing the removable cooking pot into the slow cooker.

OPERATING INSTRUCTIONS

1. **Add Ingredients:** Place your desired ingredients into the removable cooking pot. Do not overfill; ensure there is adequate space for the lid to close without touching the food.
2. **Secure Lid:** Place the hinged cover onto the cooking pot. Engage the swing-up handle to lock the lid securely in place. The handle should be in the upright position to lock the lid, ensuring a spill-proof seal for transport.
3. **Connect Power:** Plug the power cord into a standard 110-volt electrical outlet.
4. **Select Setting:** Turn the control knob to your desired setting:
 - **WARM:** To keep cooked food at serving temperature.
 - **LOW:** For longer cooking times, typically 6-8 hours.
 - **HIGH:** For shorter cooking times, typically 3-4 hours.
5. **Cooking:** Allow the food to cook for the recommended time based on your recipe and selected setting. The large glass window allows you to monitor cooking progress without opening the lid.
6. **Serving:** Once cooking is complete, turn the control knob to OFF. Carefully unlock the lid by disengaging the swing-up handle. Use the detachable utensil holder as a spoon rest during serving.

7. **Labeling:** Use the included dry erase marker to write the contents of the slow cooker on the dry erase board for easy identification, especially at gatherings.



Figure 4: Utilize the dry erase board to label your dish.

Your browser does not support the video tag.

Video 1: Demonstrates the features and operation of the Presto Nomad Traveling Slow Cooker, including the locking handle, removable pot, and control settings.

MAINTENANCE AND CLEANING

1. **Unplug:** Always unplug the slow cooker from the electrical outlet and allow it to cool completely before cleaning.
2. **Remove Components:** Detach the hinged cover and remove the cooking pot from the housing.
3. **Wash Pot and Cover:** The porcelain enameled cooking pot and hinged cover are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse, and dry thoroughly.
4. **Clean Housing:** Wipe the exterior of the slow cooker housing with a damp cloth. Do not immerse the housing in water or any other liquid.
5. **Condensation Cup:** Empty and clean the condensation cup located at the rear of the unit after each use.
6. **Store Cord:** Once the unit is clean and dry, store the power cord in its designated compartment.



Figure 5: The removable pot facilitates easy cleaning.



Figure 6: The condensation collector should be emptied and cleaned after each use.

TROUBLESHOOTING

If the slow cooker does not operate, ensure it is properly plugged into a functioning electrical outlet and the control knob is set to a cooking or warm setting. If issues persist, refer to the full product manual or contact customer support.

SPECIFICATIONS

Brand	Presto
Model Number	06011
Color	Red
Capacity	6 Quarts
Material	Porcelain
Product Dimensions	13"D x 8.68"W x 11.64"H
Item Weight	7.9 Pounds
Voltage	110 Volts
Control Type	Knob
Number of Settings	3 (Warm, Low, High)
Dishwasher Safe	Yes (Removable pot and cover)
UPC	075741060118

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Presto website. Contact information for customer service can typically be found in the product packaging or on the manufacturer's website.