

- Manuals.plus /
- > [GCODE](#) /
 - > GCODE Waffle Plates Instruction Manual for Cuisinart Griddler GR-4N, GR-5B, GR-6 and GRID-8N Series

GCODE G1201A Waffle Plates for Cuisinart

GCODE Waffle Plates Instruction Manual

Model: G1201A Waffle Plates for Cuisinart

1. PRODUCT OVERVIEW

The GCODE Waffle Plates are an essential accessory for your compatible Cuisinart Griddler, transforming it into a versatile waffle maker. These nonstick plates are designed to produce authentic Belgian waffles with deep pockets, perfect for holding your favorite toppings. Crafted from durable, food-grade aluminum, they ensure even cooking and easy food release, making breakfast preparation simple and enjoyable. The plates are also dishwasher safe for convenient cleanup.



Image: Two GCODE Waffle Plates, showcasing their nonstick surface and deep waffle patterns.

2. COMPATIBILITY

These waffle plates are specifically designed to fit Cuisinart Griddler Grill models GR-4N, GR-4N(TK), GR-5B, GR-6, and GRID-8N Series. Please note that they are not compatible with older models such as GR-4 and GRID-8, nor with GR-150, GR150P1 Deluxe, or GR-300WSP1 Elite models. The 'N' in the model number signifies compatibility with newer generation Cuisinart griddles.

Model Number Matching Pictures #For Cuisinart



**Fit GR-4N & GR-4N(TK)
& GRID-8N**



Fit GR-5B & GR-6



(Deluxe)

**Definitely not fit other
griddler model GR-150**



(Elite)

**Definitely not fit other
griddler model GR-300WSP1**



Attention Not for old model GR-4 & GRID-8

"N" means news generation of Cuisinart griddle.

Image: Visual guide for Cuisinart Griddler model compatibility with GVODE Waffle Plates.

Comparison of GR-4 and GR-4N products



Directions :

1. GR-4N has a separate storage place for used cooking oil. But GR-4 is not, it is separated separately.
2. The bottom is obviously different. The nameplate will bear the model number.

Image: Detailed comparison illustrating the differences between GR-4 and GR-4N models for proper plate selection.

3. FEATURES

- **Compatibility:** Designed to fit specific Cuisinart Griddler models (GR-4N, GR-4N(TK), GR-5B, GR-6, GRID-8N Series).
- **Nonstick Coating:** Features a double-layer Teflon nonstick coating for effortless food release and easy cleanup. BPA-free.
- **Easy Installation:** Detachable plates are simple to install and remove from your Cuisinart Griddler machine.
- **Large & Even Cook:** Bakes 4 deep-pocketed, 3/4-inch thick Belgian waffles evenly and quickly at one time.
- **Durable Material:** Made of food-grade aluminum for long-lasting use.
- **Dishwasher Safe:** Designed for easy cleaning, though hand washing with soap is recommended for prolonged non-stick life.



NON-STICK COATING
EASY TO RELEASE AND CLEAN



Image: Demonstrates the non-stick coating for easy food release and cleaning.

4. SETUP

Before first use, wipe the waffle plates with a damp cloth to remove any dust from manufacturing or shipping. Ensure the plates are completely dry before installation.

To install the waffle plates:

1. Open your Cuisinart Griddler.
2. Locate the metal brackets on the interior of the griddler's housing.
3. Align the waffle plate with the brackets and push down until it clicks securely into place. Ensure both the top and bottom plates are correctly seated.



Image: Waffle plates correctly installed in a Cuisinart Griddler.

For a visual guide on plate installation, please refer to the official product video below:

Video: Official GCODE video demonstrating the installation and use of the waffle plates.

5. OPERATING INSTRUCTIONS

Once the waffle plates are securely installed, you are ready to begin making waffles.

1. Plug the power cord into a standard electrical outlet.
2. Turn the selector dial to the appropriate setting for waffle making. The green indicator light will illuminate when the griddler is heating up.
3. Once the griddler has reached the optimal temperature (typically 400°F), the green indicator light will turn off.
4. Lightly coat the waffle plates with nonstick cooking spray or brush with a thin layer of vegetable oil.
5. Pour your waffle batter onto the center of the lower waffle plate, spreading it evenly over the grid. Close the top cover.
6. Bake for approximately 3-5 minutes, or until waffles are golden brown and cooked to your desired crispness. Cooking times may vary based on batter consistency and desired doneness.
7. Carefully remove cooked waffles using a heat-proof spatula or tongs. Avoid using metal utensils that could scratch the nonstick coating.



Image: Freshly made waffles on the griddler, ready to be served with toppings.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your waffle plates and maintain their nonstick properties.

1. Always allow the griddler and plates to cool completely before cleaning.
2. To remove plates, press the plate release buttons and gently lift them off the griddler.
3. The waffle plates are dishwasher safe. However, for long-term preservation of the nonstick coating, hand washing with warm, soapy water is recommended.
4. Use a soft sponge or cloth. Avoid abrasive cleaners, scouring pads, or metal utensils that could damage the nonstick surface.
5. For stubborn residue, soak the plates in warm, soapy water for a few minutes before cleaning.
6. Wipe the exterior surfaces of the griddler with a damp cloth. Do not immerse the griddler base in water.
7. Ensure all parts are completely dry before storing.

7. TROUBLESHOOTING

If you encounter any issues with your GVODE Waffle Plates, please ensure they are correctly installed and that your Cuisinart Griddler is operating at the recommended temperature. For persistent problems, please contact customer support.

8. SPECIFICATIONS

Material	Aluminum with Non-stick coating
Brand	GVODE
Color	Black
Item Weight	2.16 Pounds
Product Dimensions	11.5"L x 9.19"W x 1.32"Th
Shape	Rectangular
Nonstick Coating	Yes
Dishwasher Safe	Yes

9. WARRANTY AND SUPPORT

The GVODE Waffle Plates come with a Limited 1-Year Warranty. For warranty claims, technical support, or any product-related inquiries, please contact GVODE customer service through the retailer's platform or the official GVODE website.

© 2025 GVODE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0722KJ8TT>

More documents and user manuals: <https://manuals.plus/>